



Electrical installation instructions

**Danfoss Heat Pumps
DHP-L**

Contents

DHP-L 4, 400V 3N	3–5
DHP-L 6, 400V 3N	6–8
DHP-L 8, 400V 3N	9–11
DHP-L 10, 400V 3N.....	12–14
DHP-L 12, 400V 3N.....	15–17
DHP-L 16, 400V 3N.....	18–20
DHP-L 4 SP, 230V 1N	21–23
DHP-L 6 SP, 230V 1N	24–26
DHP-L 8 SP, 230V 1N.....	27–29
DHP-L 10 SP, 230V 1N	30–32
DHP-L 12 SP, 230V 1N	33–35
DHP-L Opti 6, 230V 1N	36–39
DHP-L Opti 8, 230V 1N	40–43
DHP-L Opti 10, 230V 1N.....	44–47
DHP-L Opti 12, 230V 1N.....	48–51
DHP-L Opti 6, 400V 3N	52–55
DHP-L Opti 8, 400V 3N	56–59
DHP-L Opti 10, 400V 3N.....	60–63
DHP-L Opti 12, 400V 3N.....	64–67
DHP-L Opti 16, 400V 3N.....	68–71

Electrical installation

Danfoss heat pumps are factory-wired internally. The leads that are to be connected are the mains supply (5-wire DPH), outdoor temperature sensor and room sensors (if any).


- All electrical wiring must be carried out by a certified electrician in compliance with local and national codes and regulations. When in doubt, contact the local electricity distributor.
- The mains lead is passed through the top of the unit.
- Remove the front panel to get access to the terminal blocks. Connect the mains lead to the terminal block according to the accompanying schematic diagram.
- The connection of the heat pump to the mains supply must be hard-wired and a multi-pole switch (safety switch) must be installed in the power supply line to the unit.


WARNING! To disconnect the power supply to the heat pump, the safety switch must be switched off.


NOTE! The cables to the outdoor and indoor sensors carry low voltage. Interference from surrounding cables may affect these and cause incorrect information to be sent to the control unit. It is therefore vitally important that careful consideration be given to positioning of cables. Low-voltage cables must be kept well separated from high-voltage cables. It is important that low-voltage cables are run parallel to high-voltage cables and separated by a distance of at least 25 cm for cable lengths up to 100 m. For longer cable lengths, the distance between cables should be increased.


Important information


Before switching on the power supply to the heat pump, you must ensure that the heating system, chilled water line and hot water heater are filled and vented. Otherwise, the circulation pumps can be severely damaged.

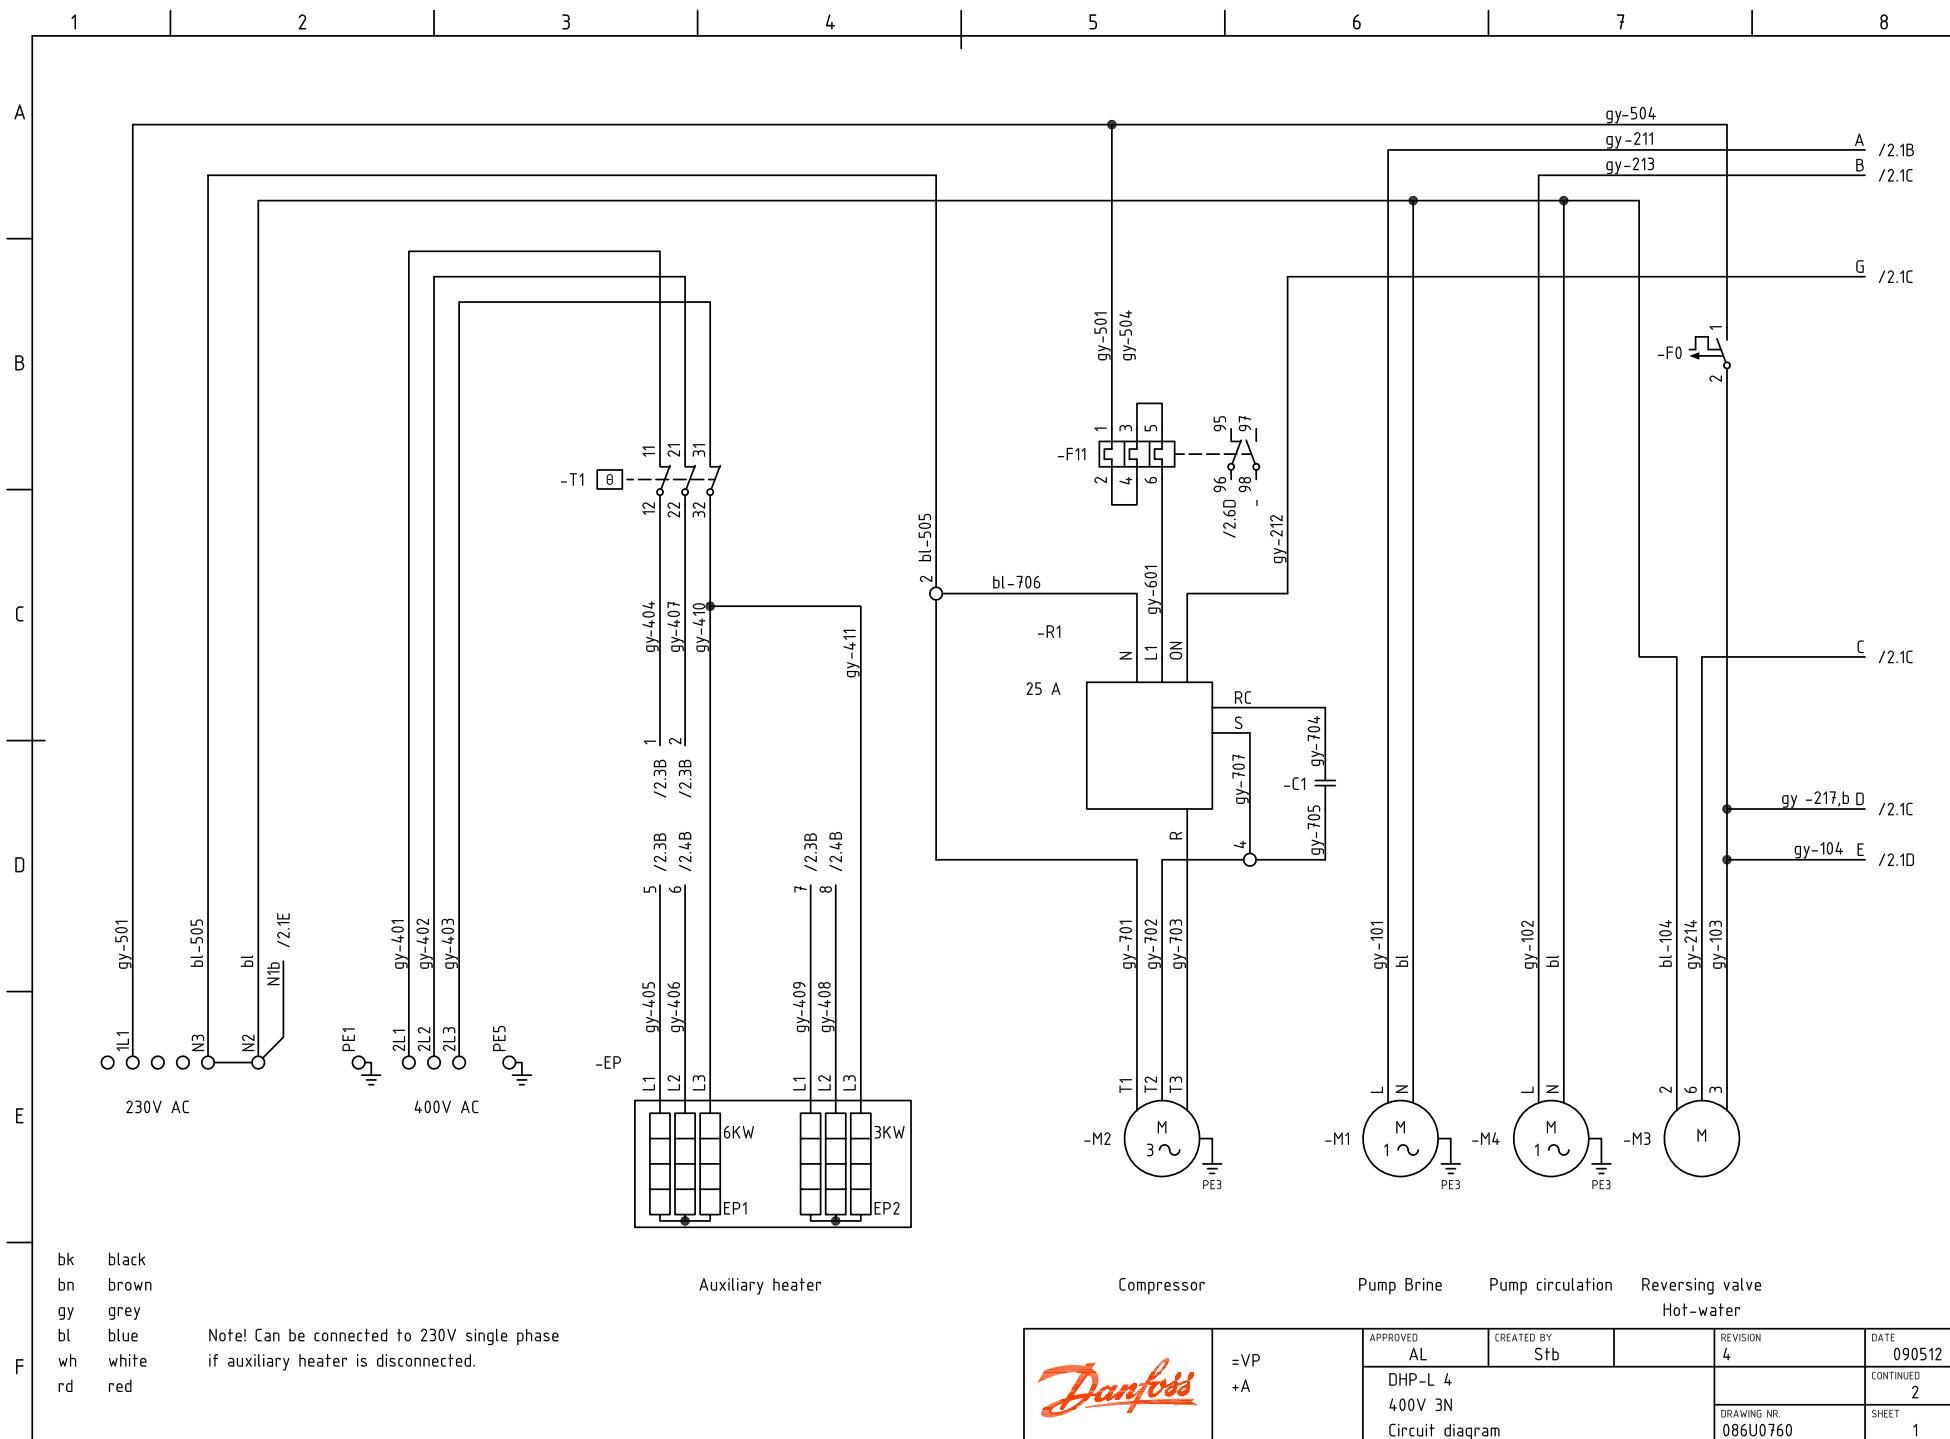


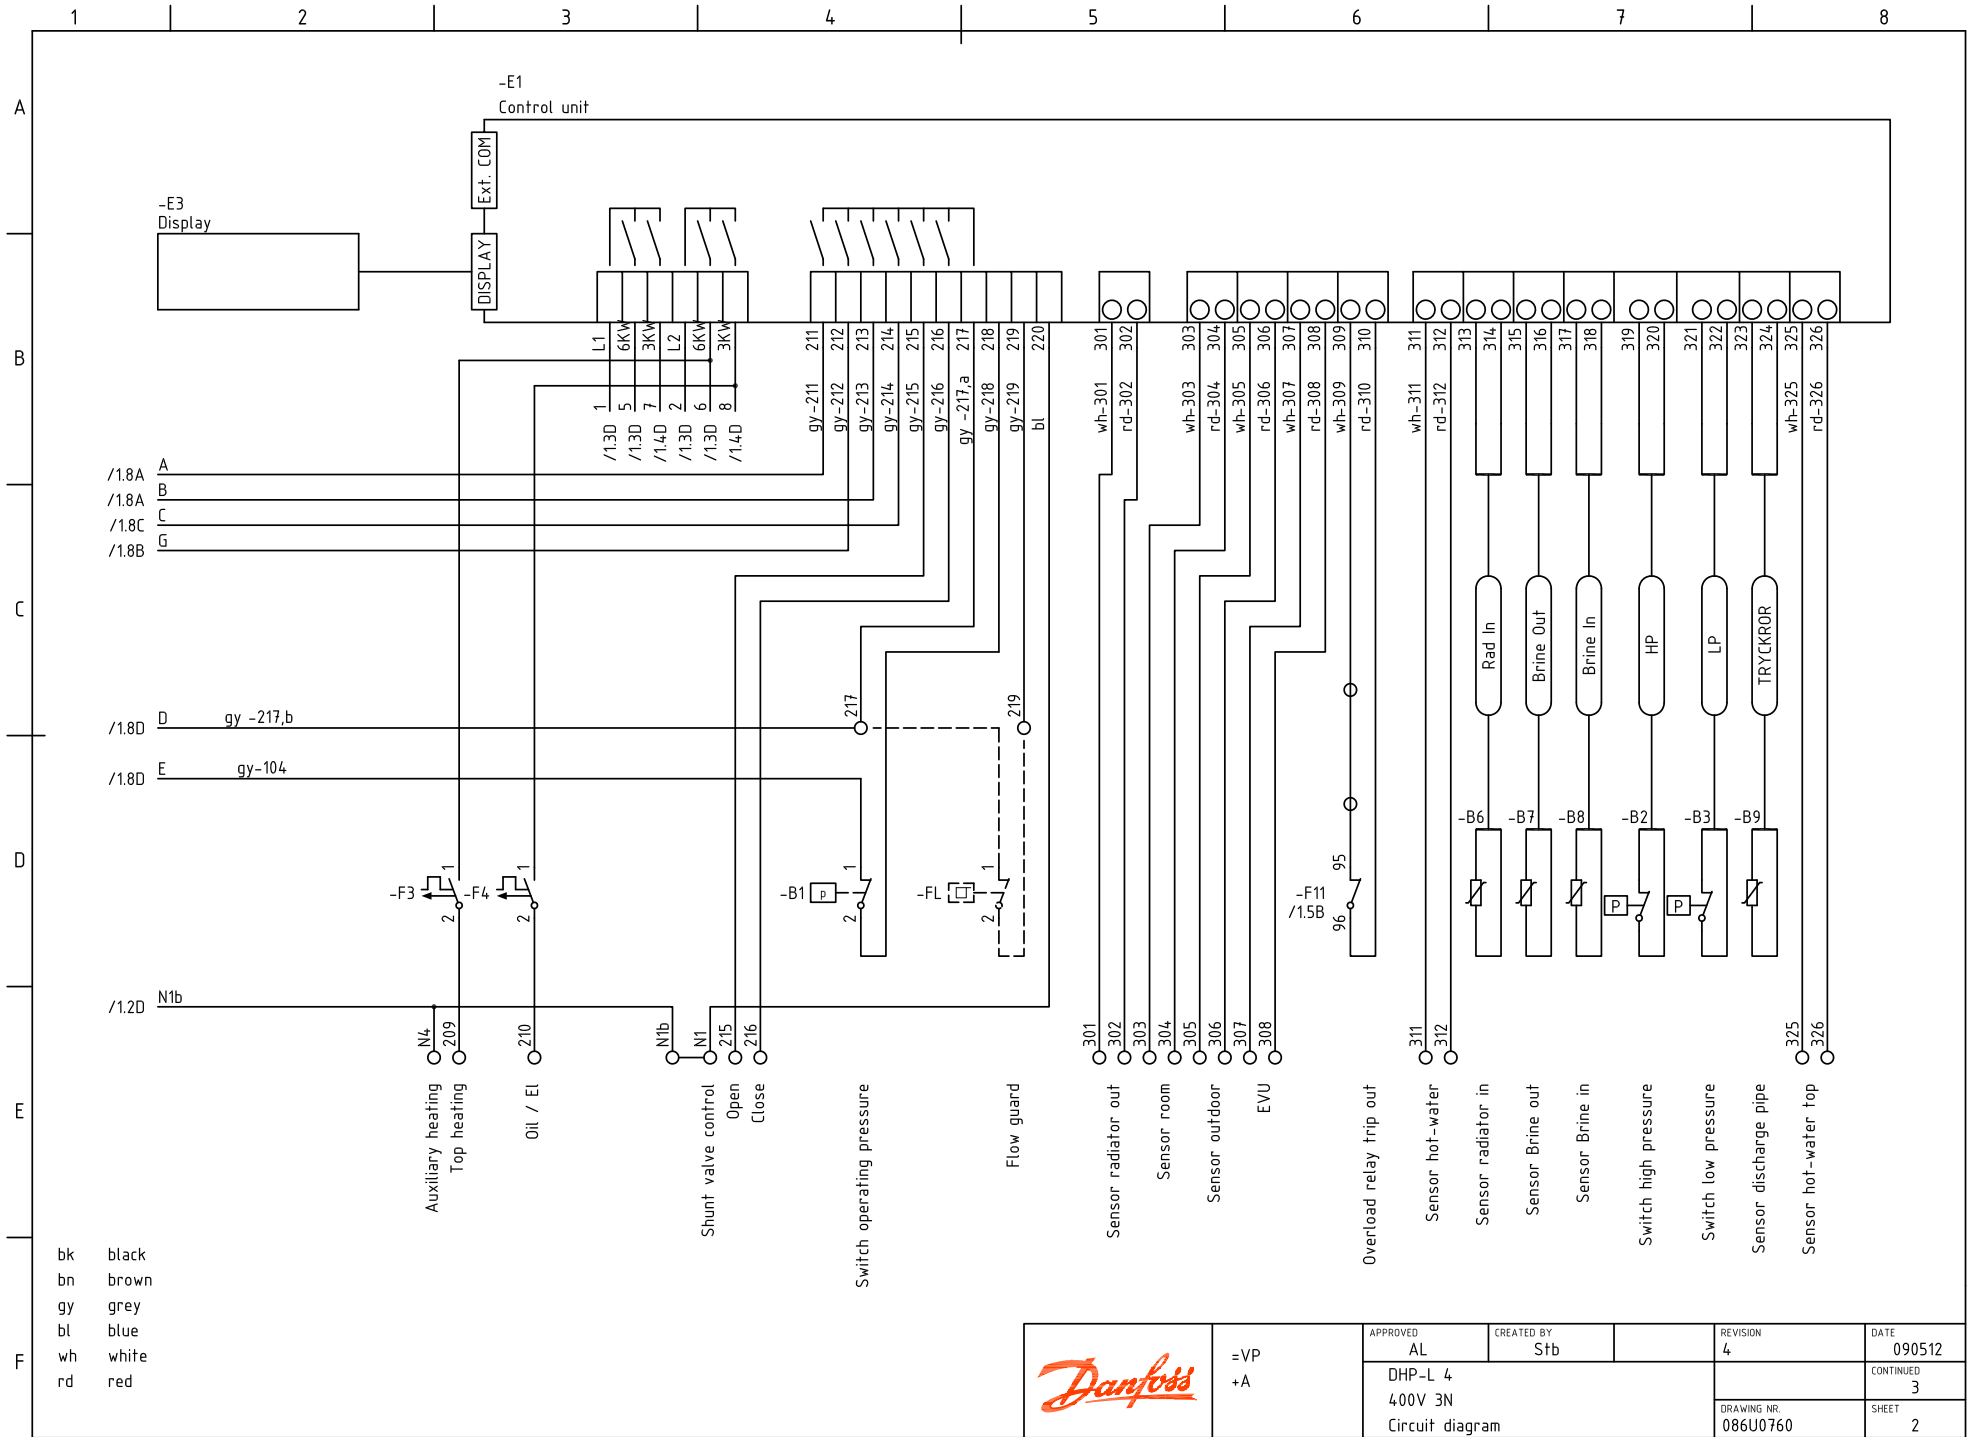


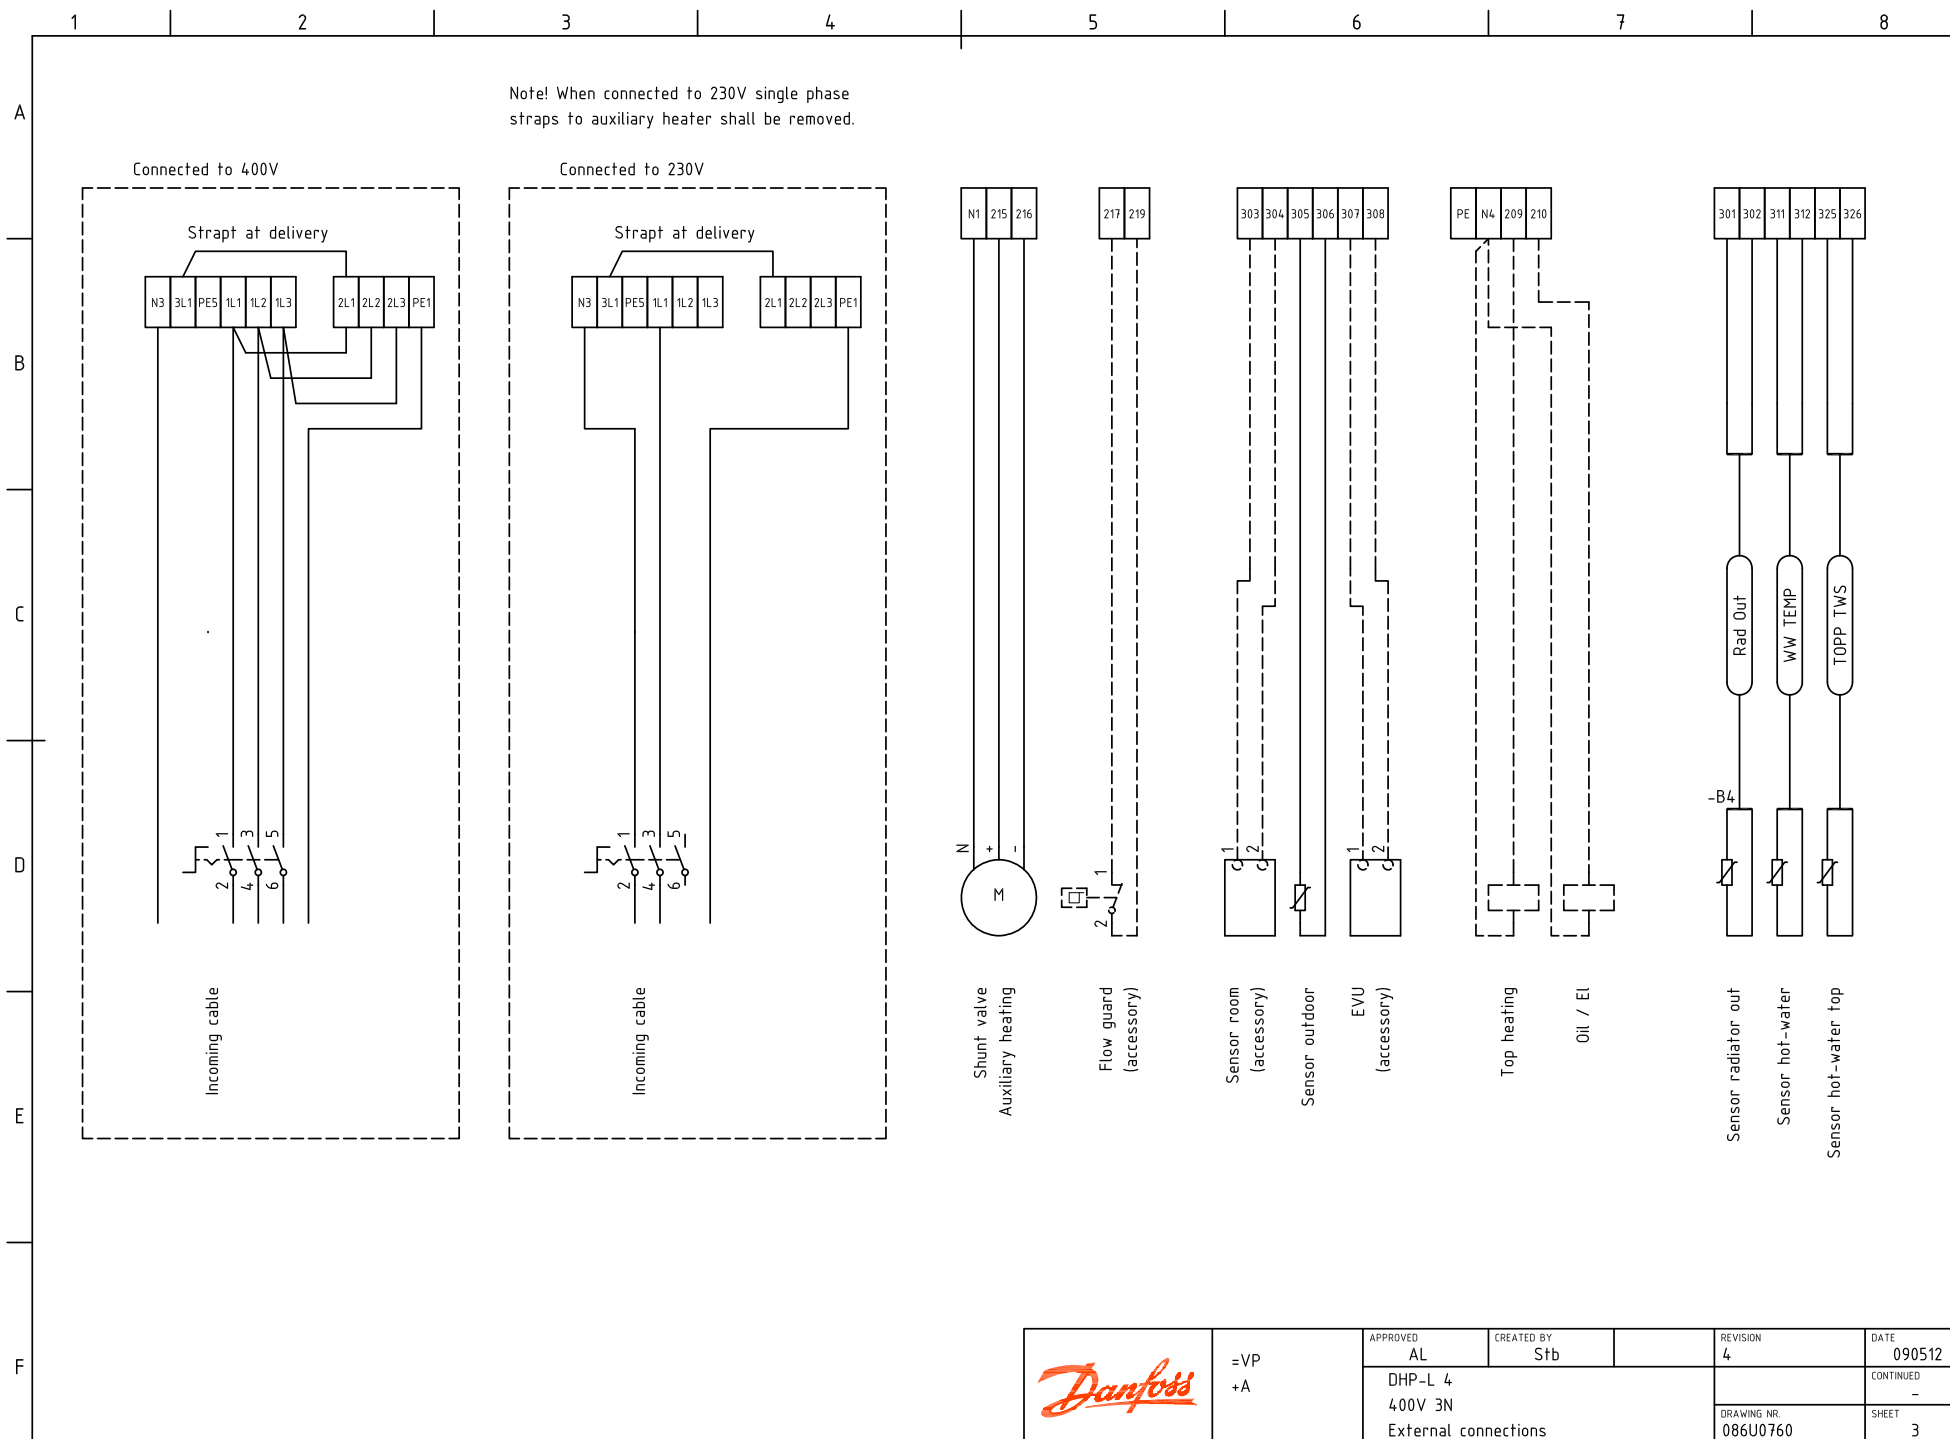

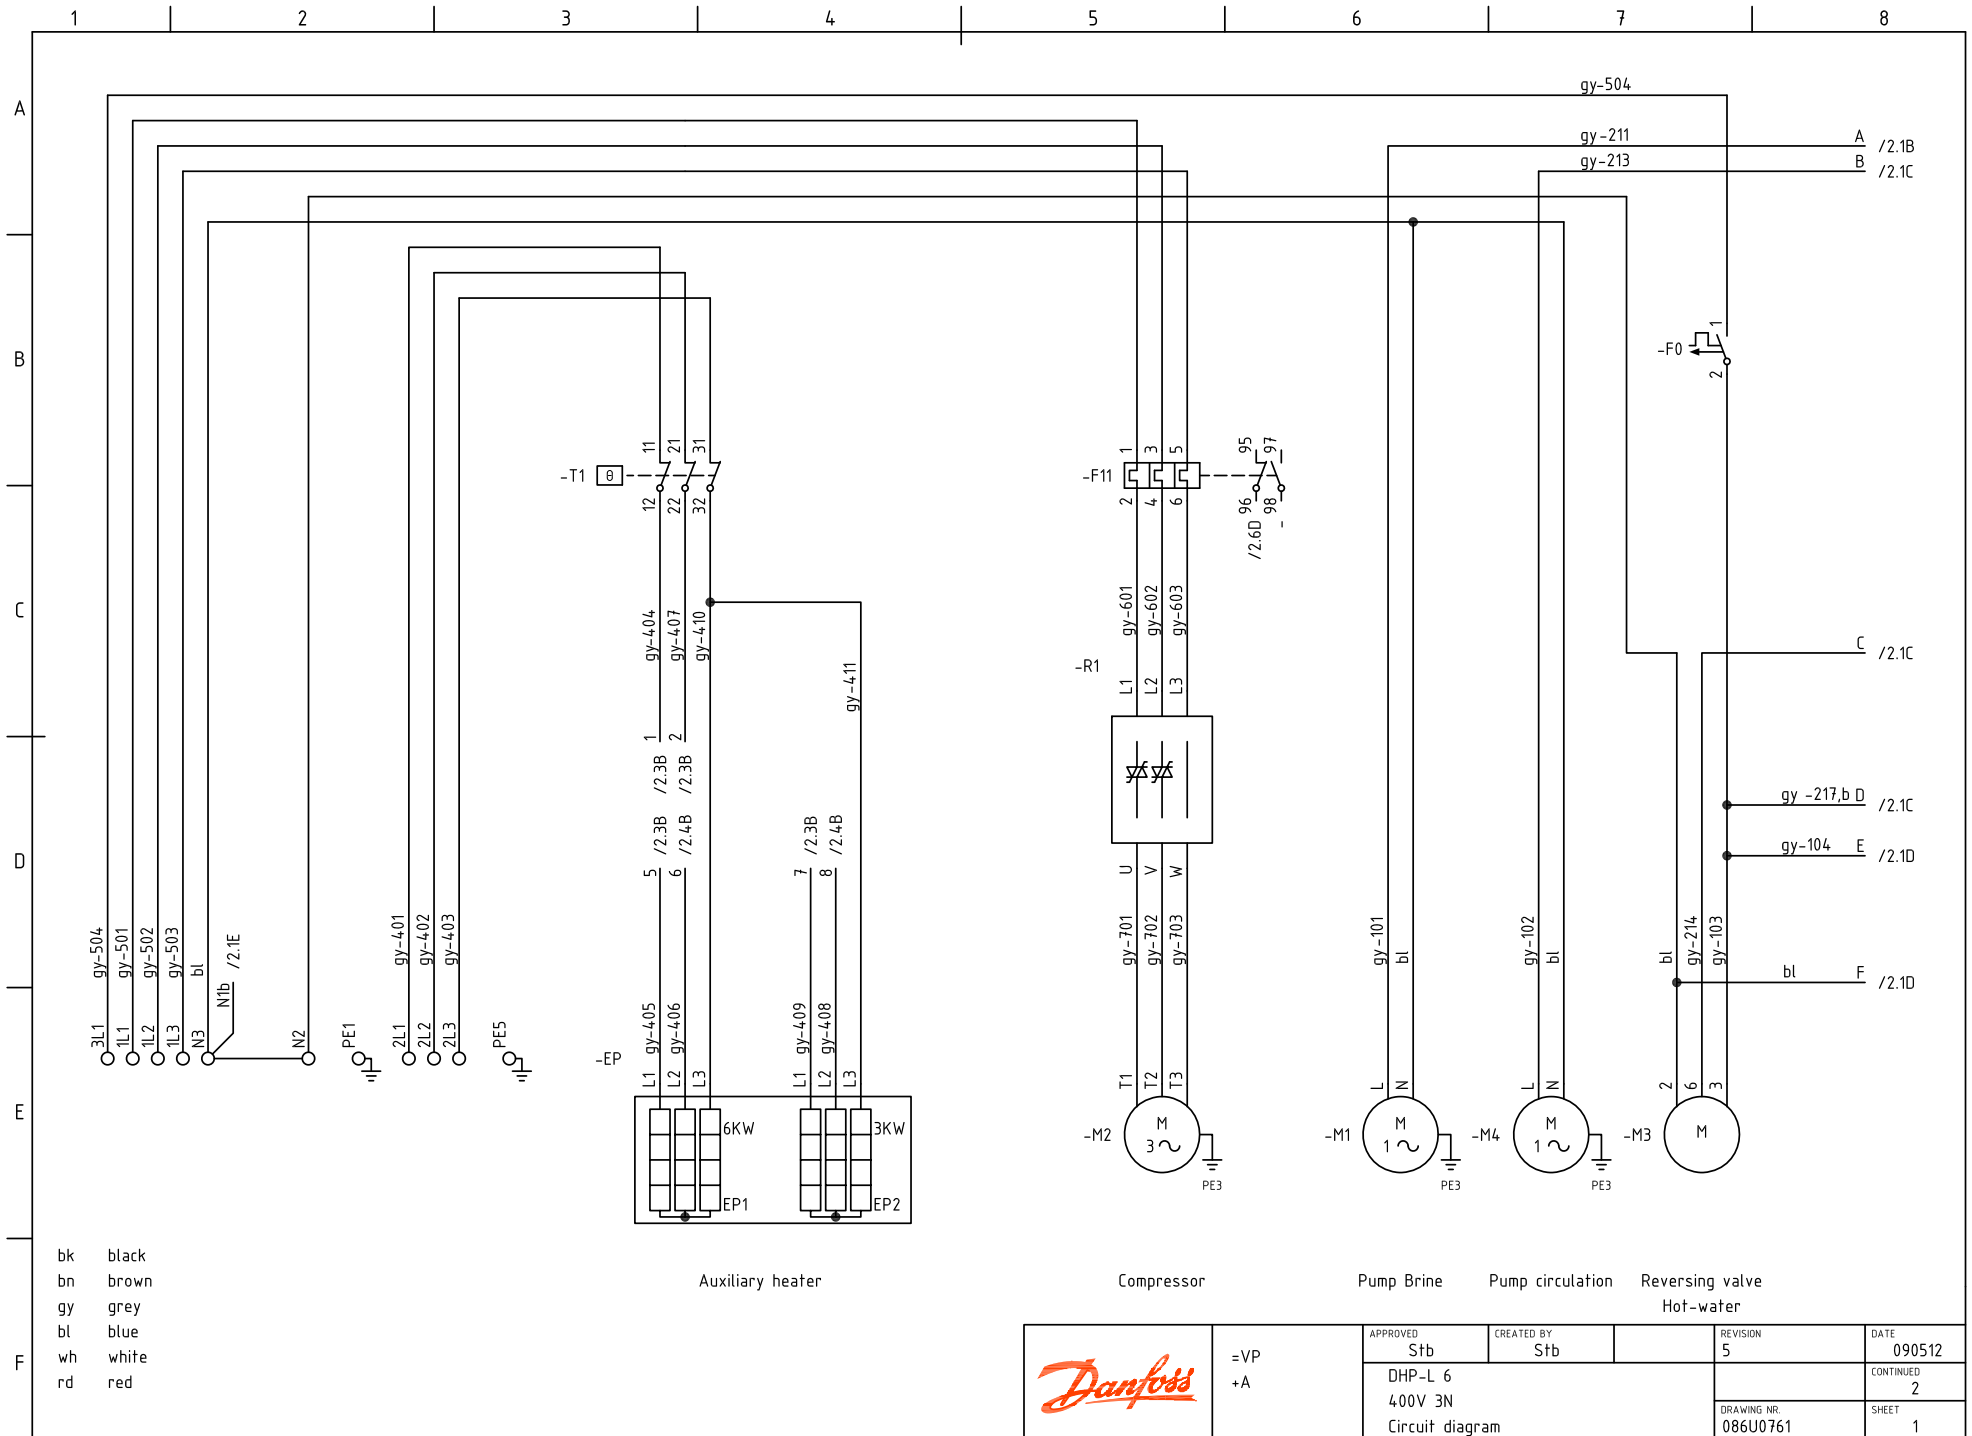


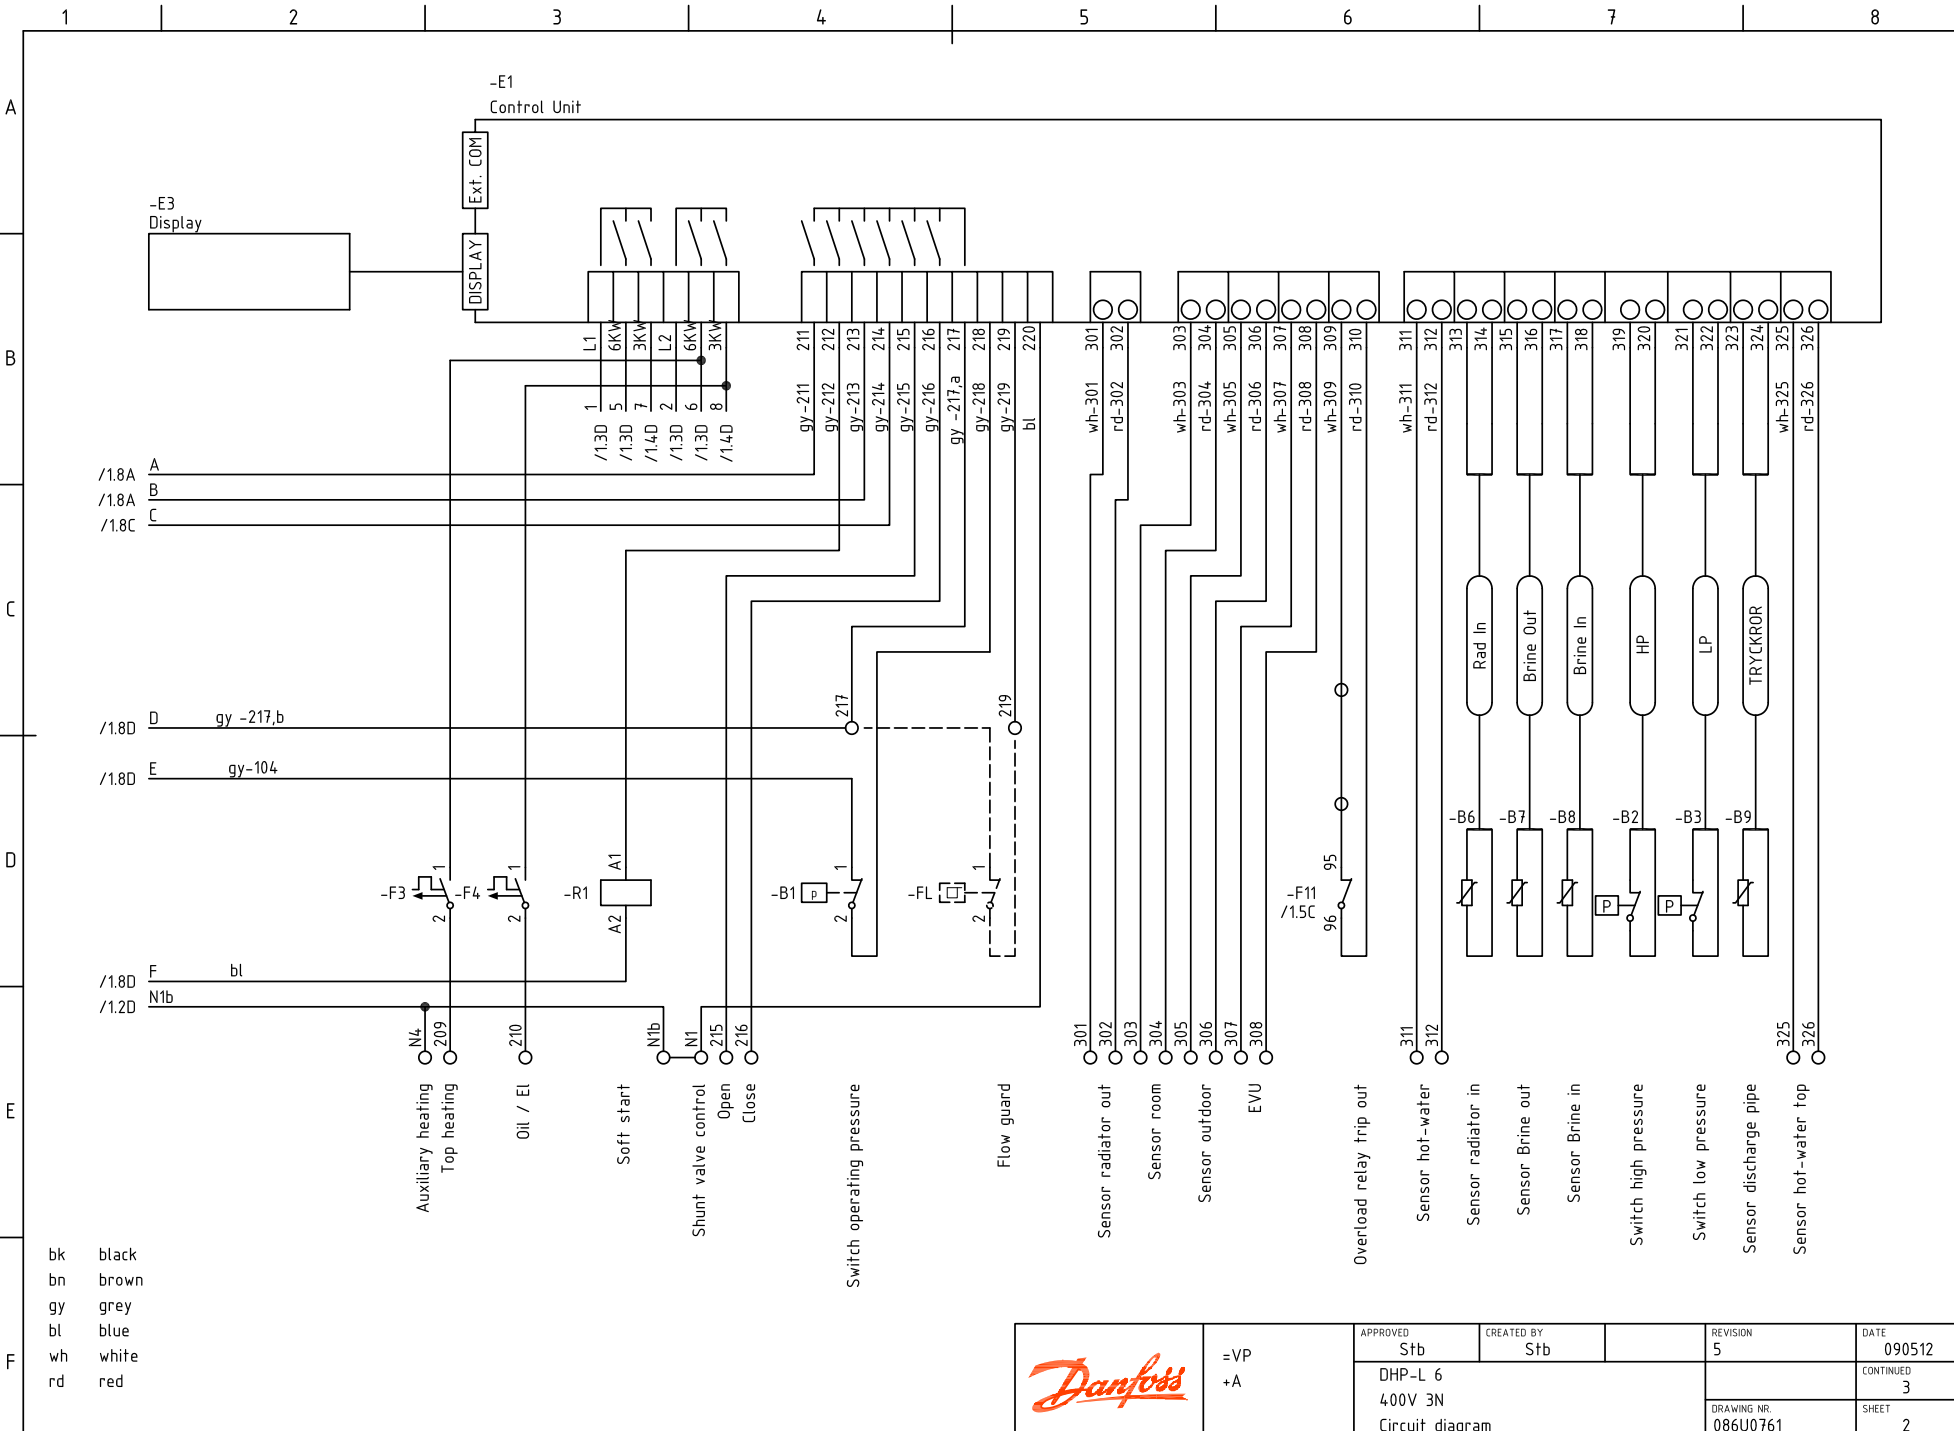


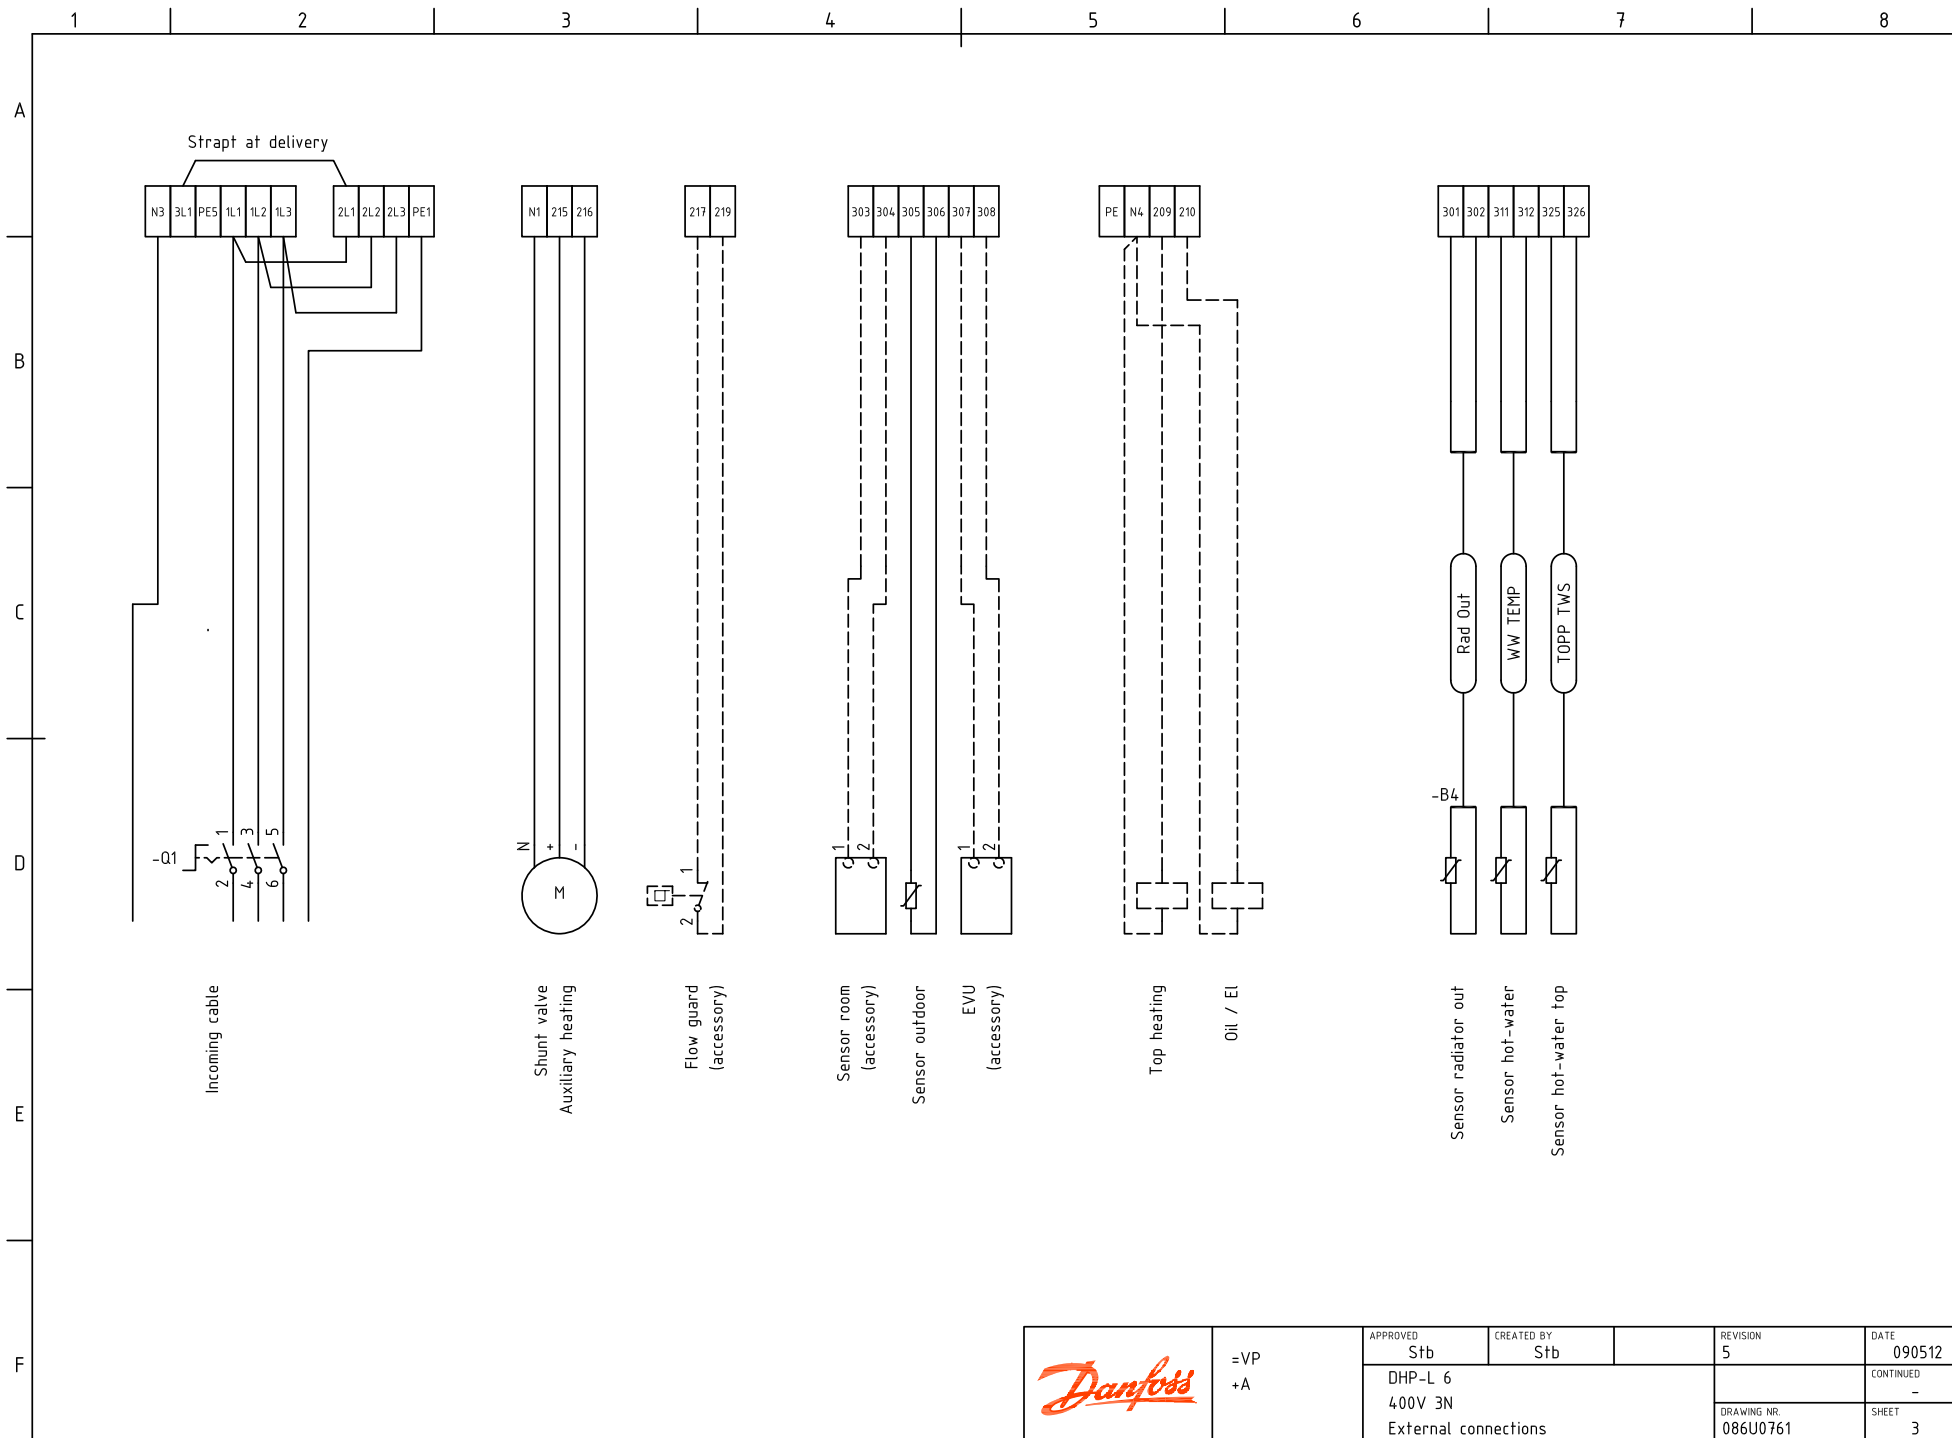


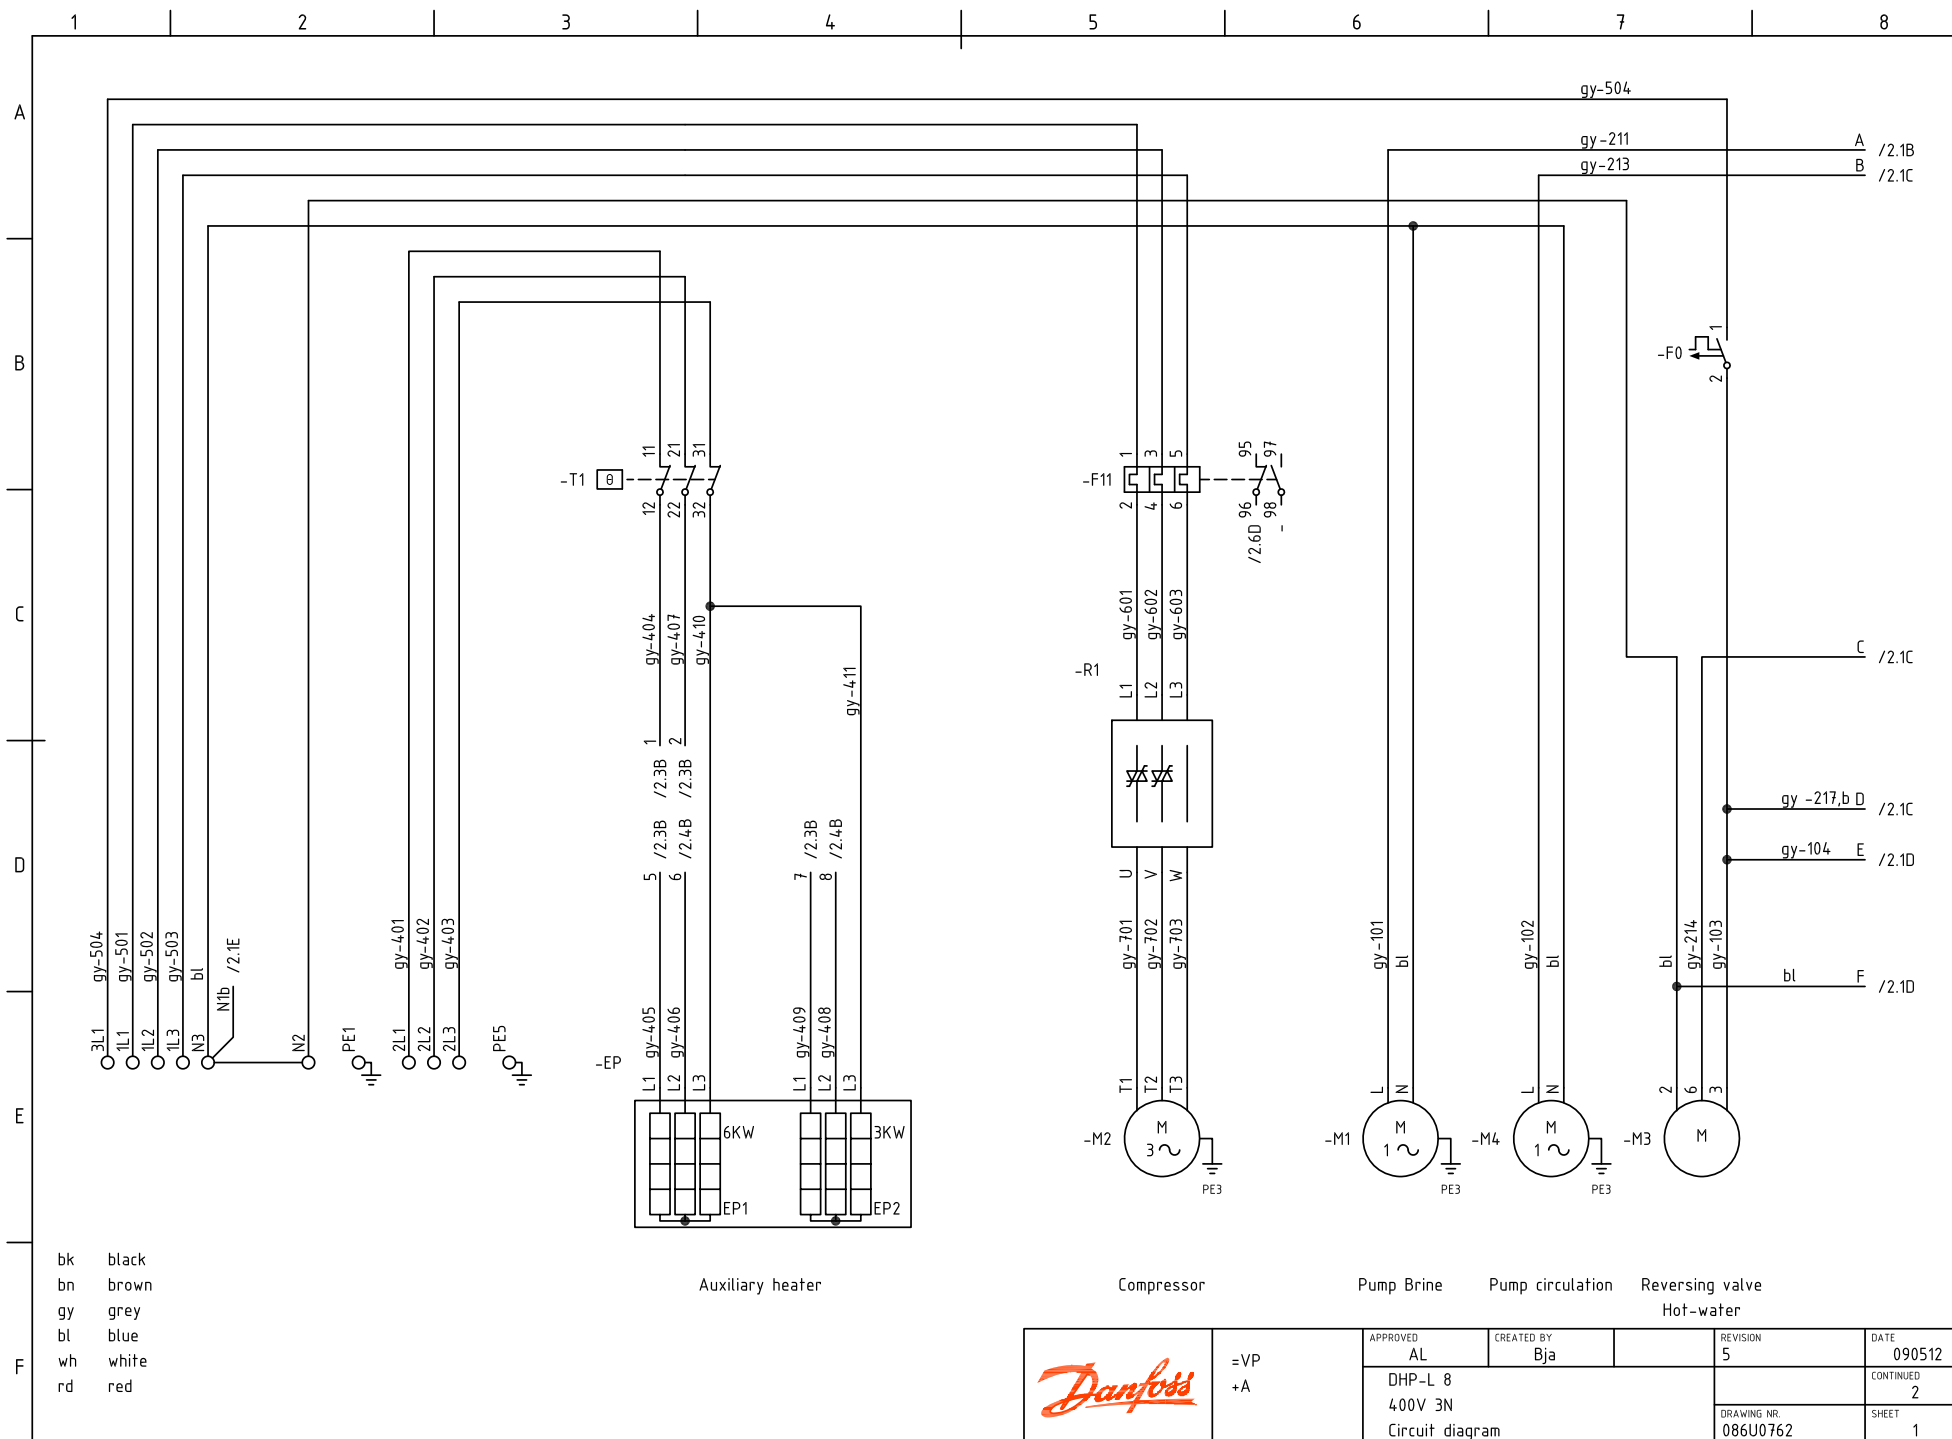





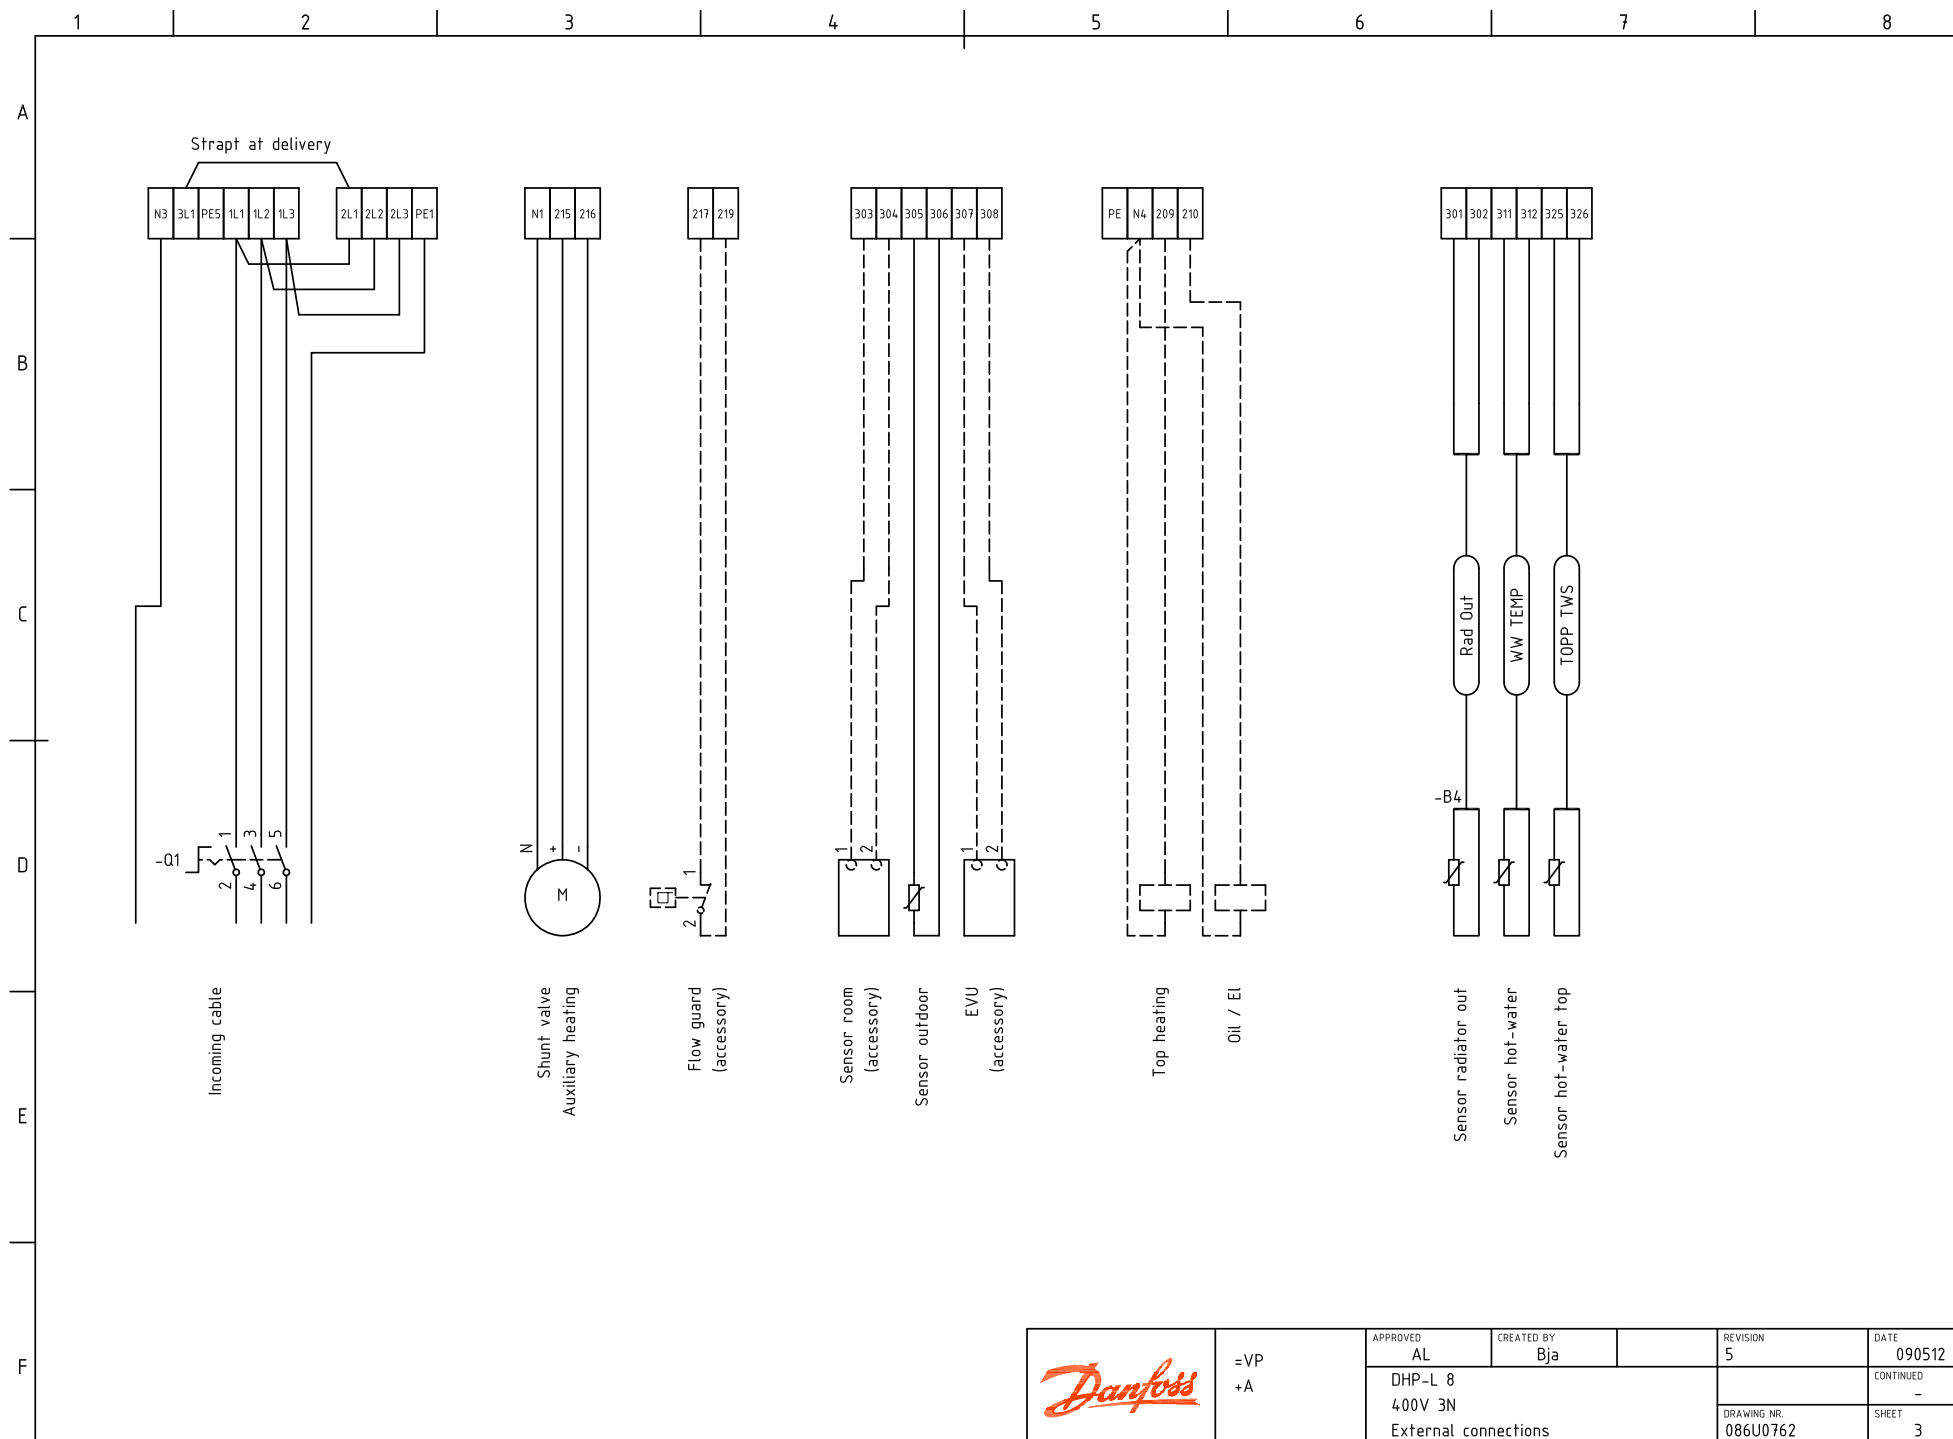

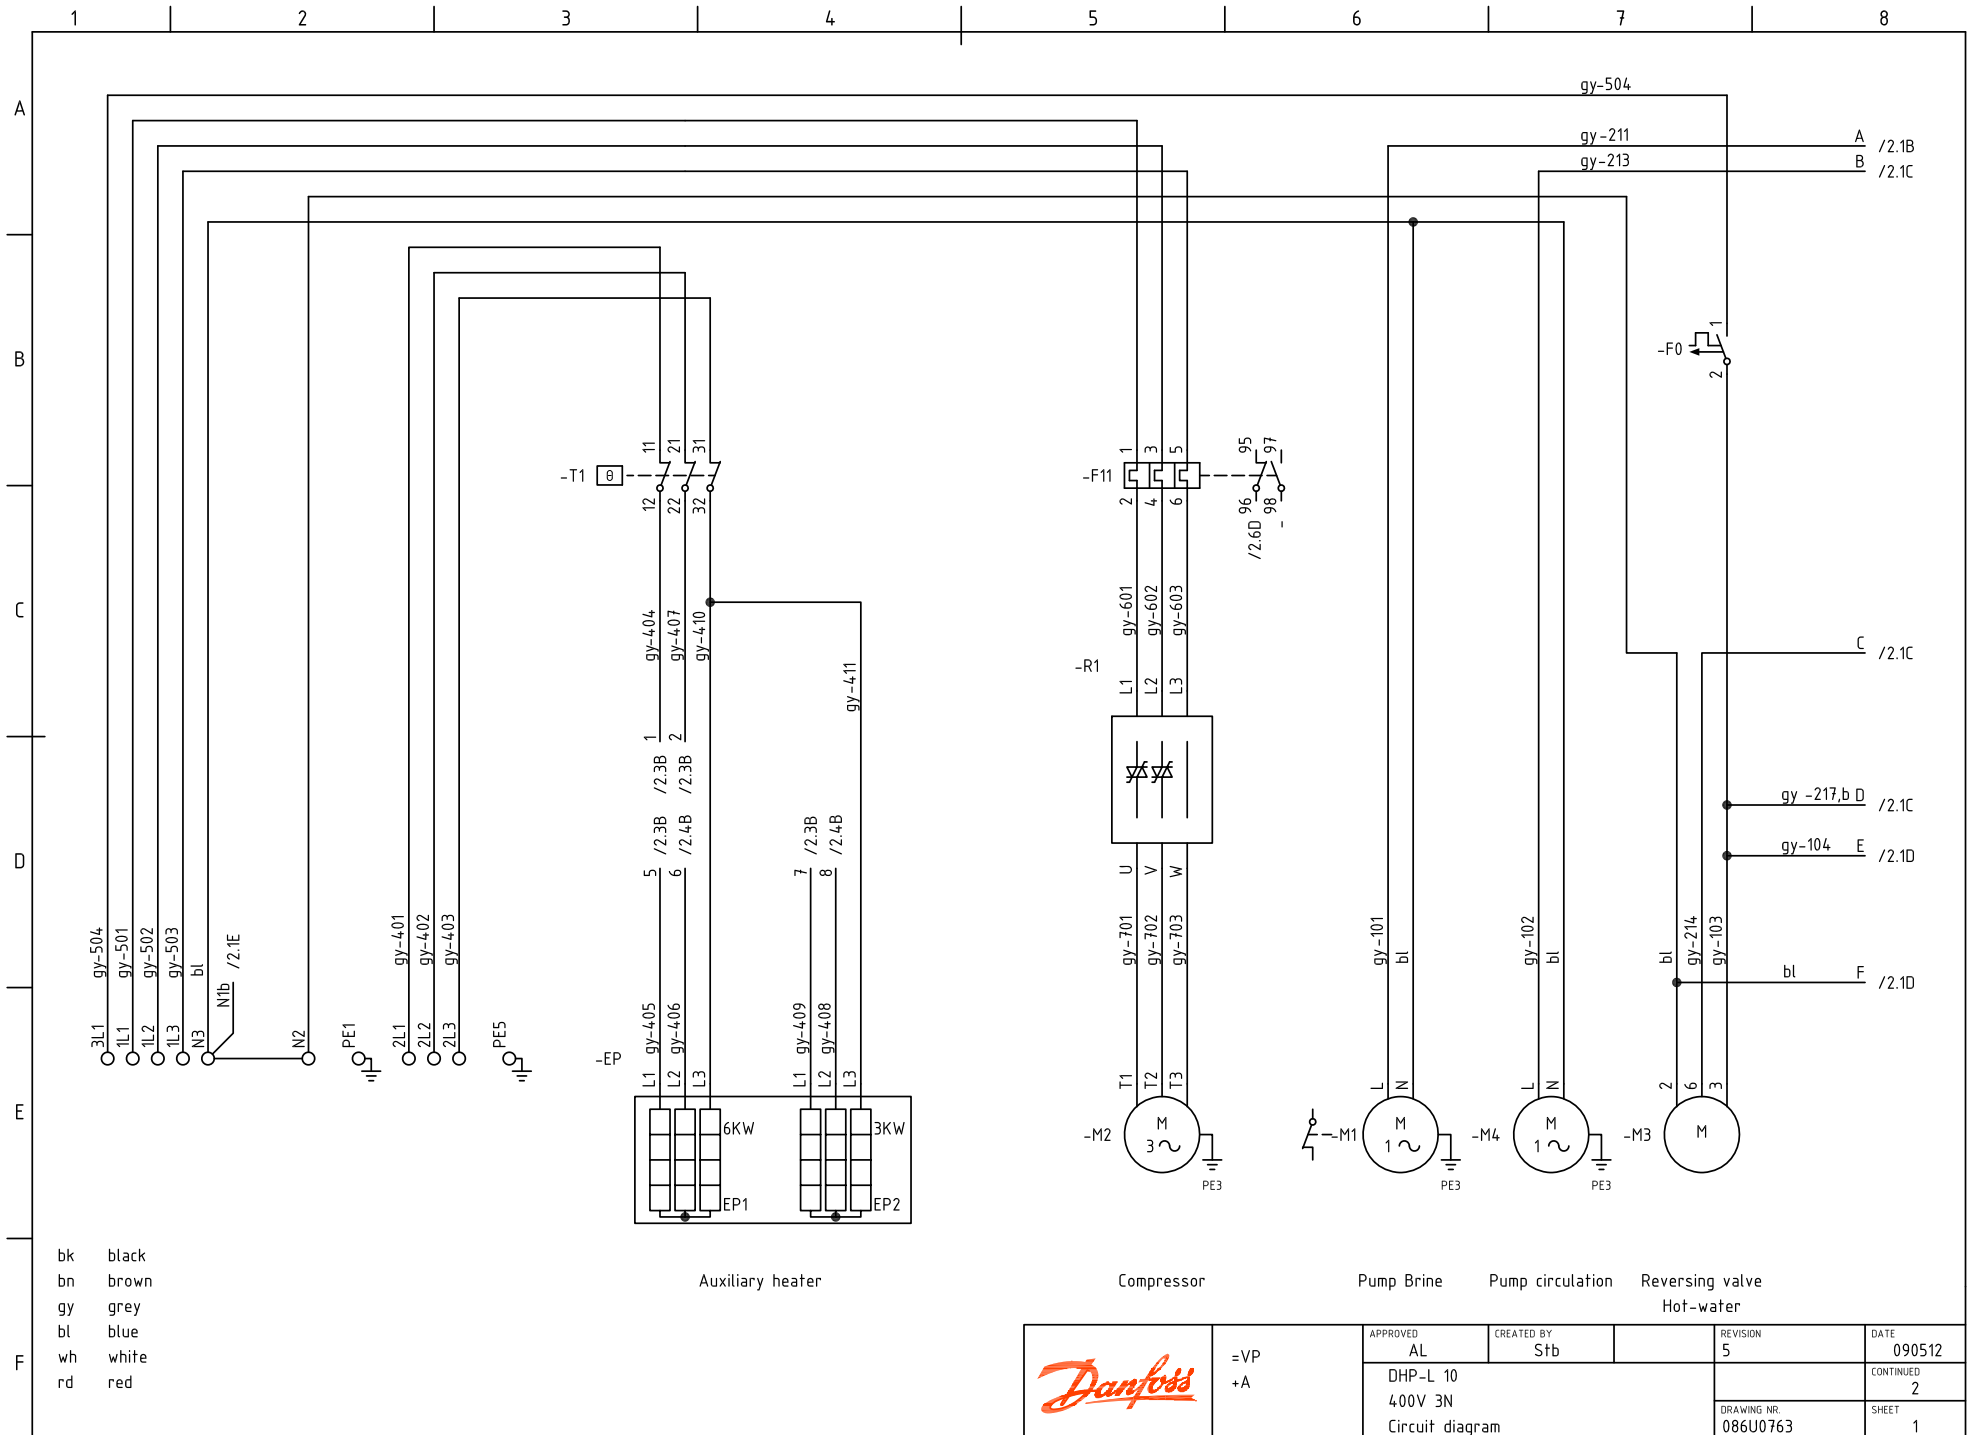


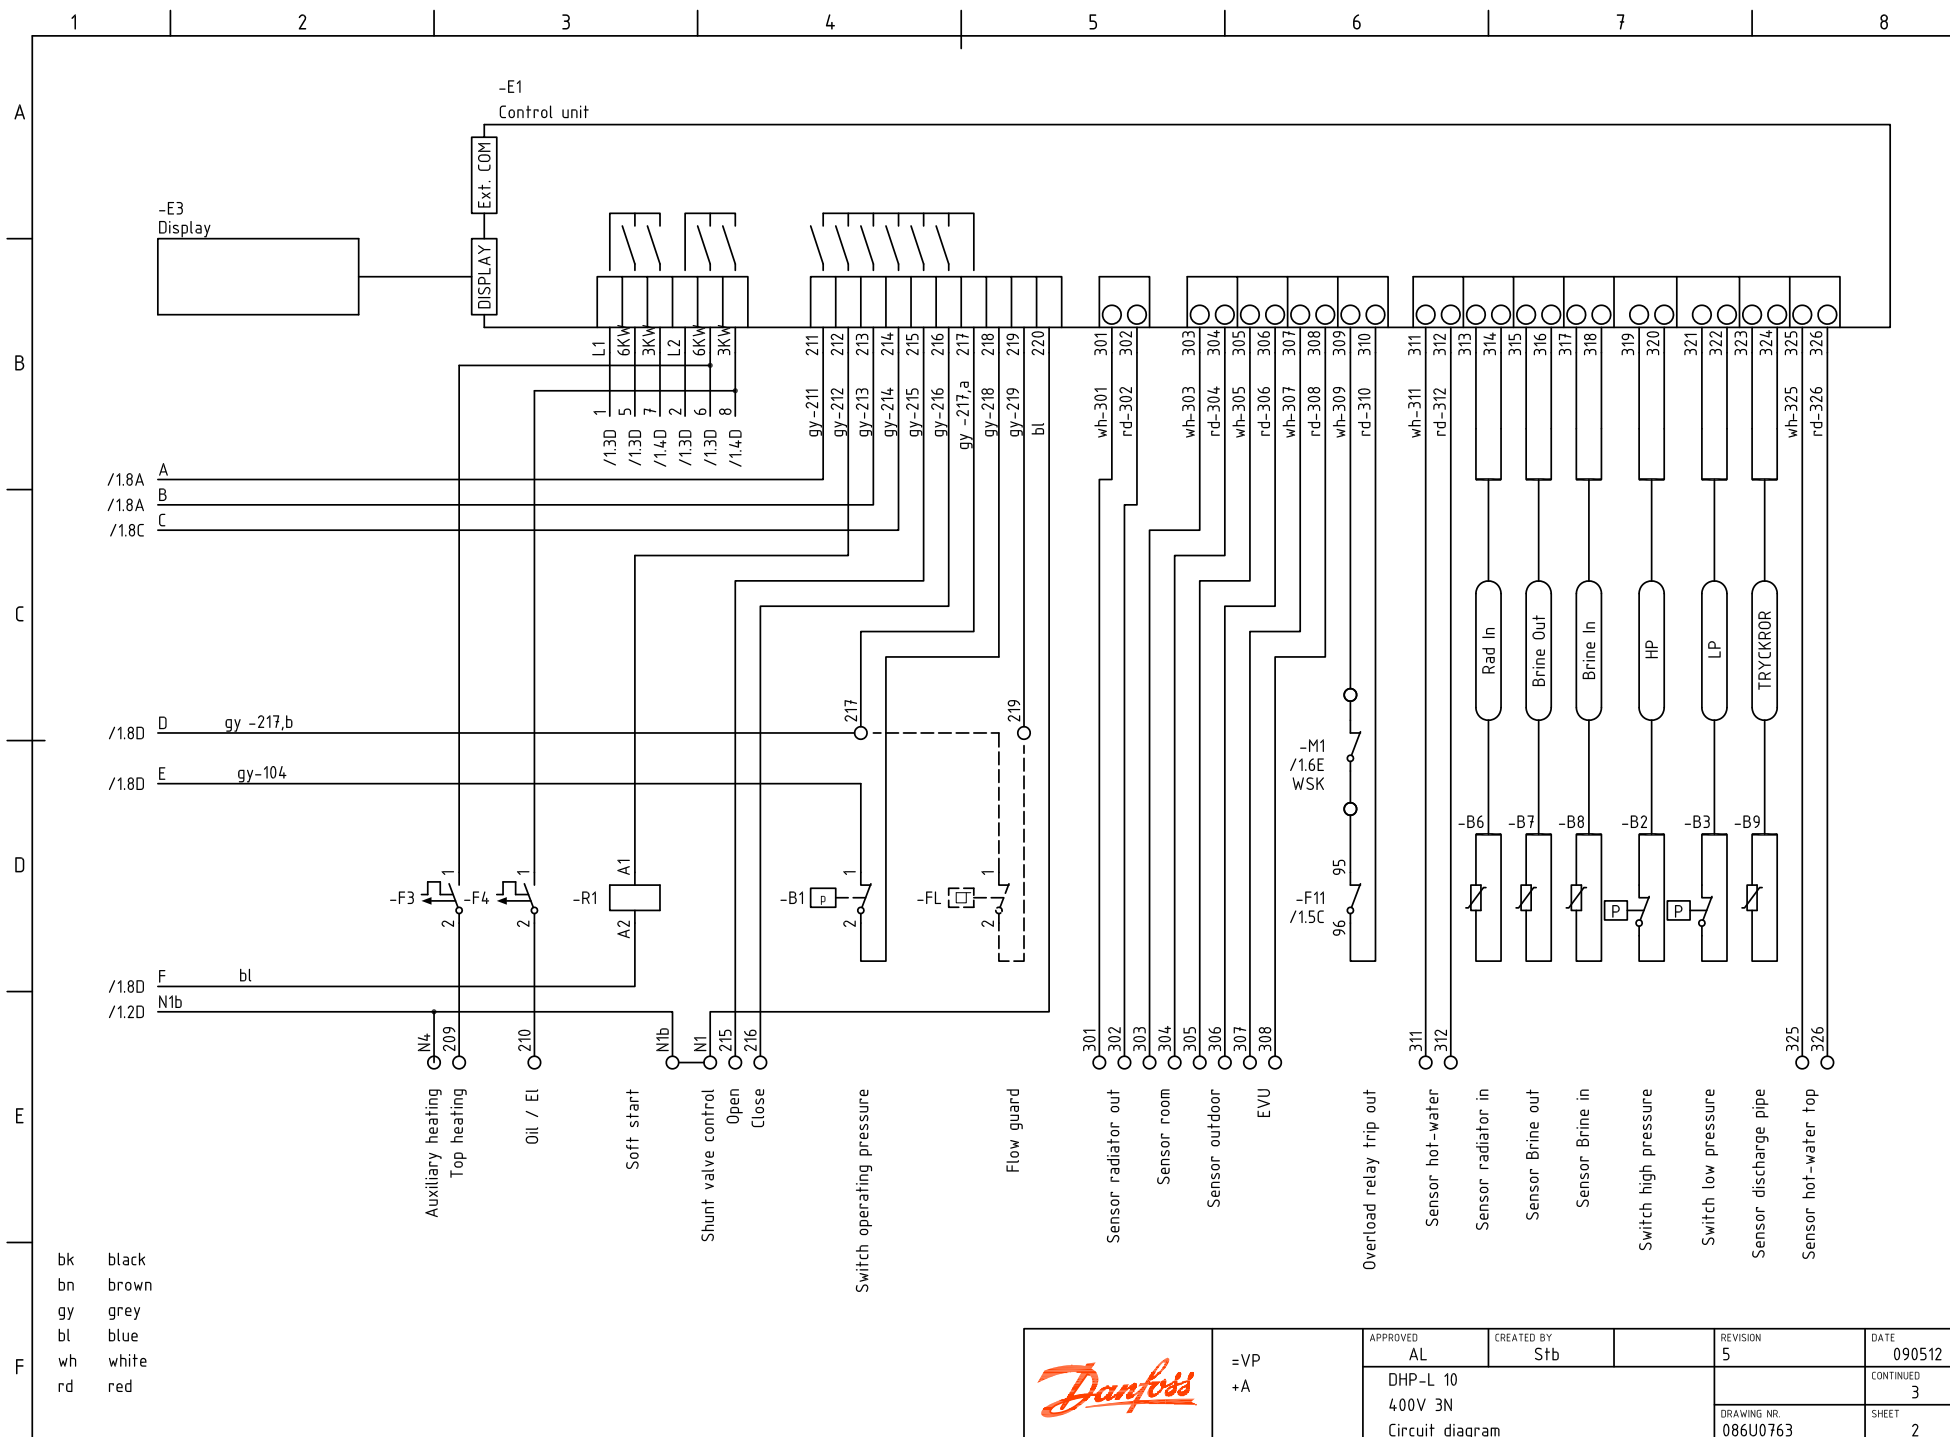

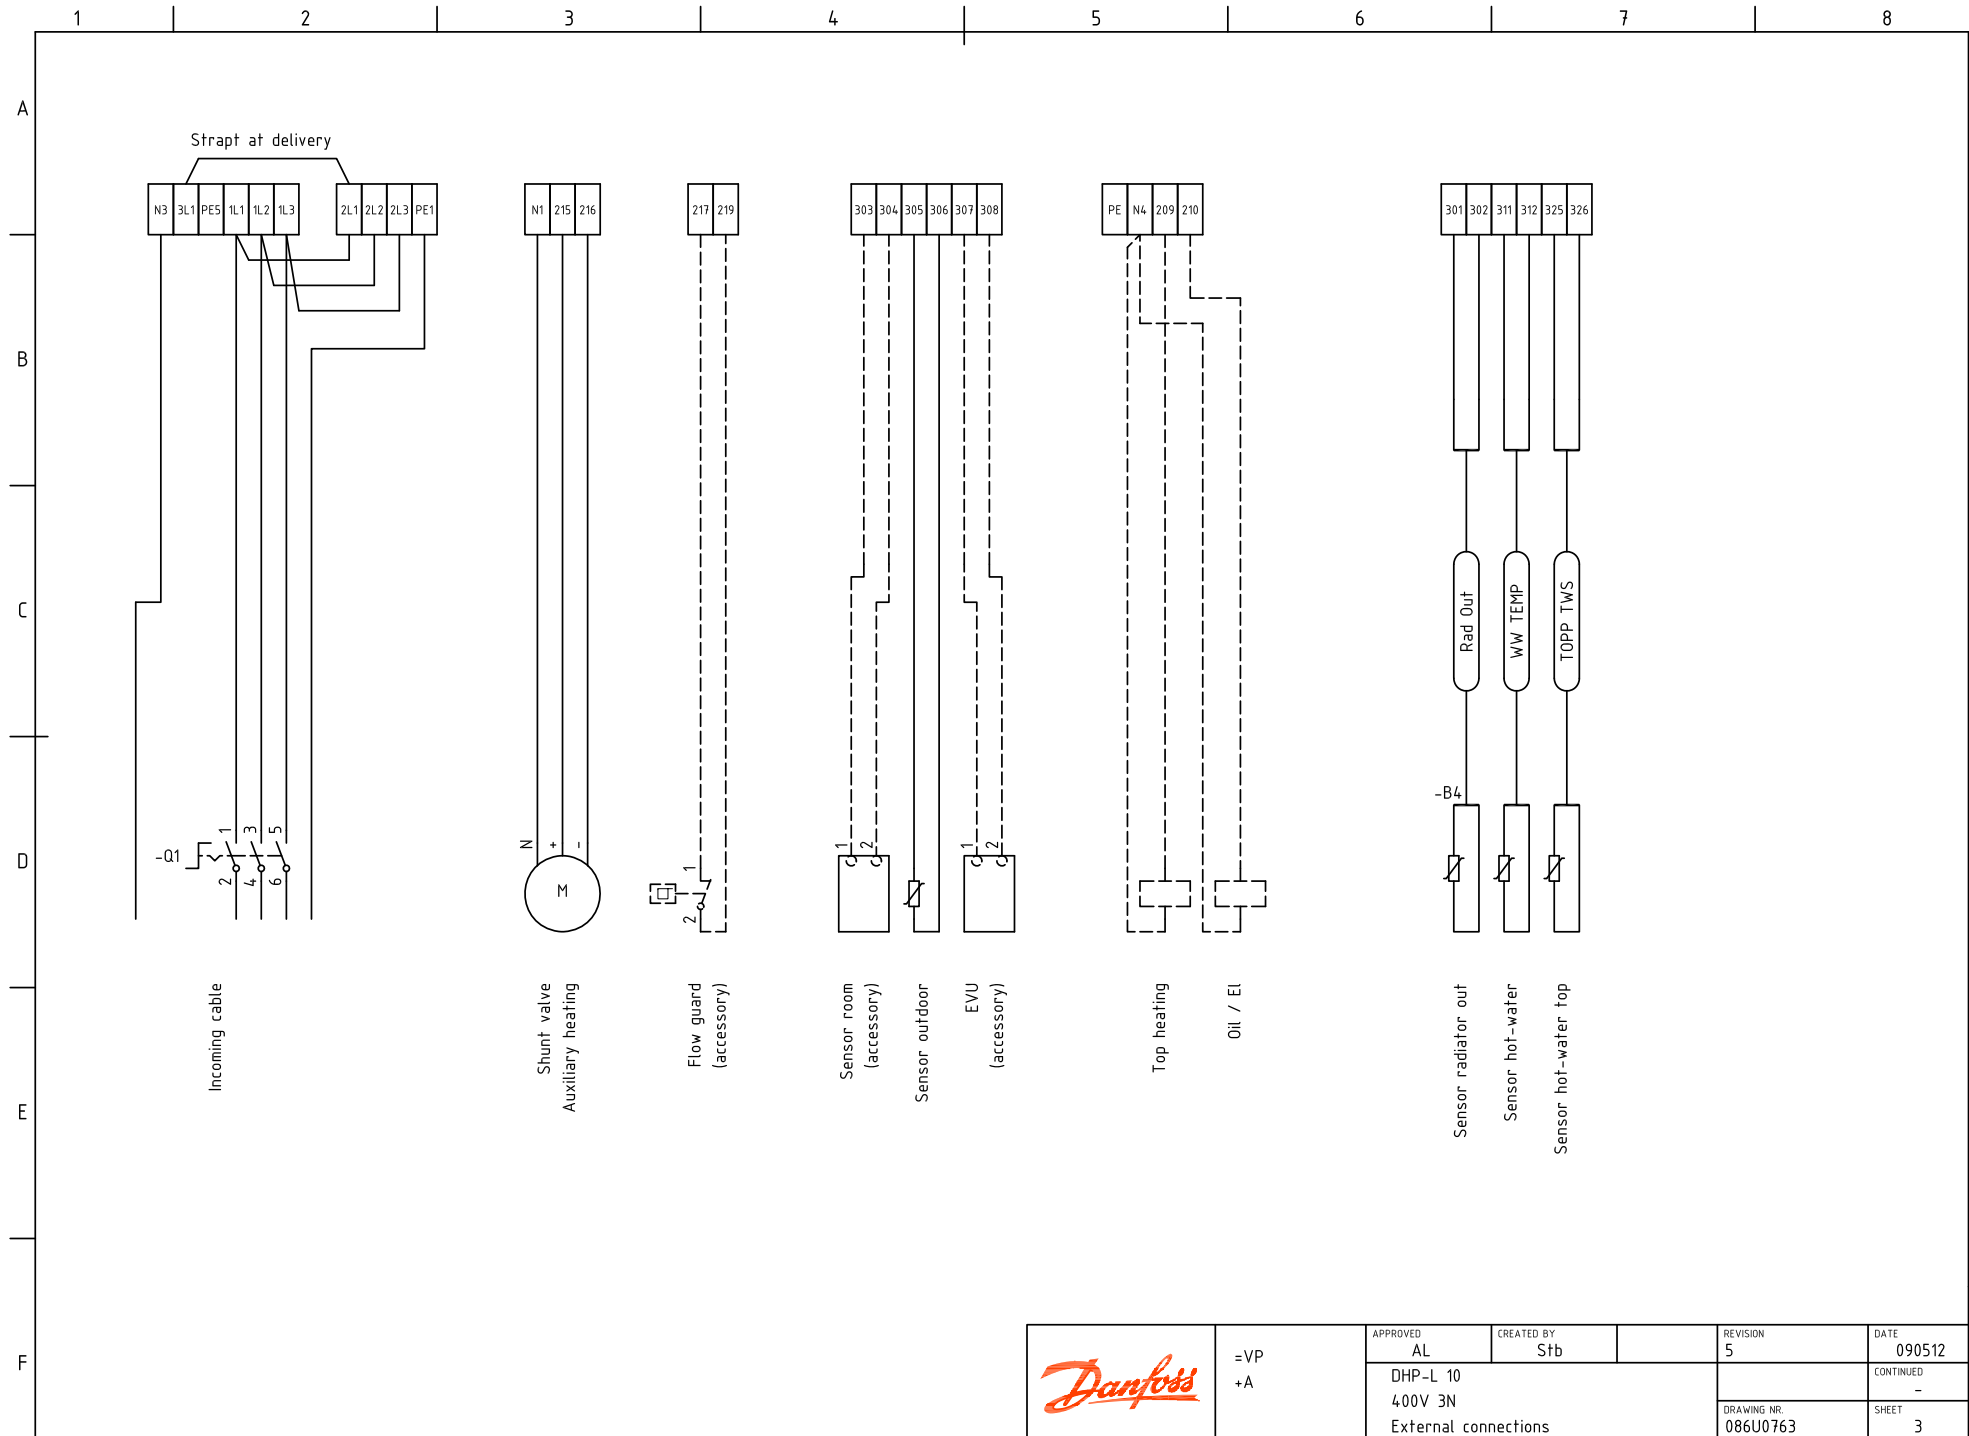

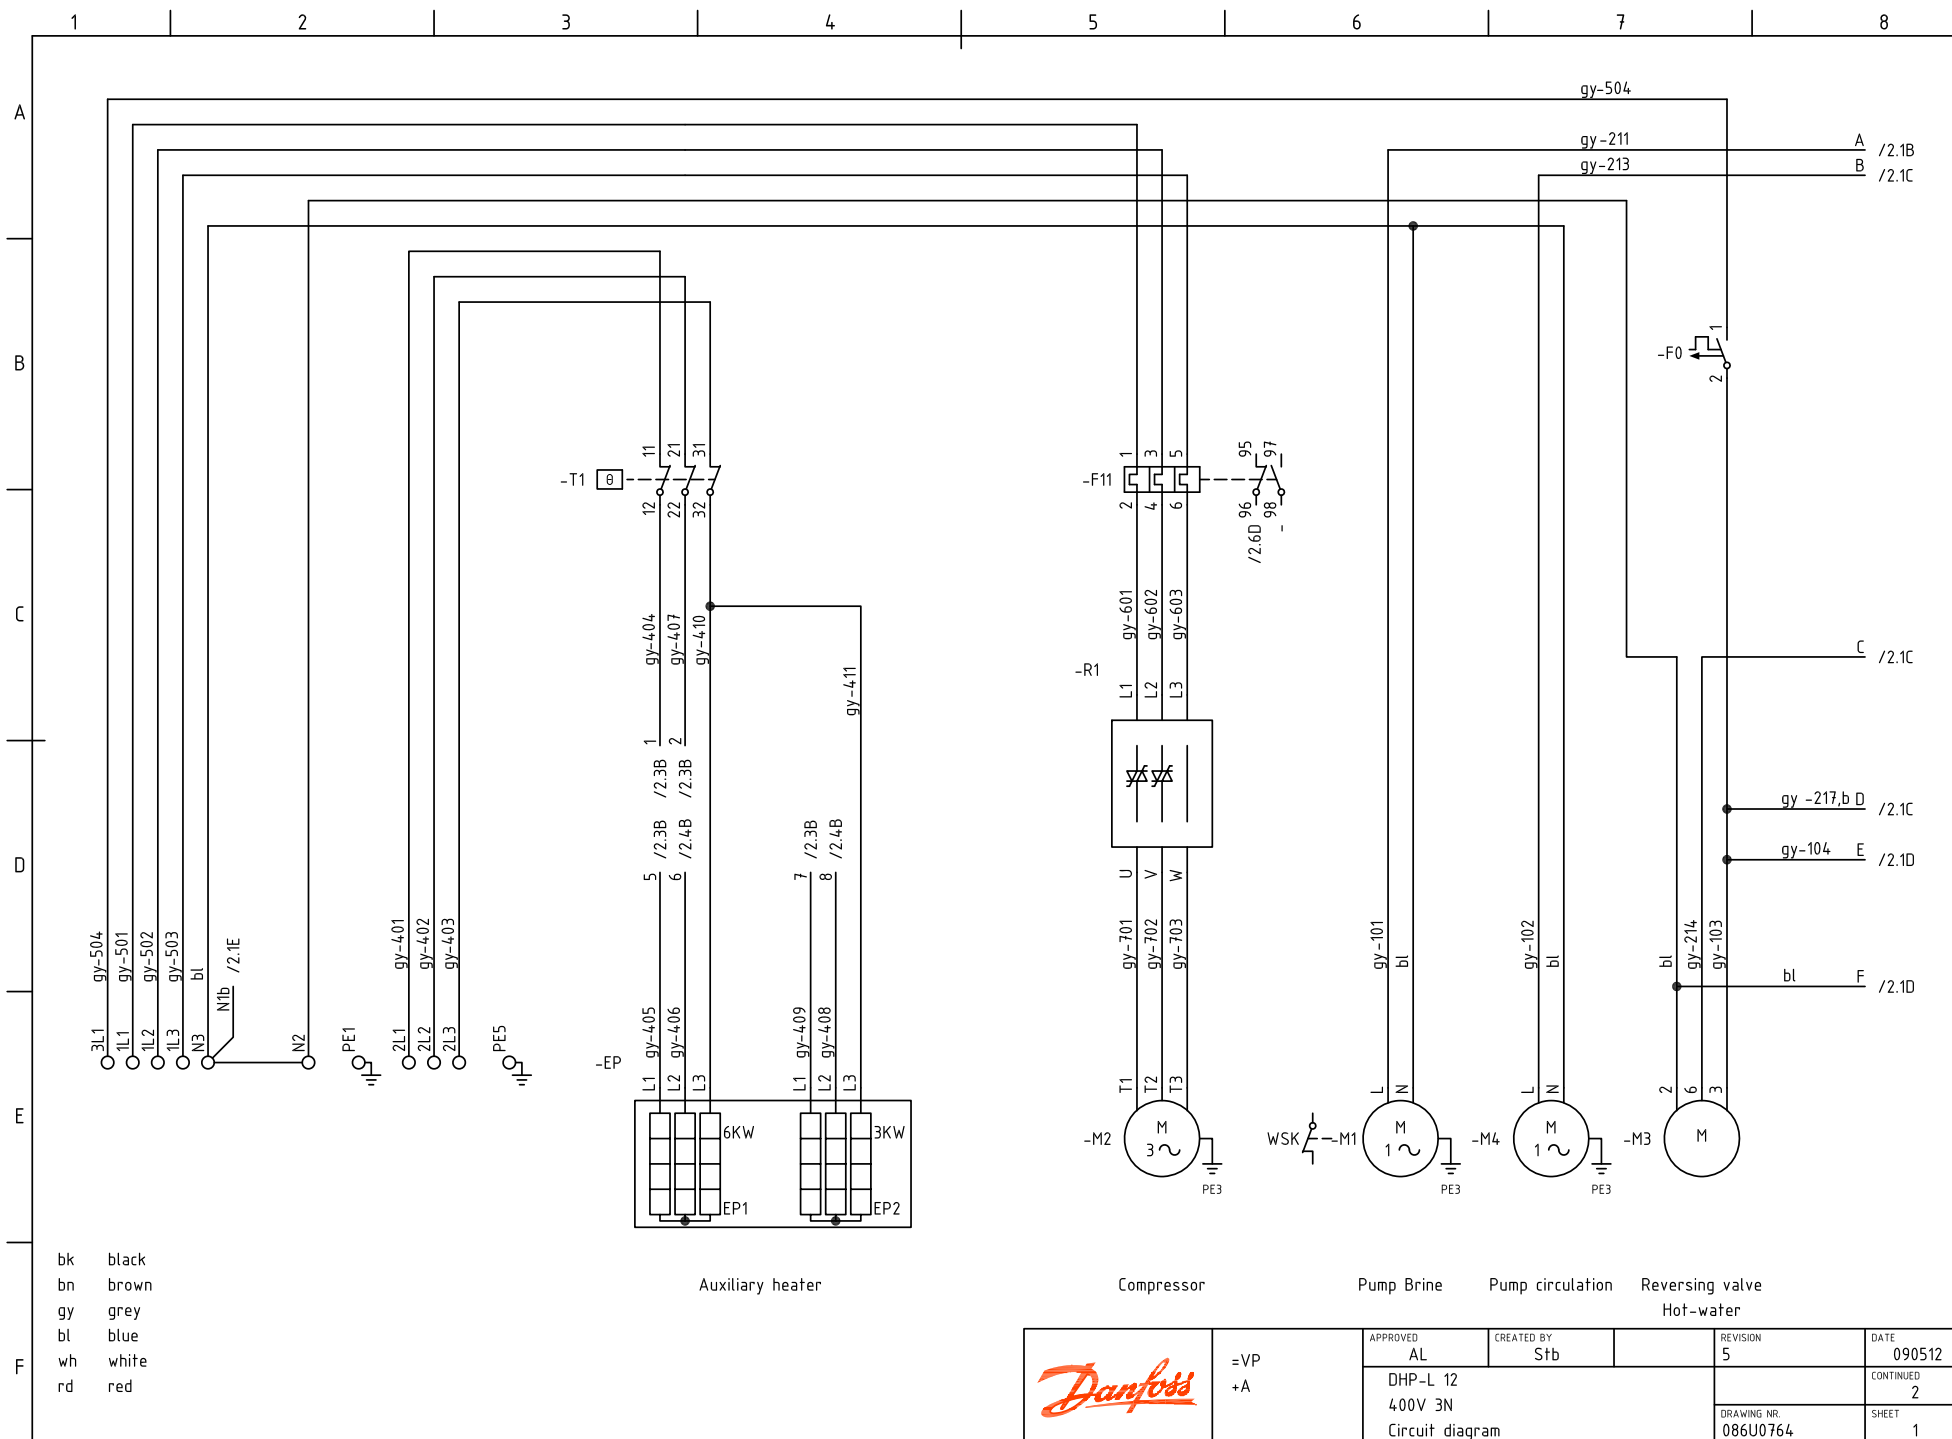
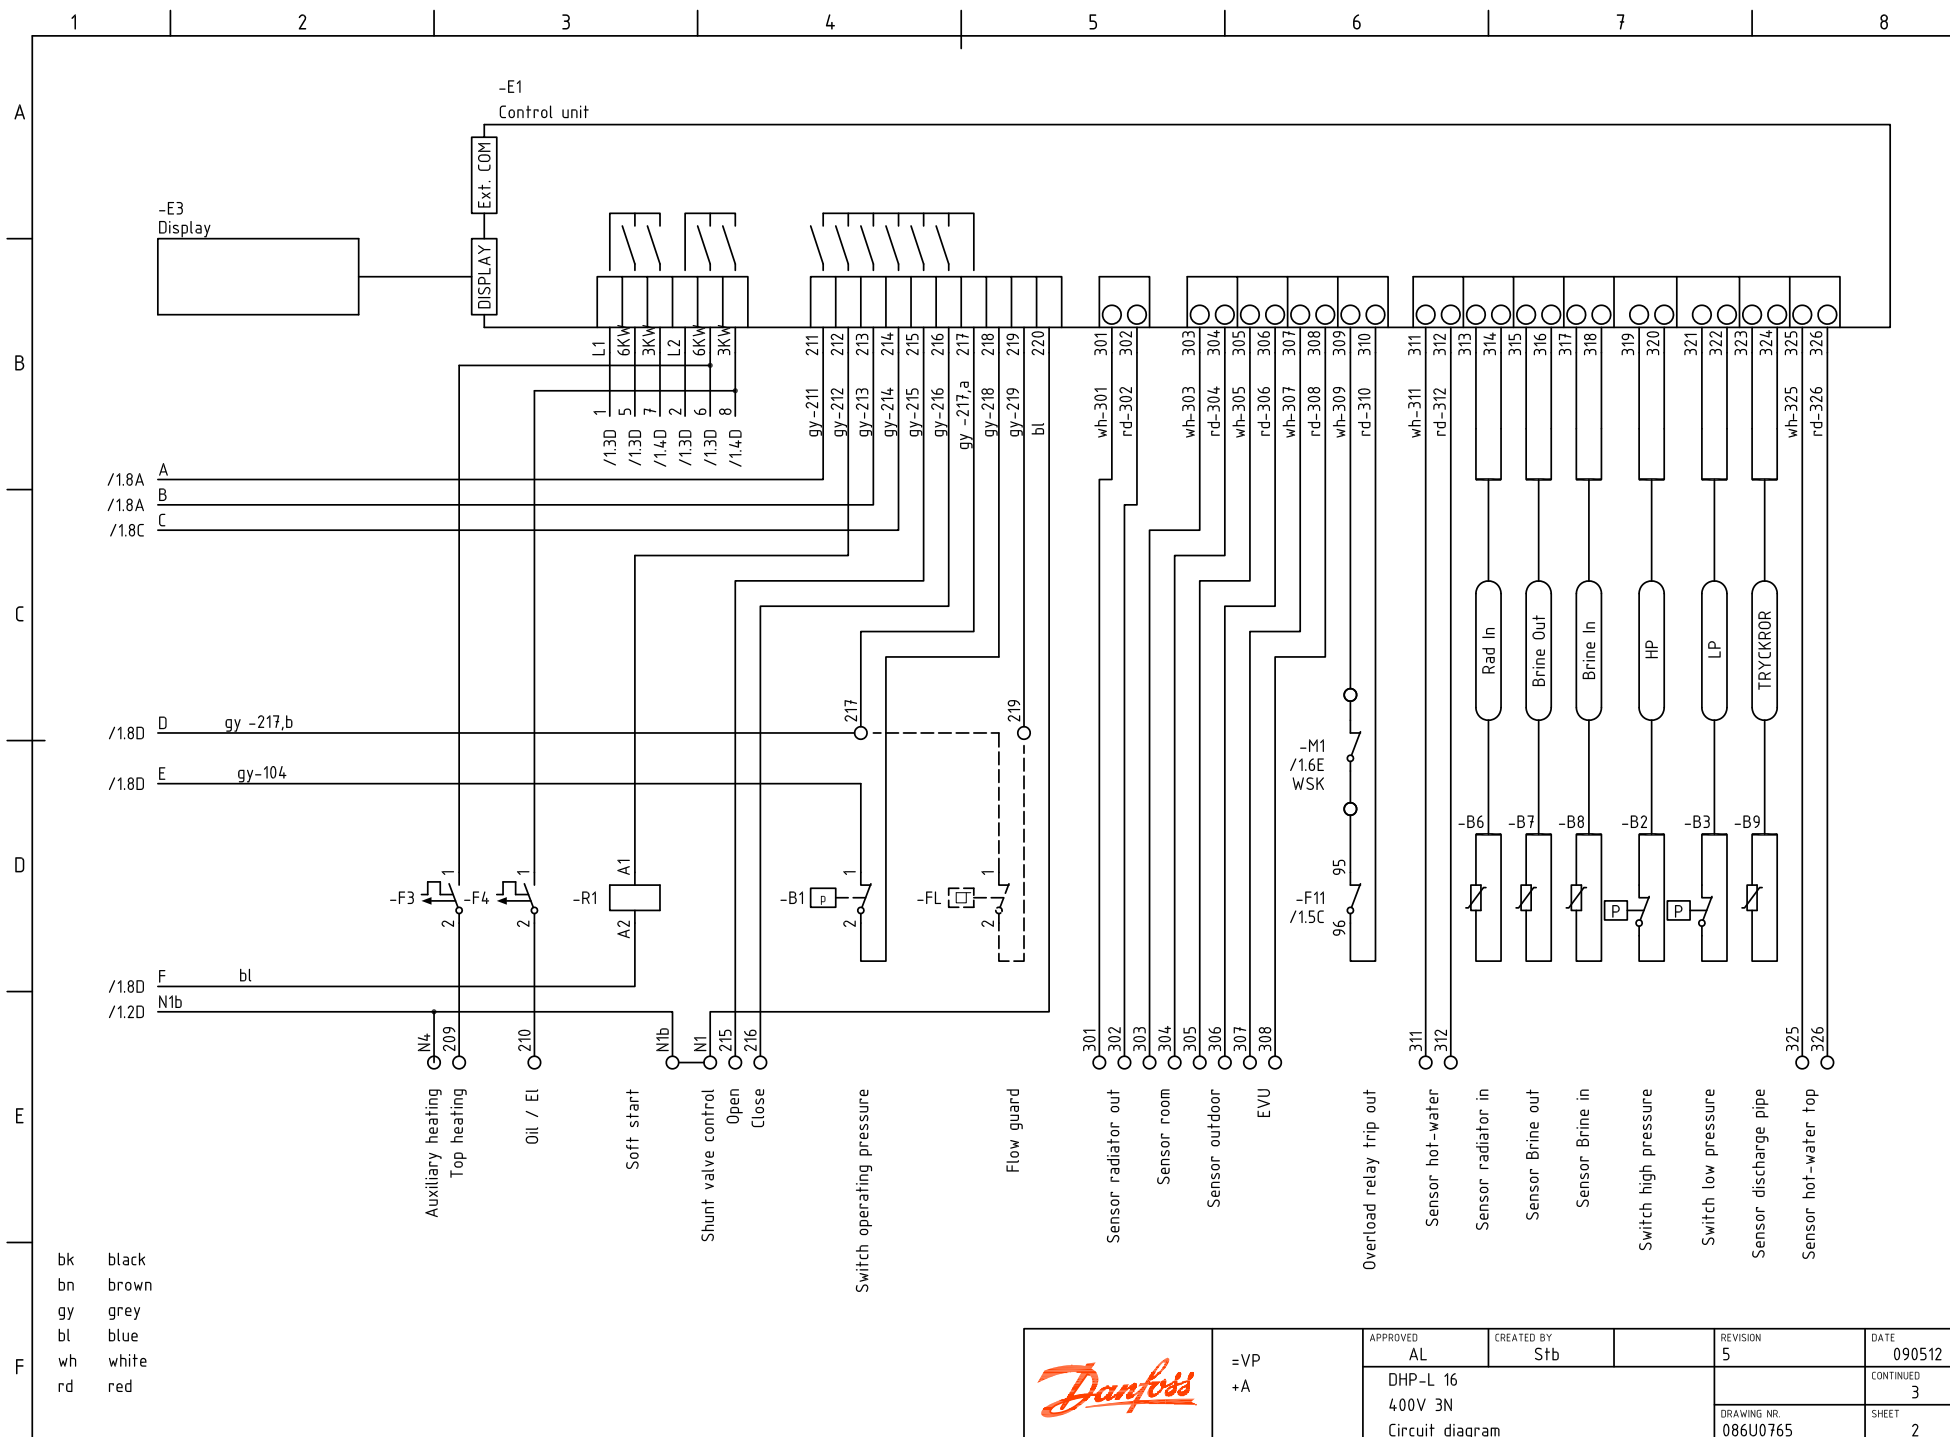





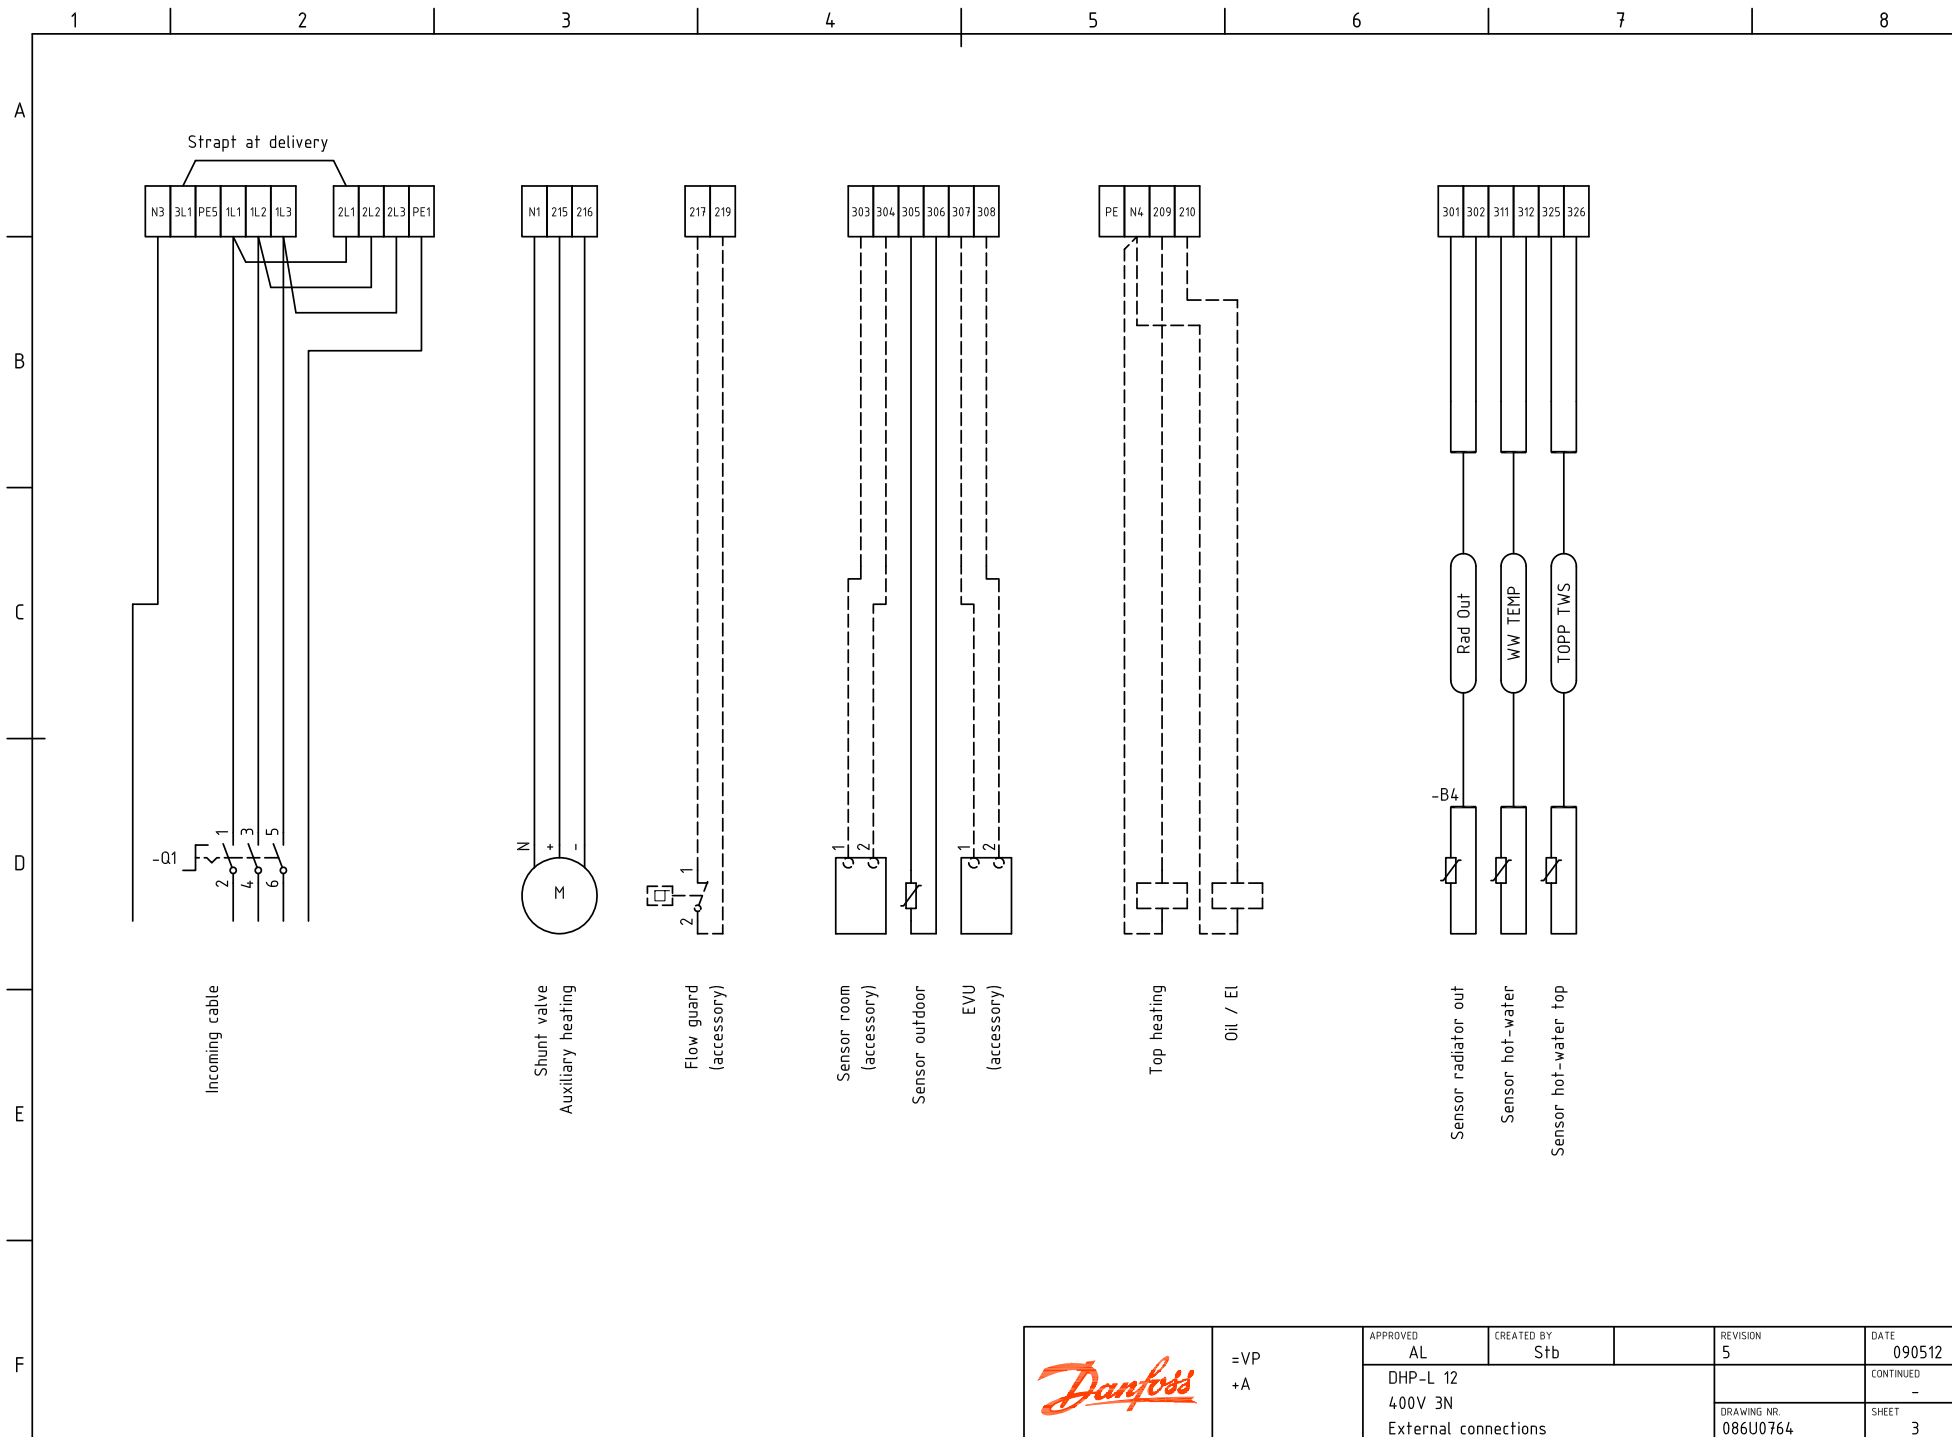



	=VP +A	APPROVED	CREATED BY		REVISION	DATE
		AL	Stb		5	090512
		DHP-L 12 400V 3N External connections				CONTINUED
				DRAWING NR. 086U0764	SHEET	
					3	




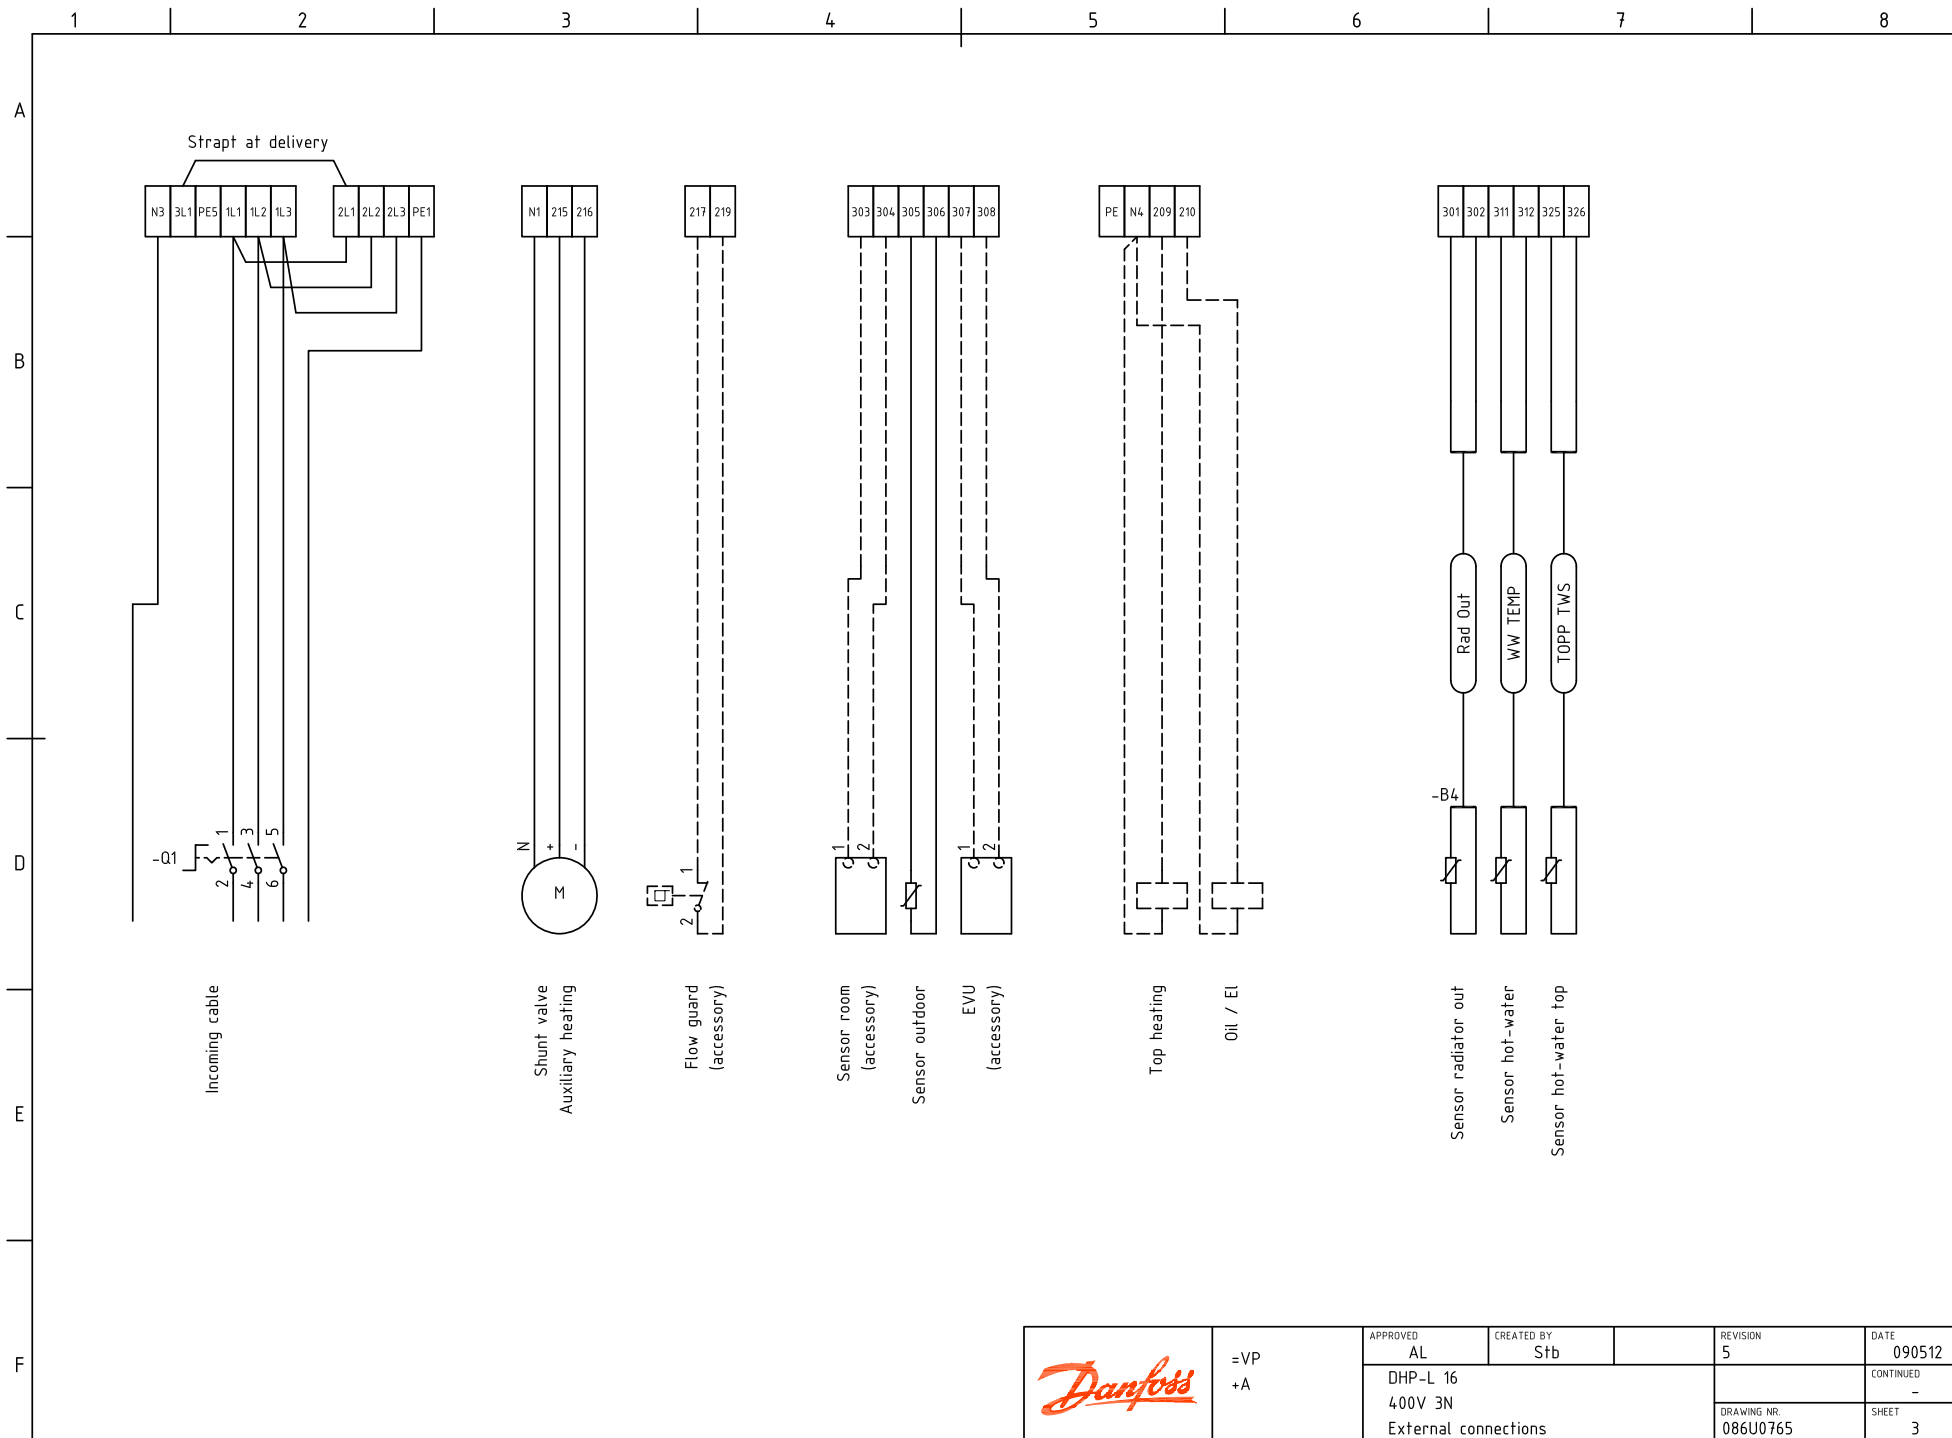


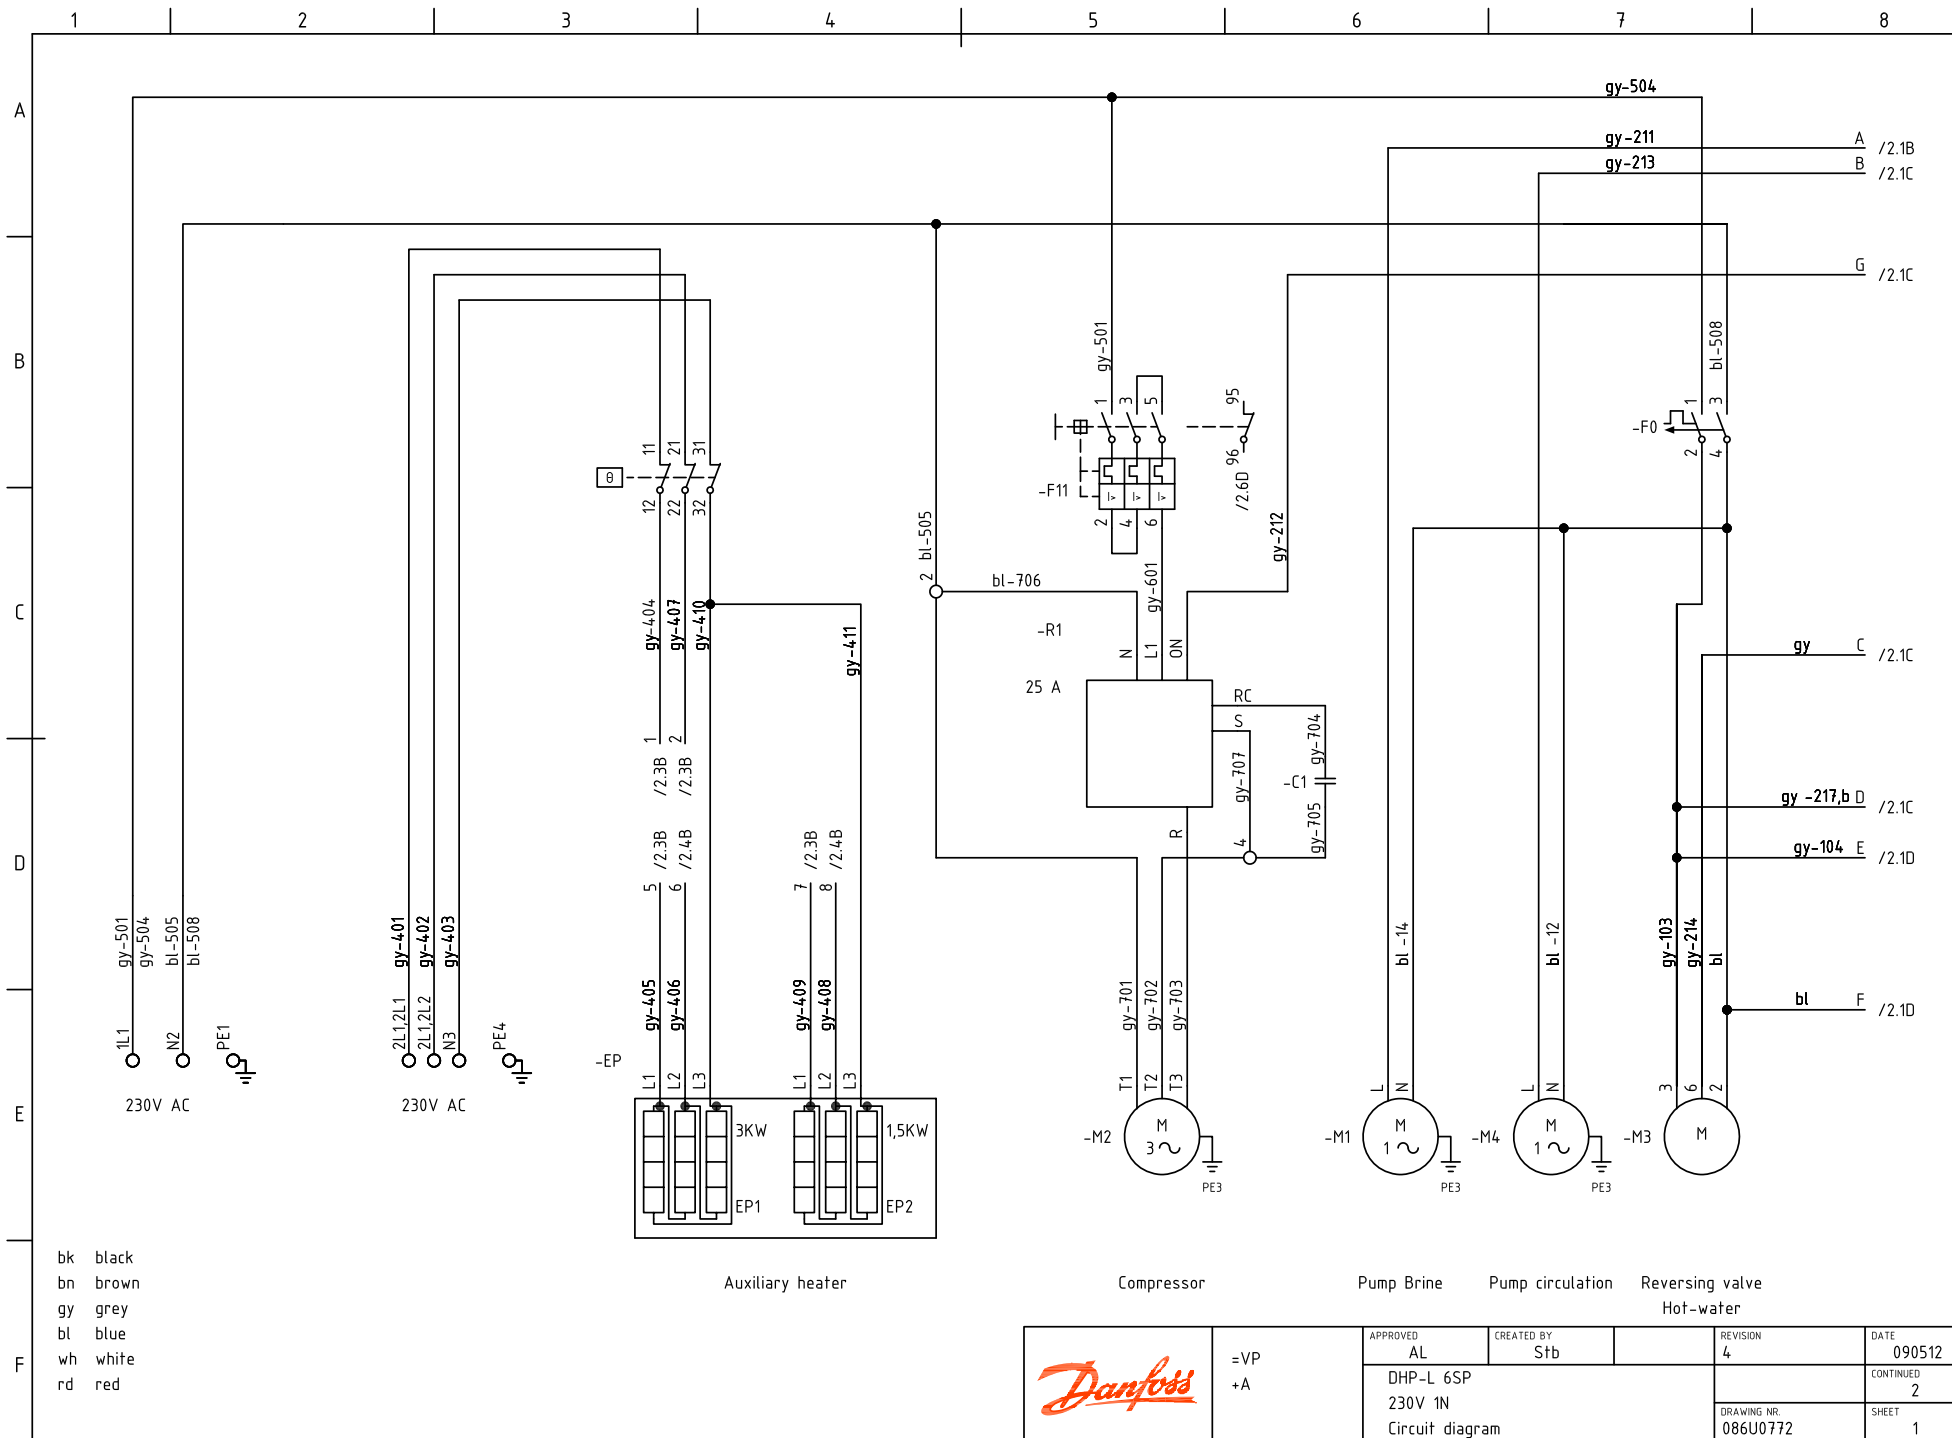


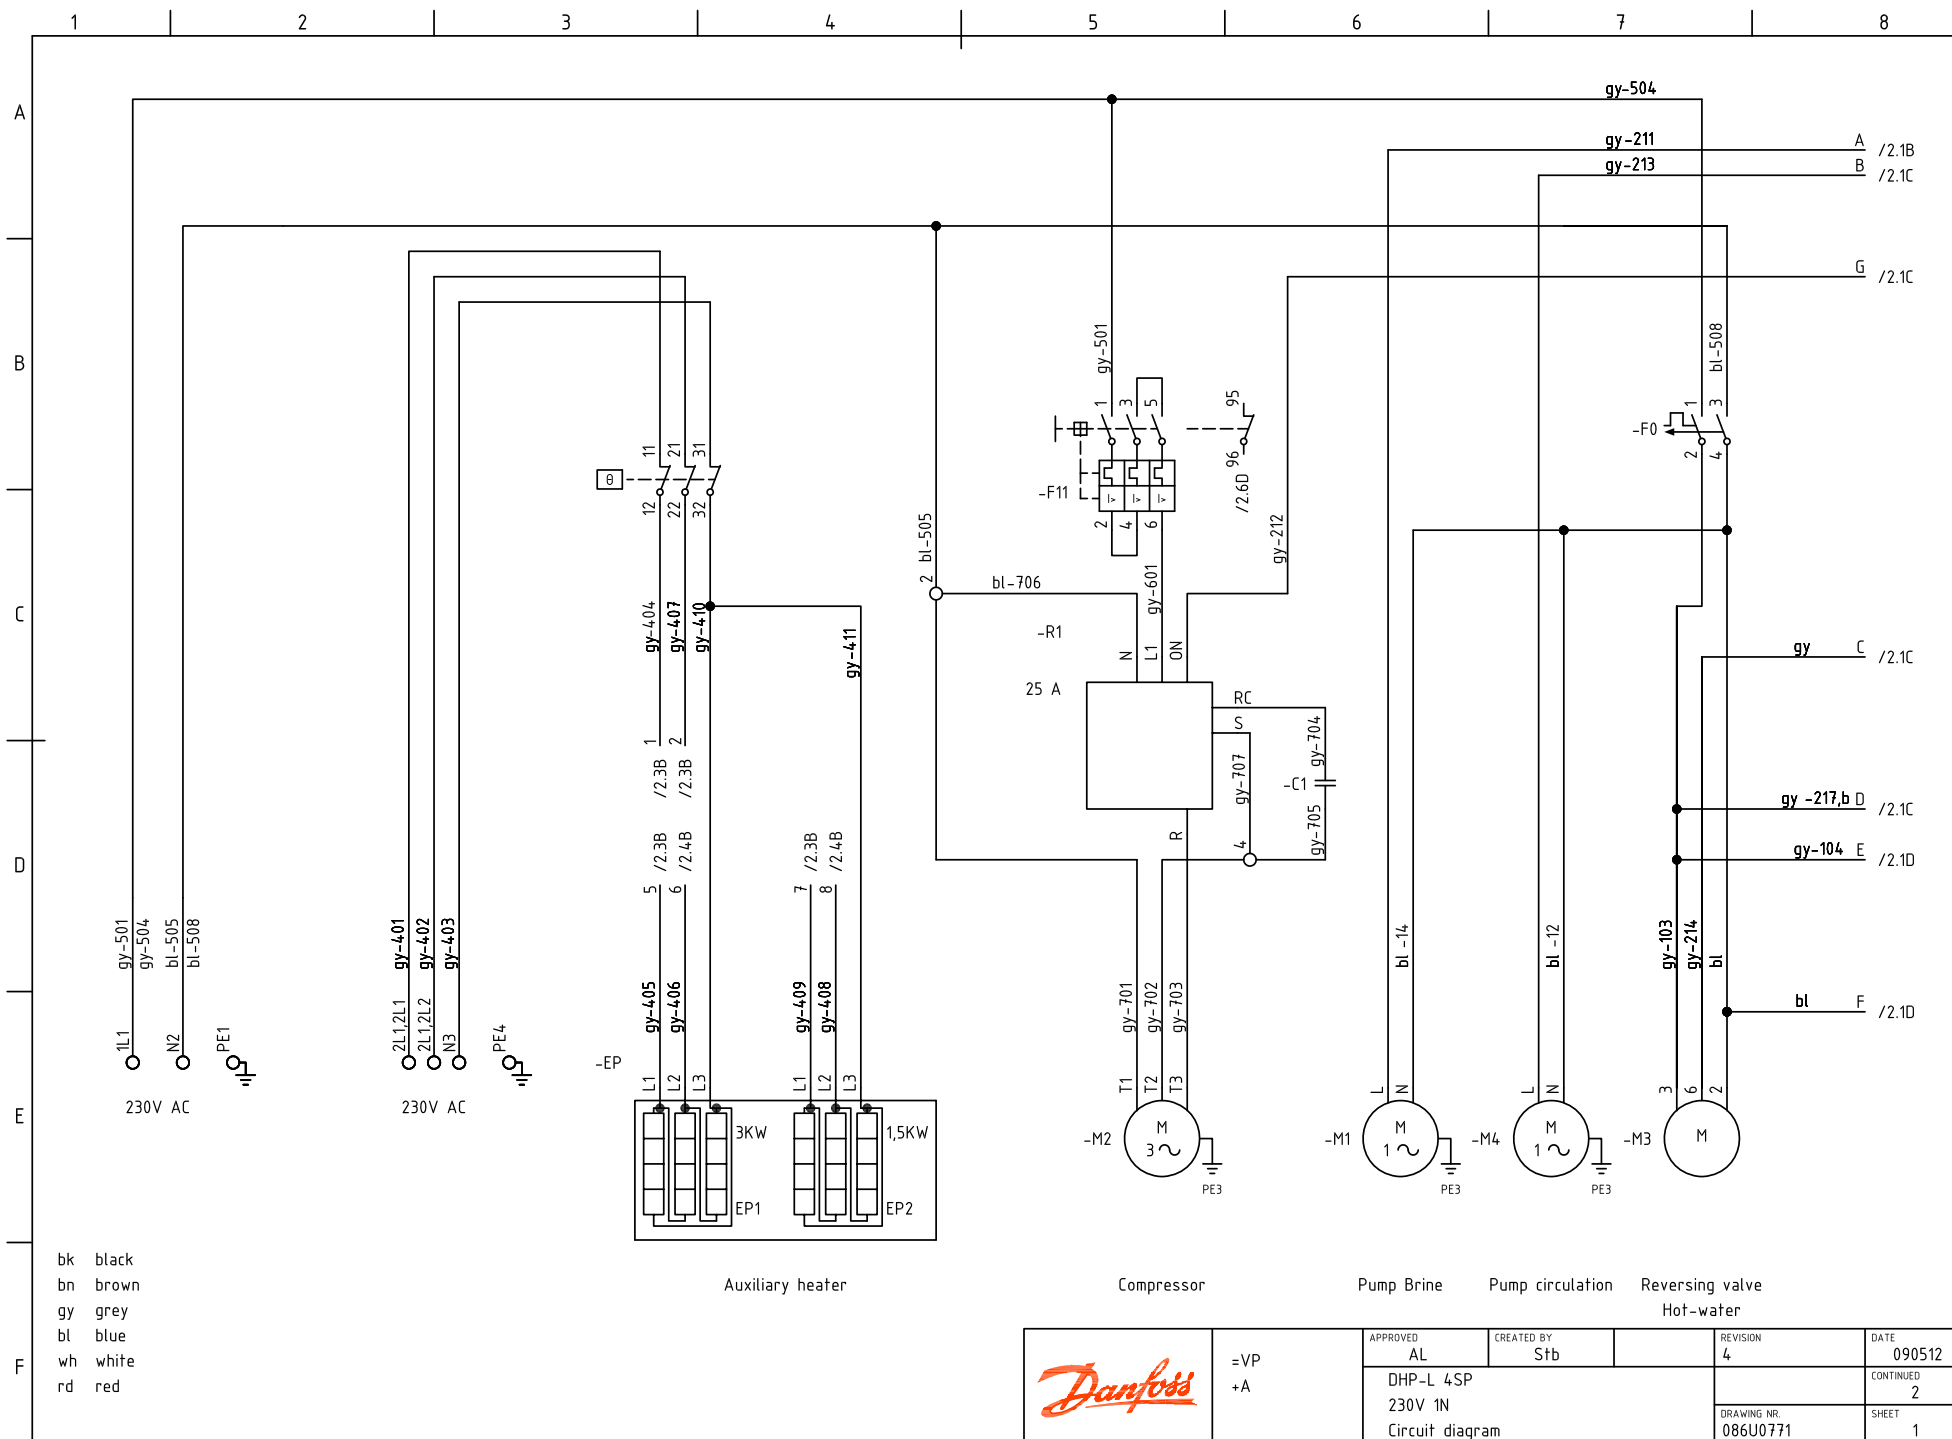


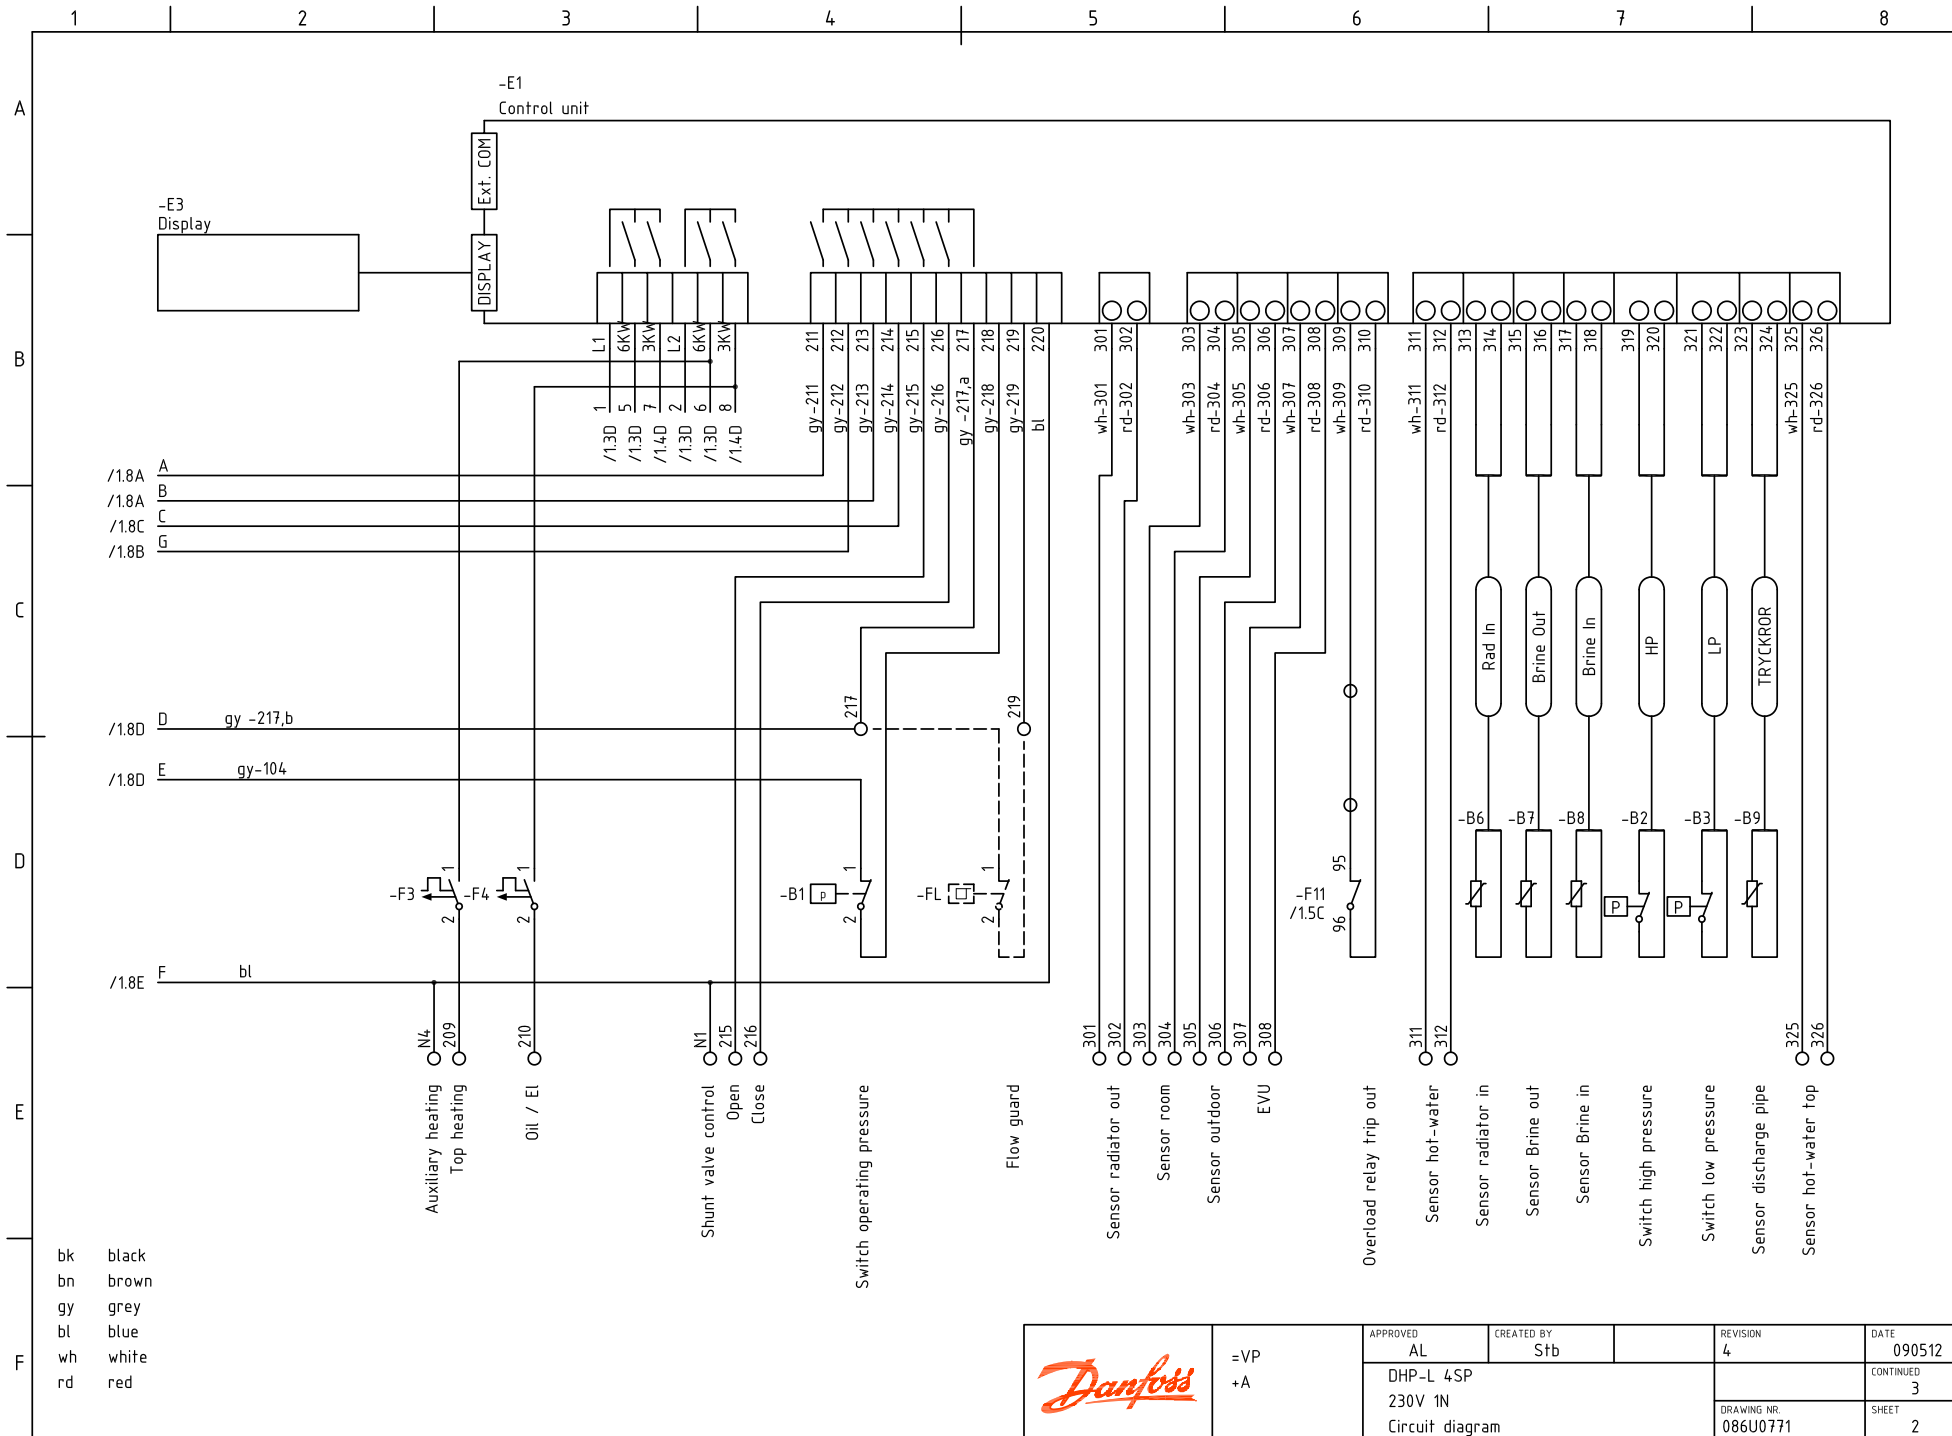

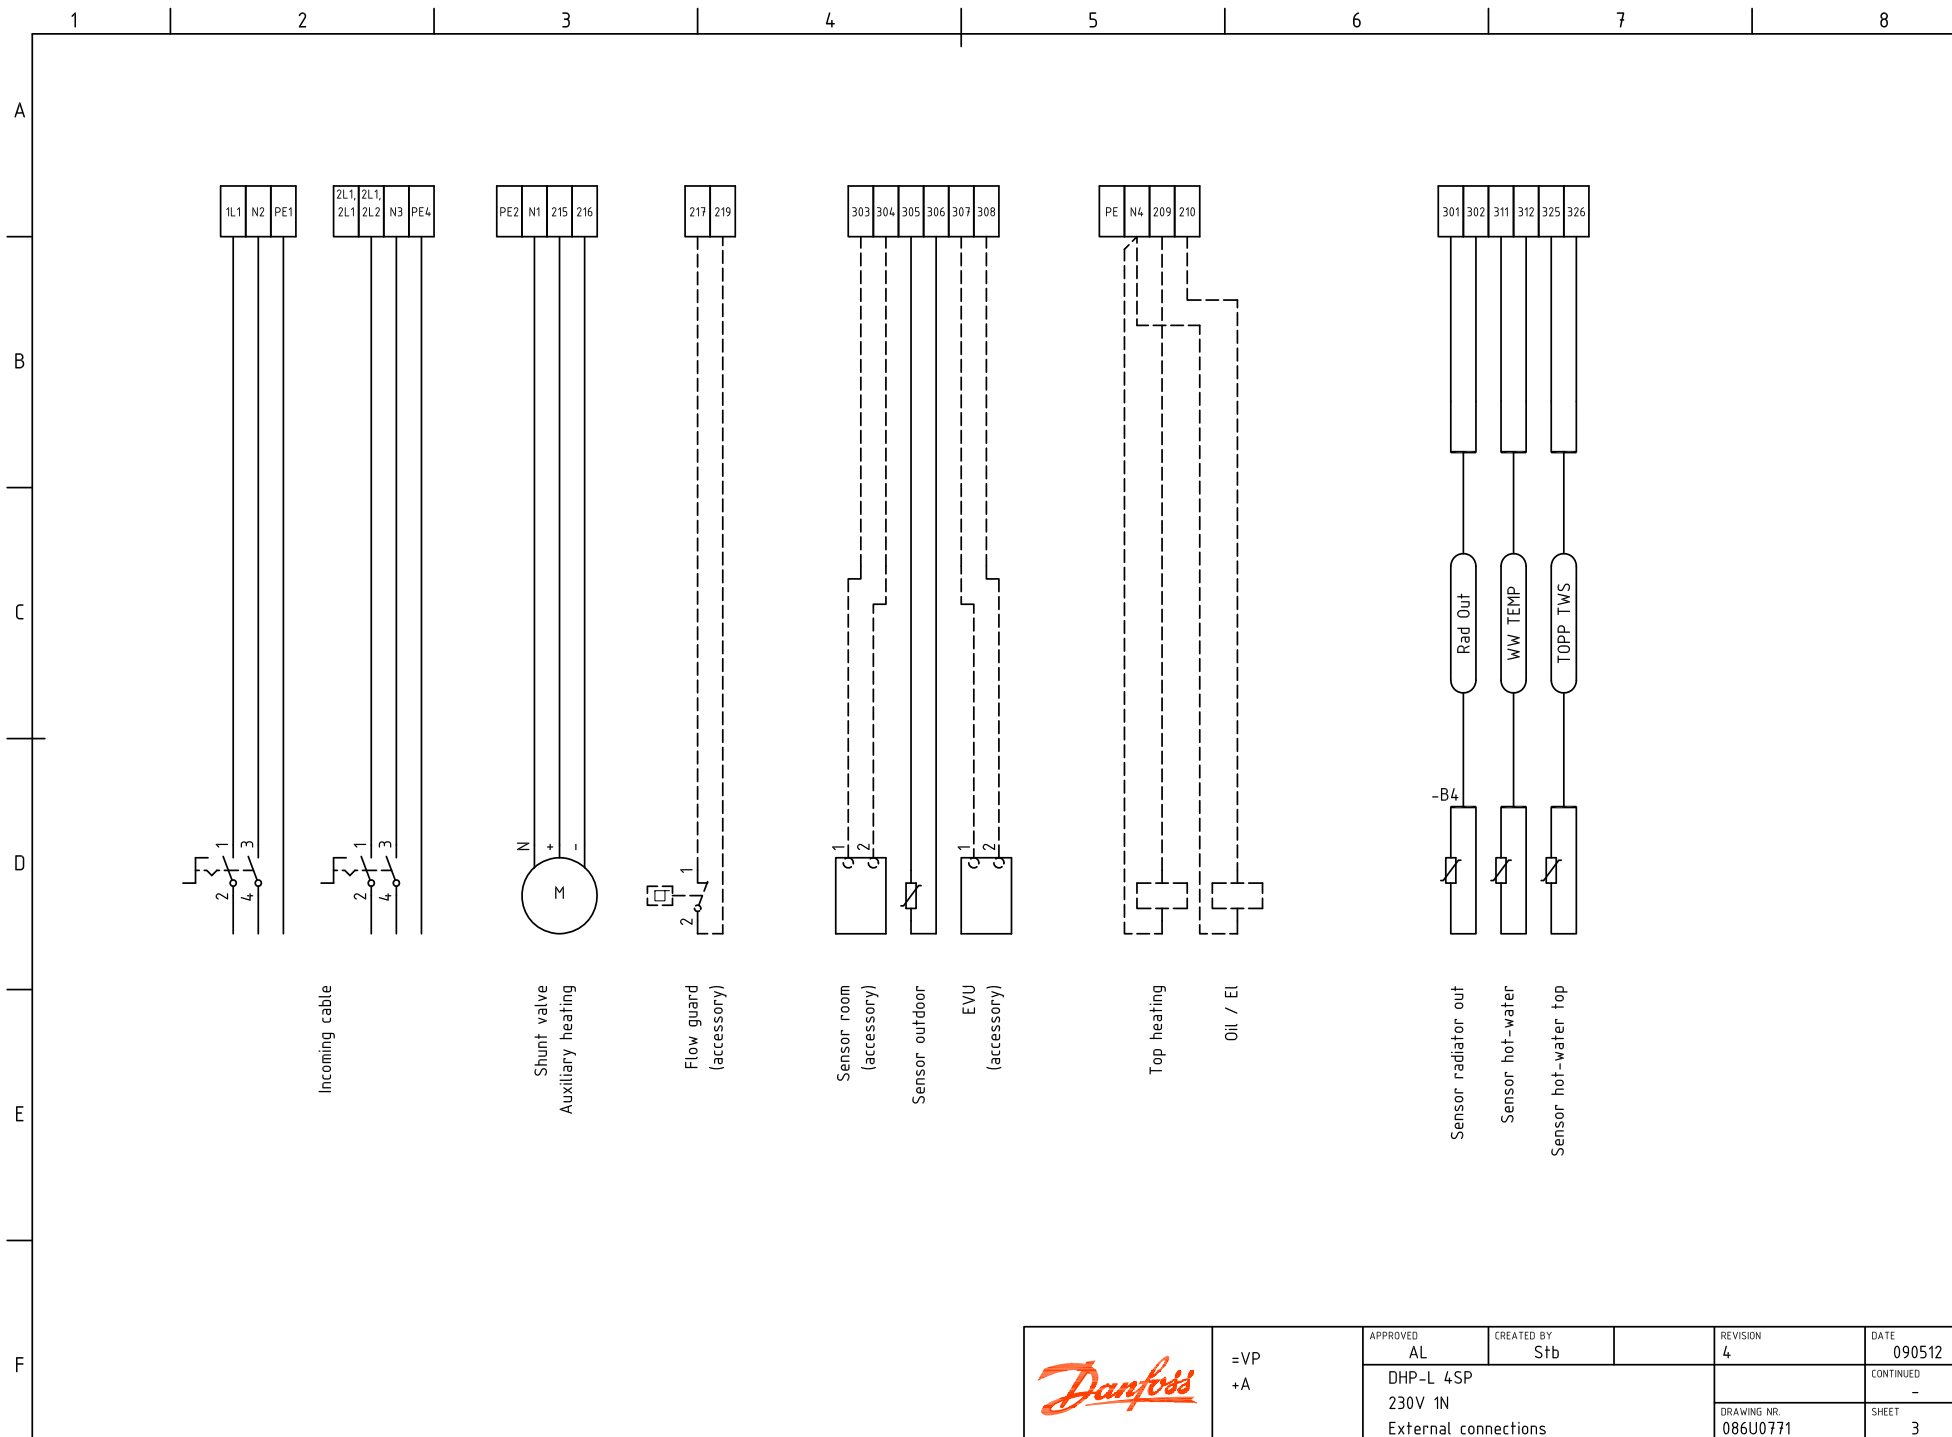
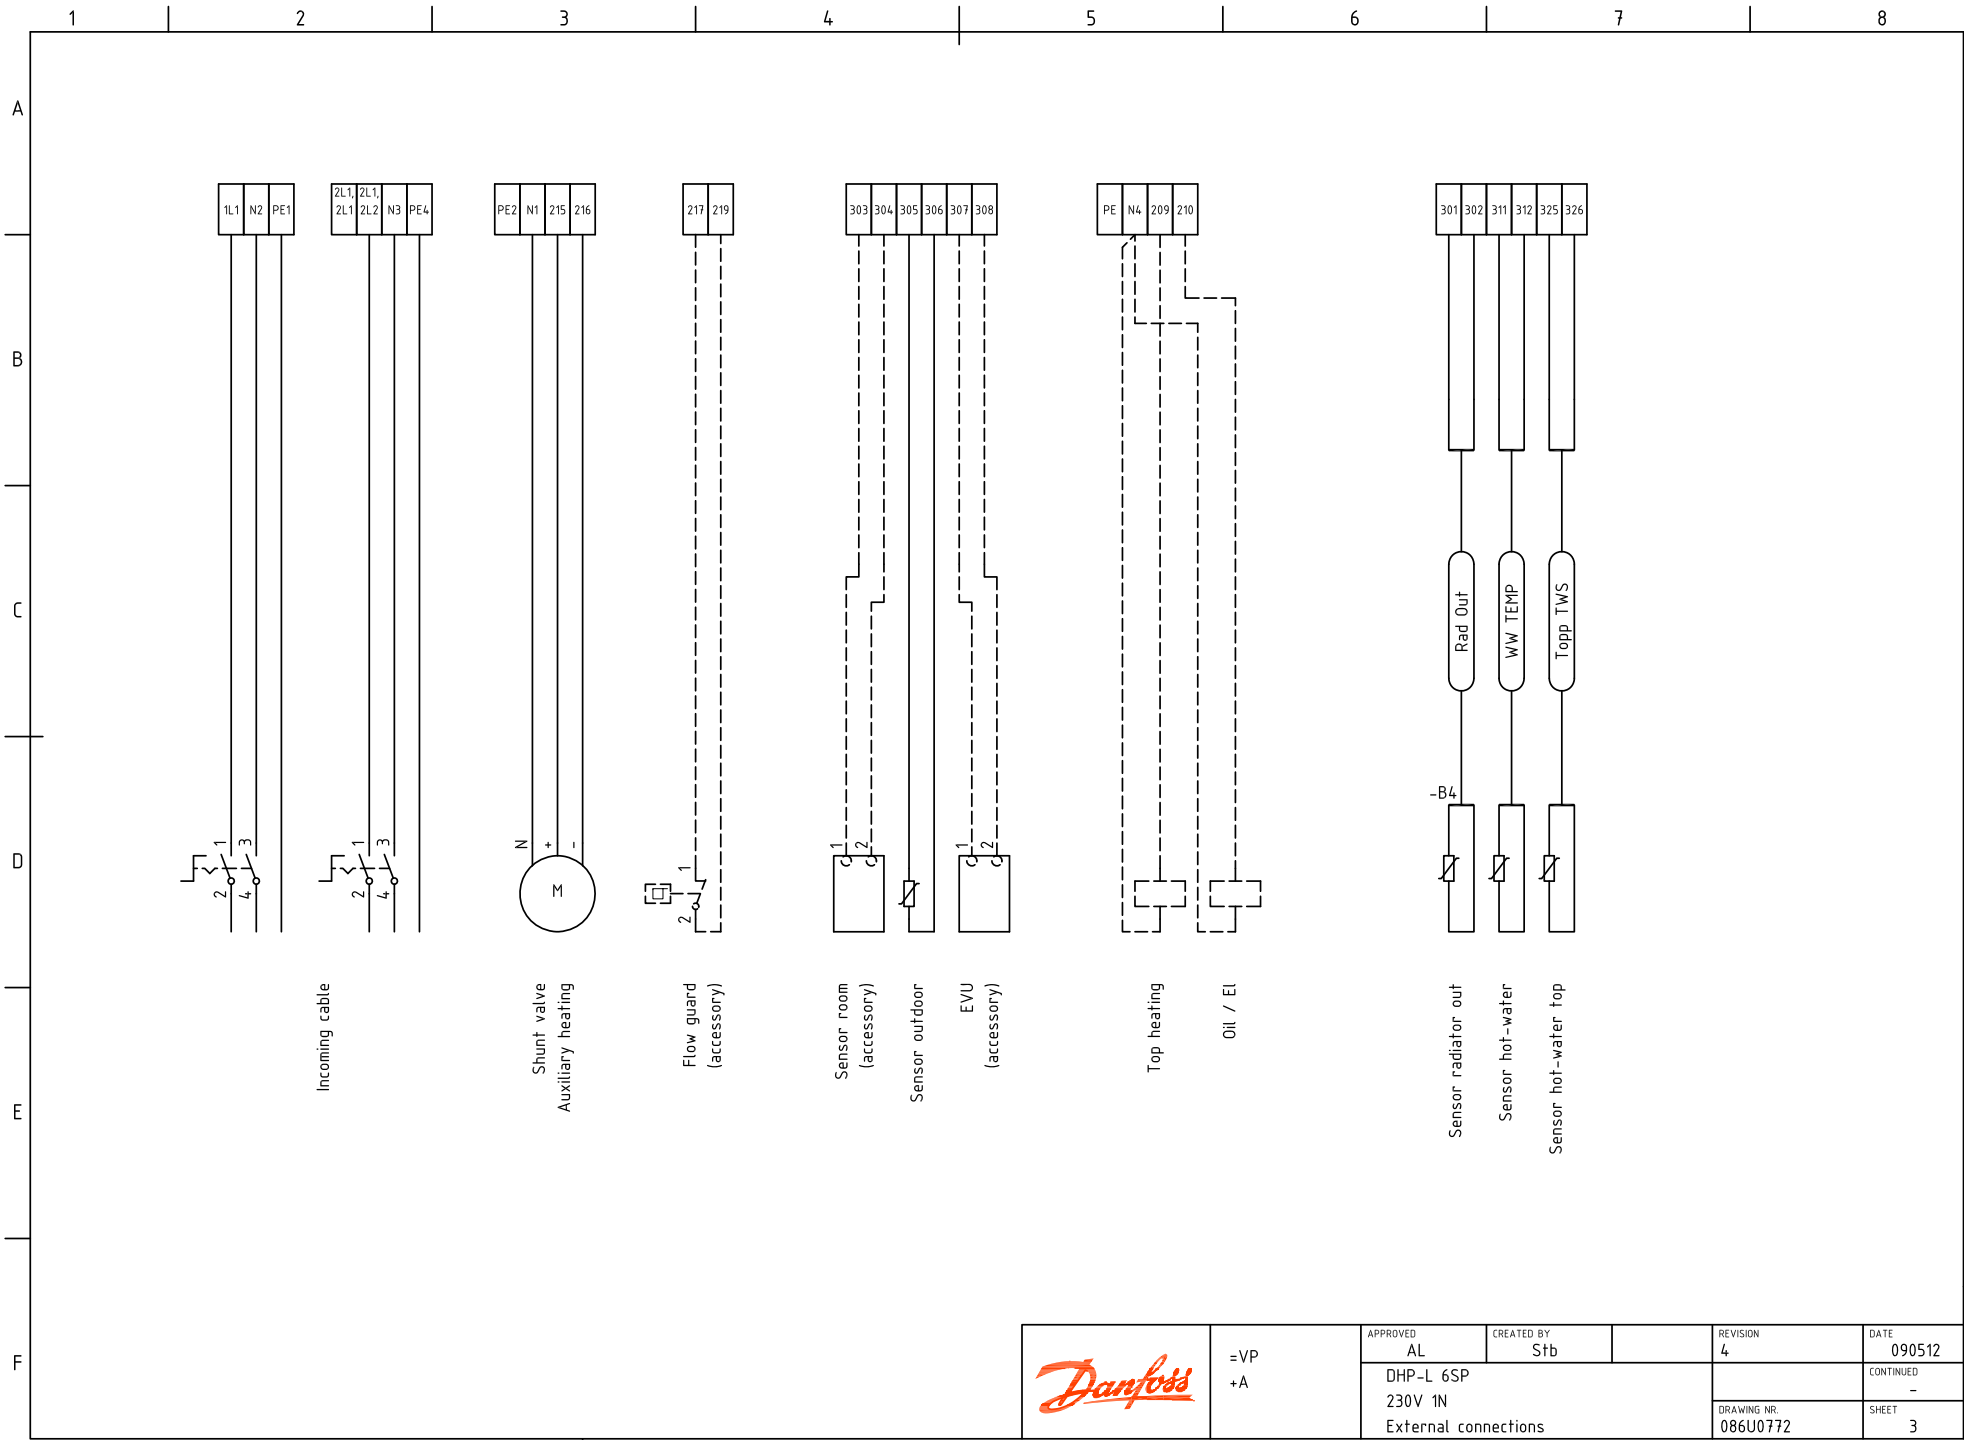



	=VP +A	APPROVED AL	CREATED BY Stb	REVISION 4	DATE 090512
		DHP-L 4SP			CONTINUED -
		230V 1N External connections			SHEET 3




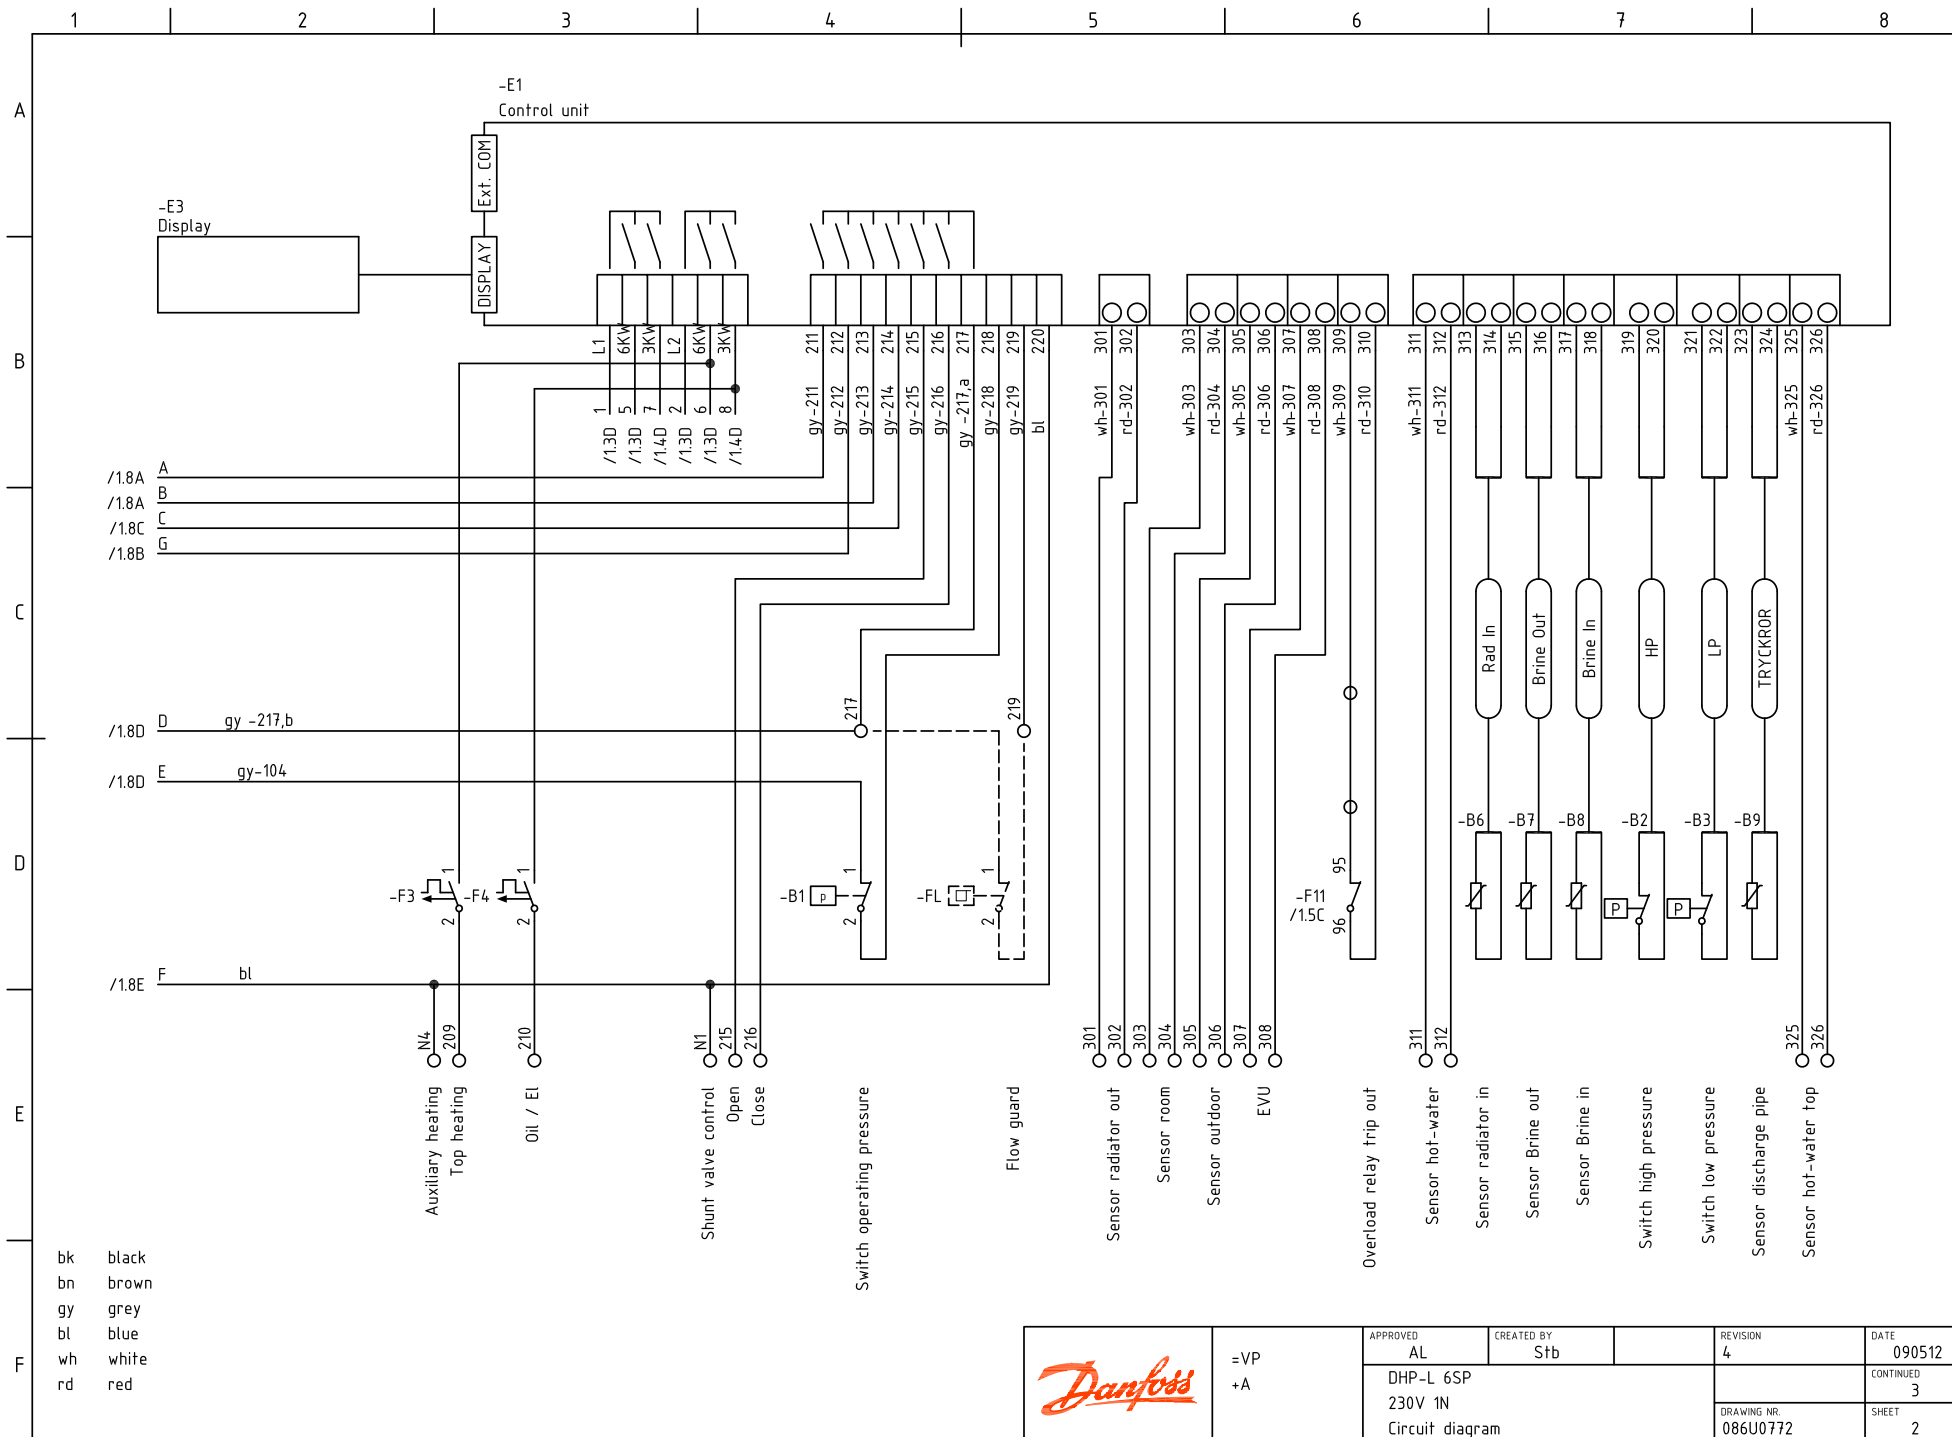



	=VP +A	APPROVED AL	CREATED BY Stb		REVISION 4	DATE 090512
		DHP-L 6SP 230V 1N Circuit diagram				CONTINUED 3
					DRAWING NR. 086U0772	SHEET 2





	=VP +A	APPROVED	CREATED BY		REVISION	DATE
		AL	Stb		4	090512
		DHP-L 6SP				CONTINUED
		230V 1N				-
		External connections			DRAWING NR.	SHEET
					086U0772	3

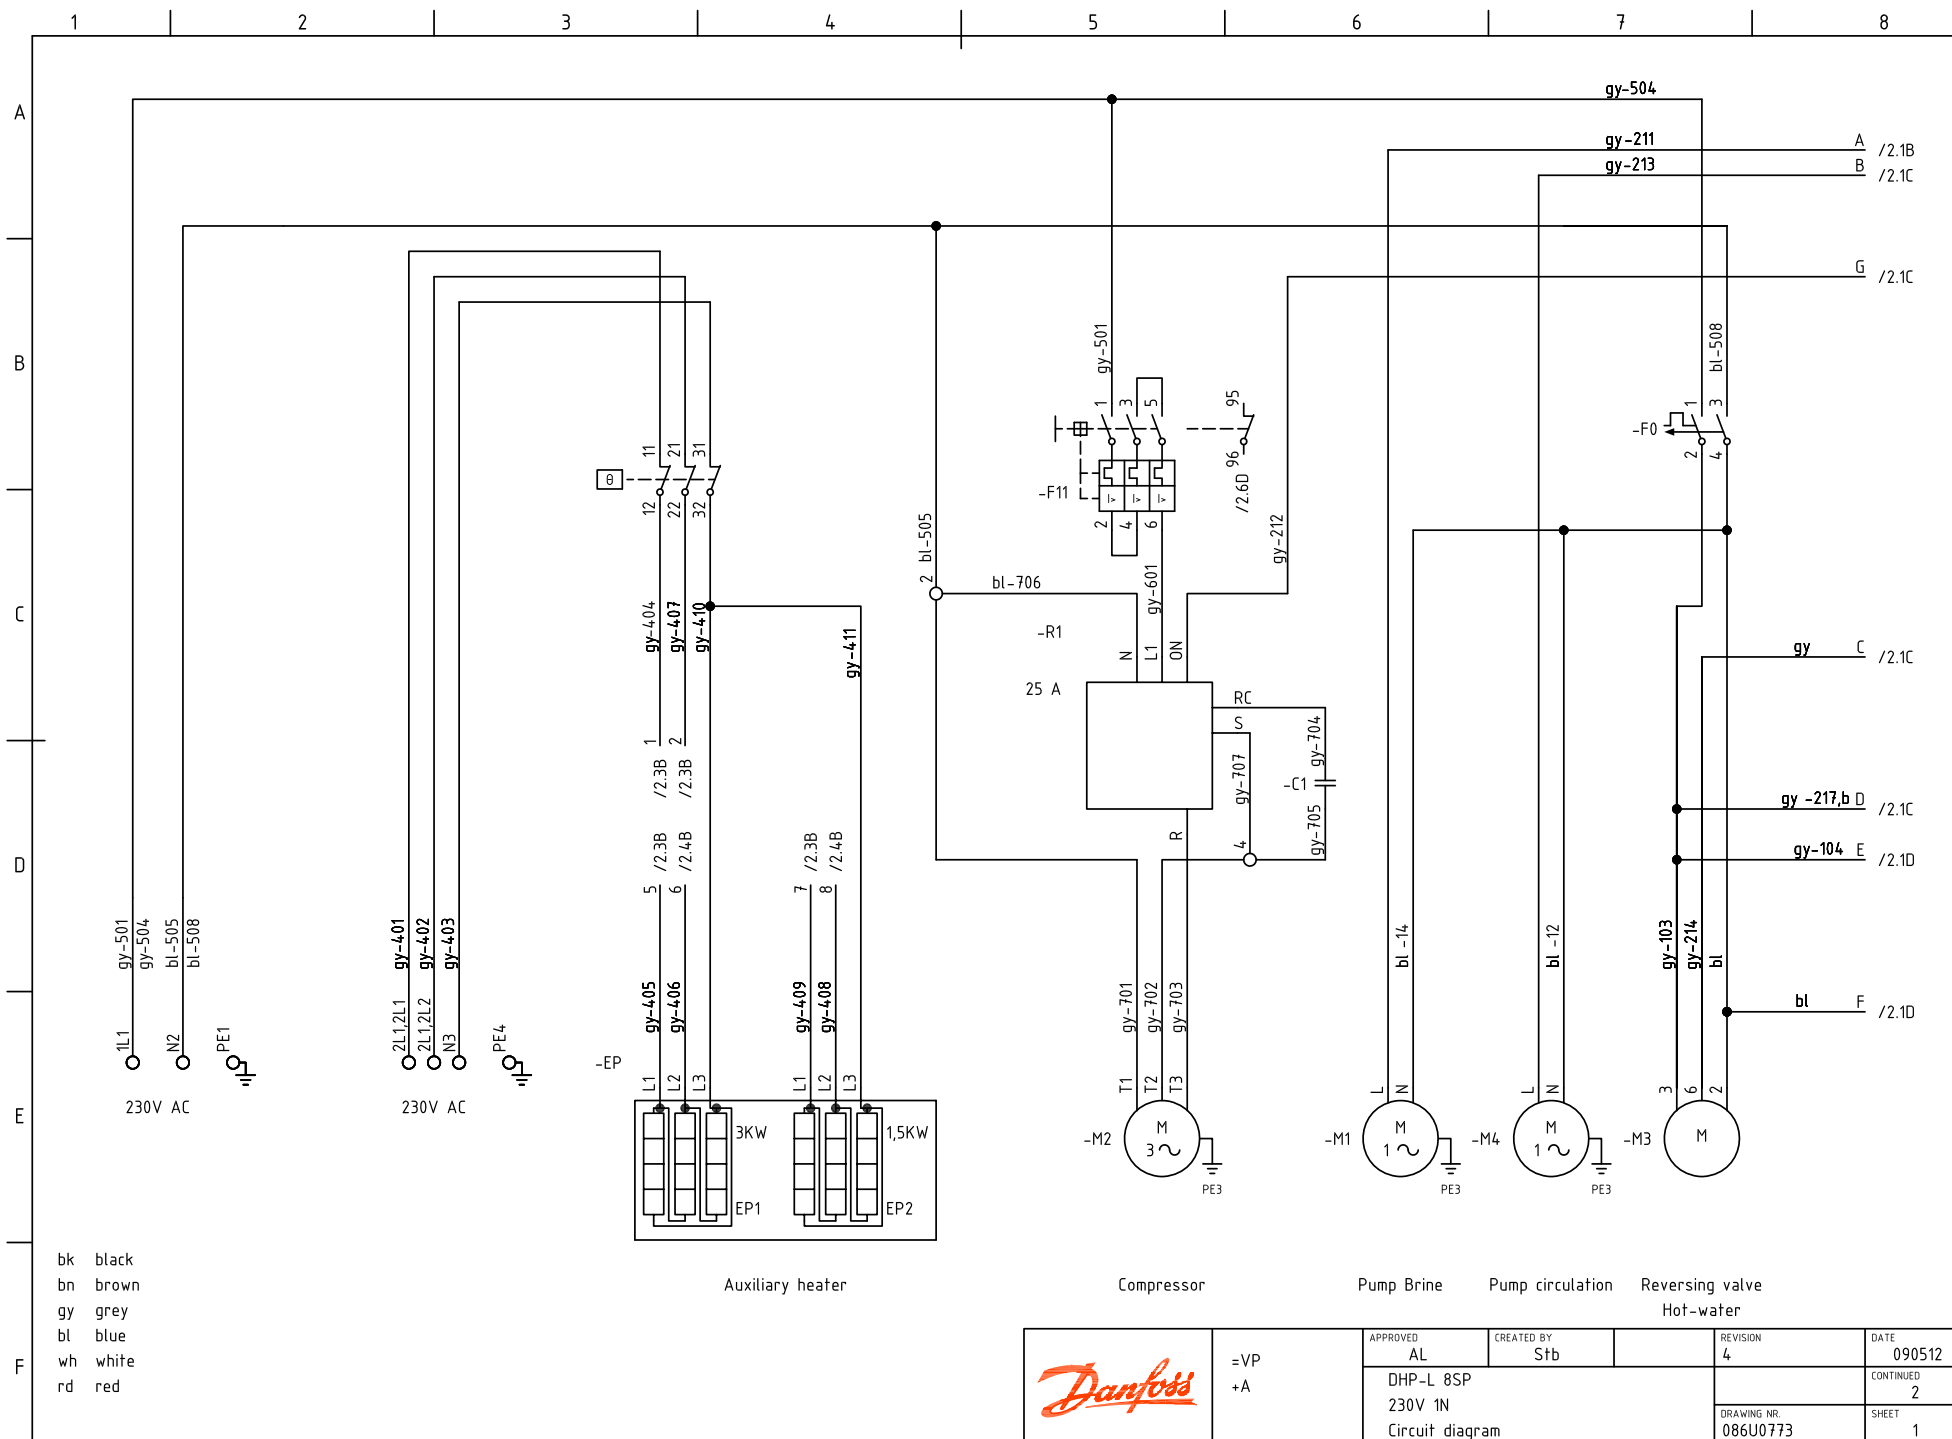


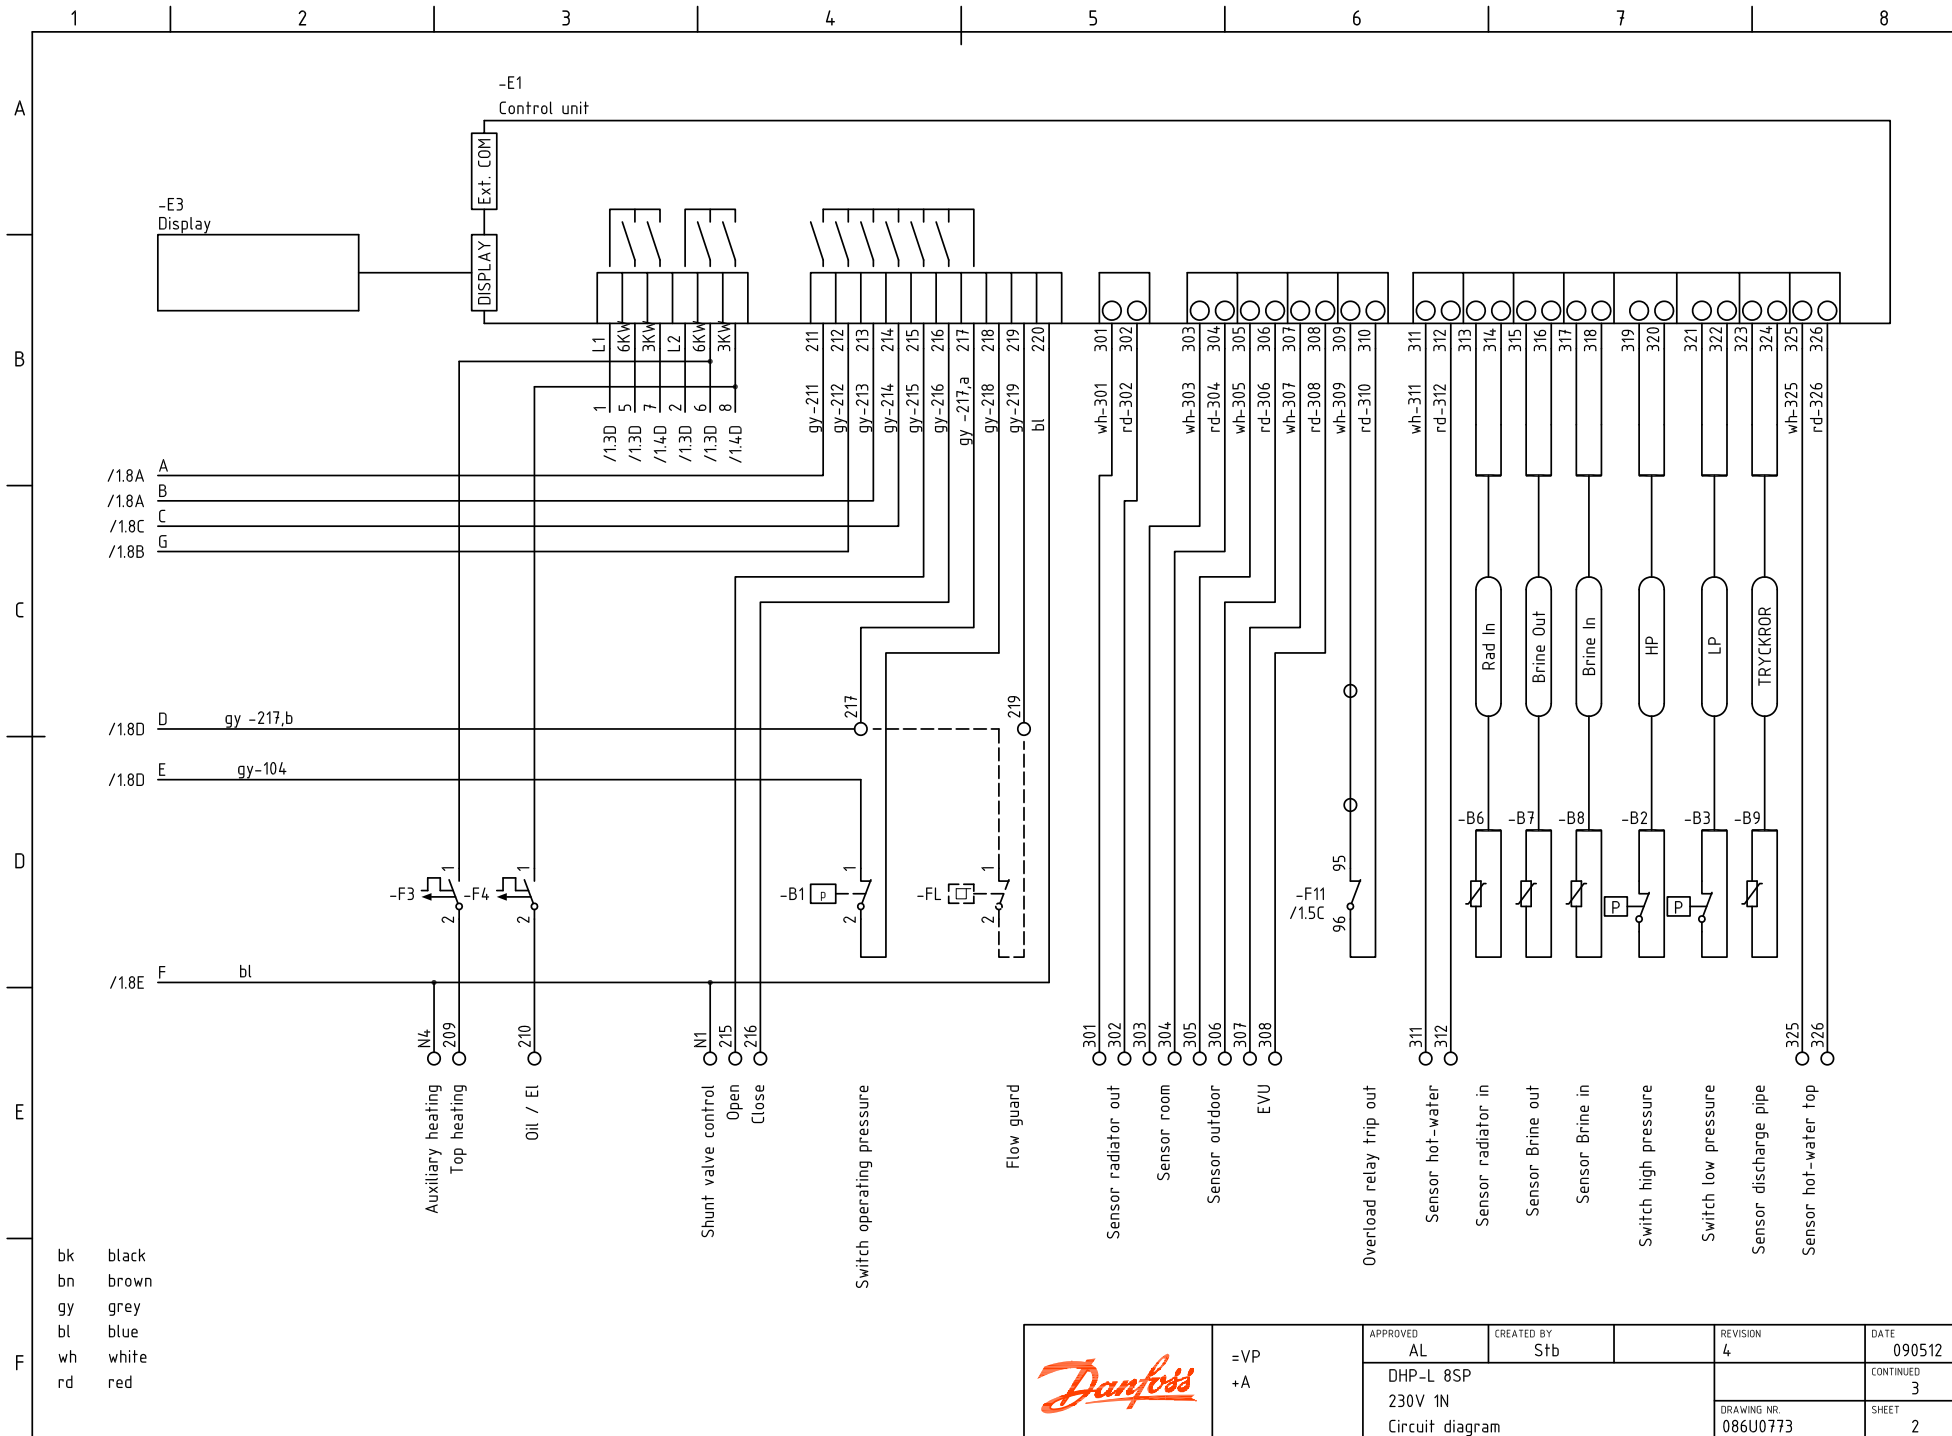


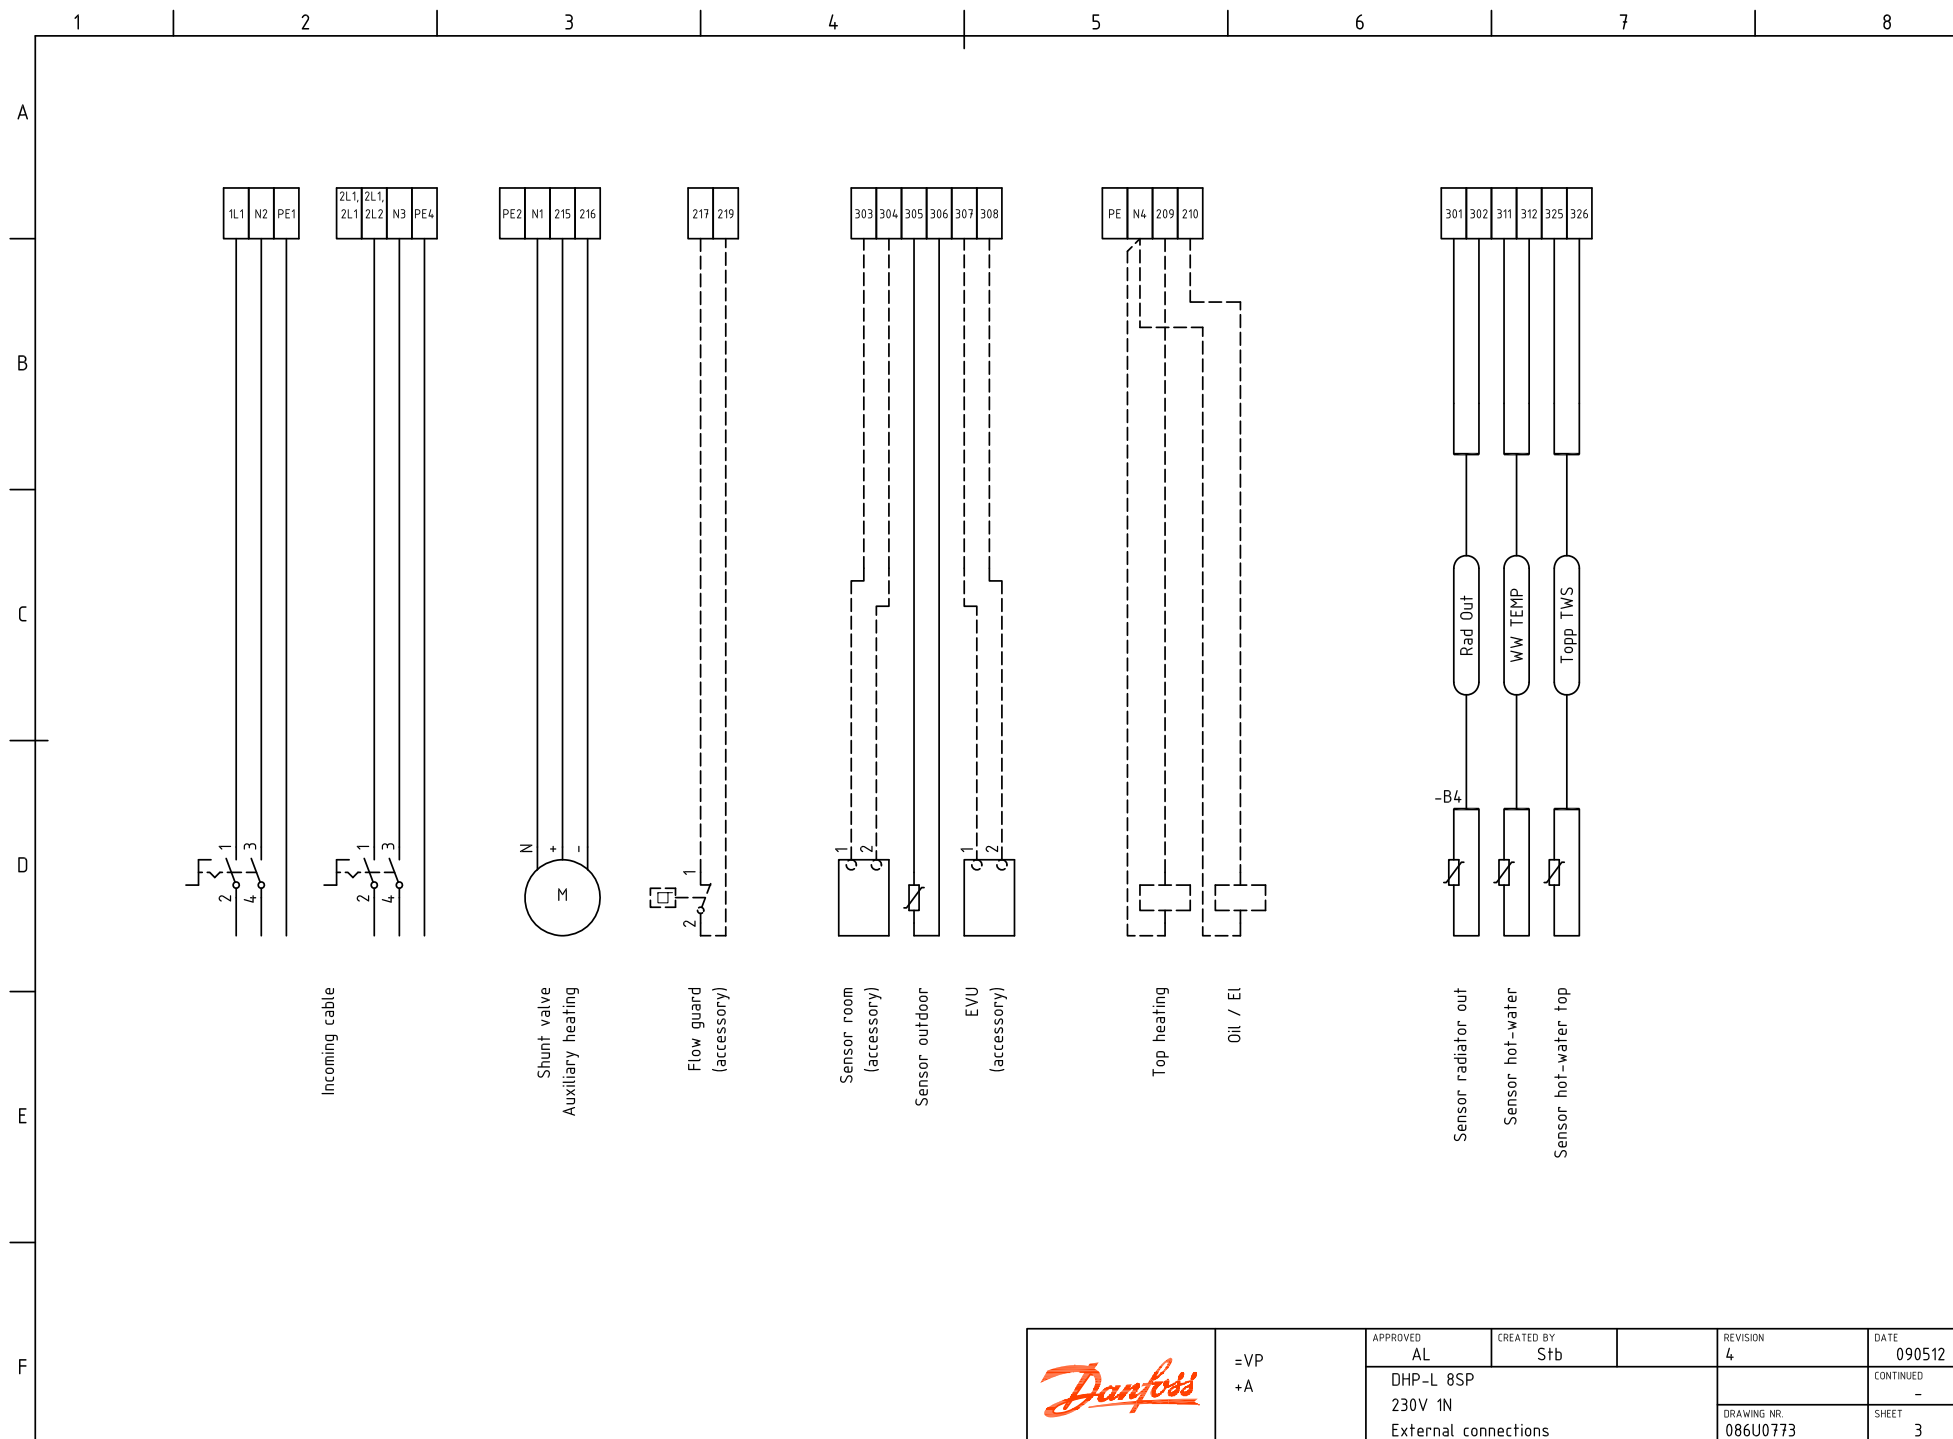


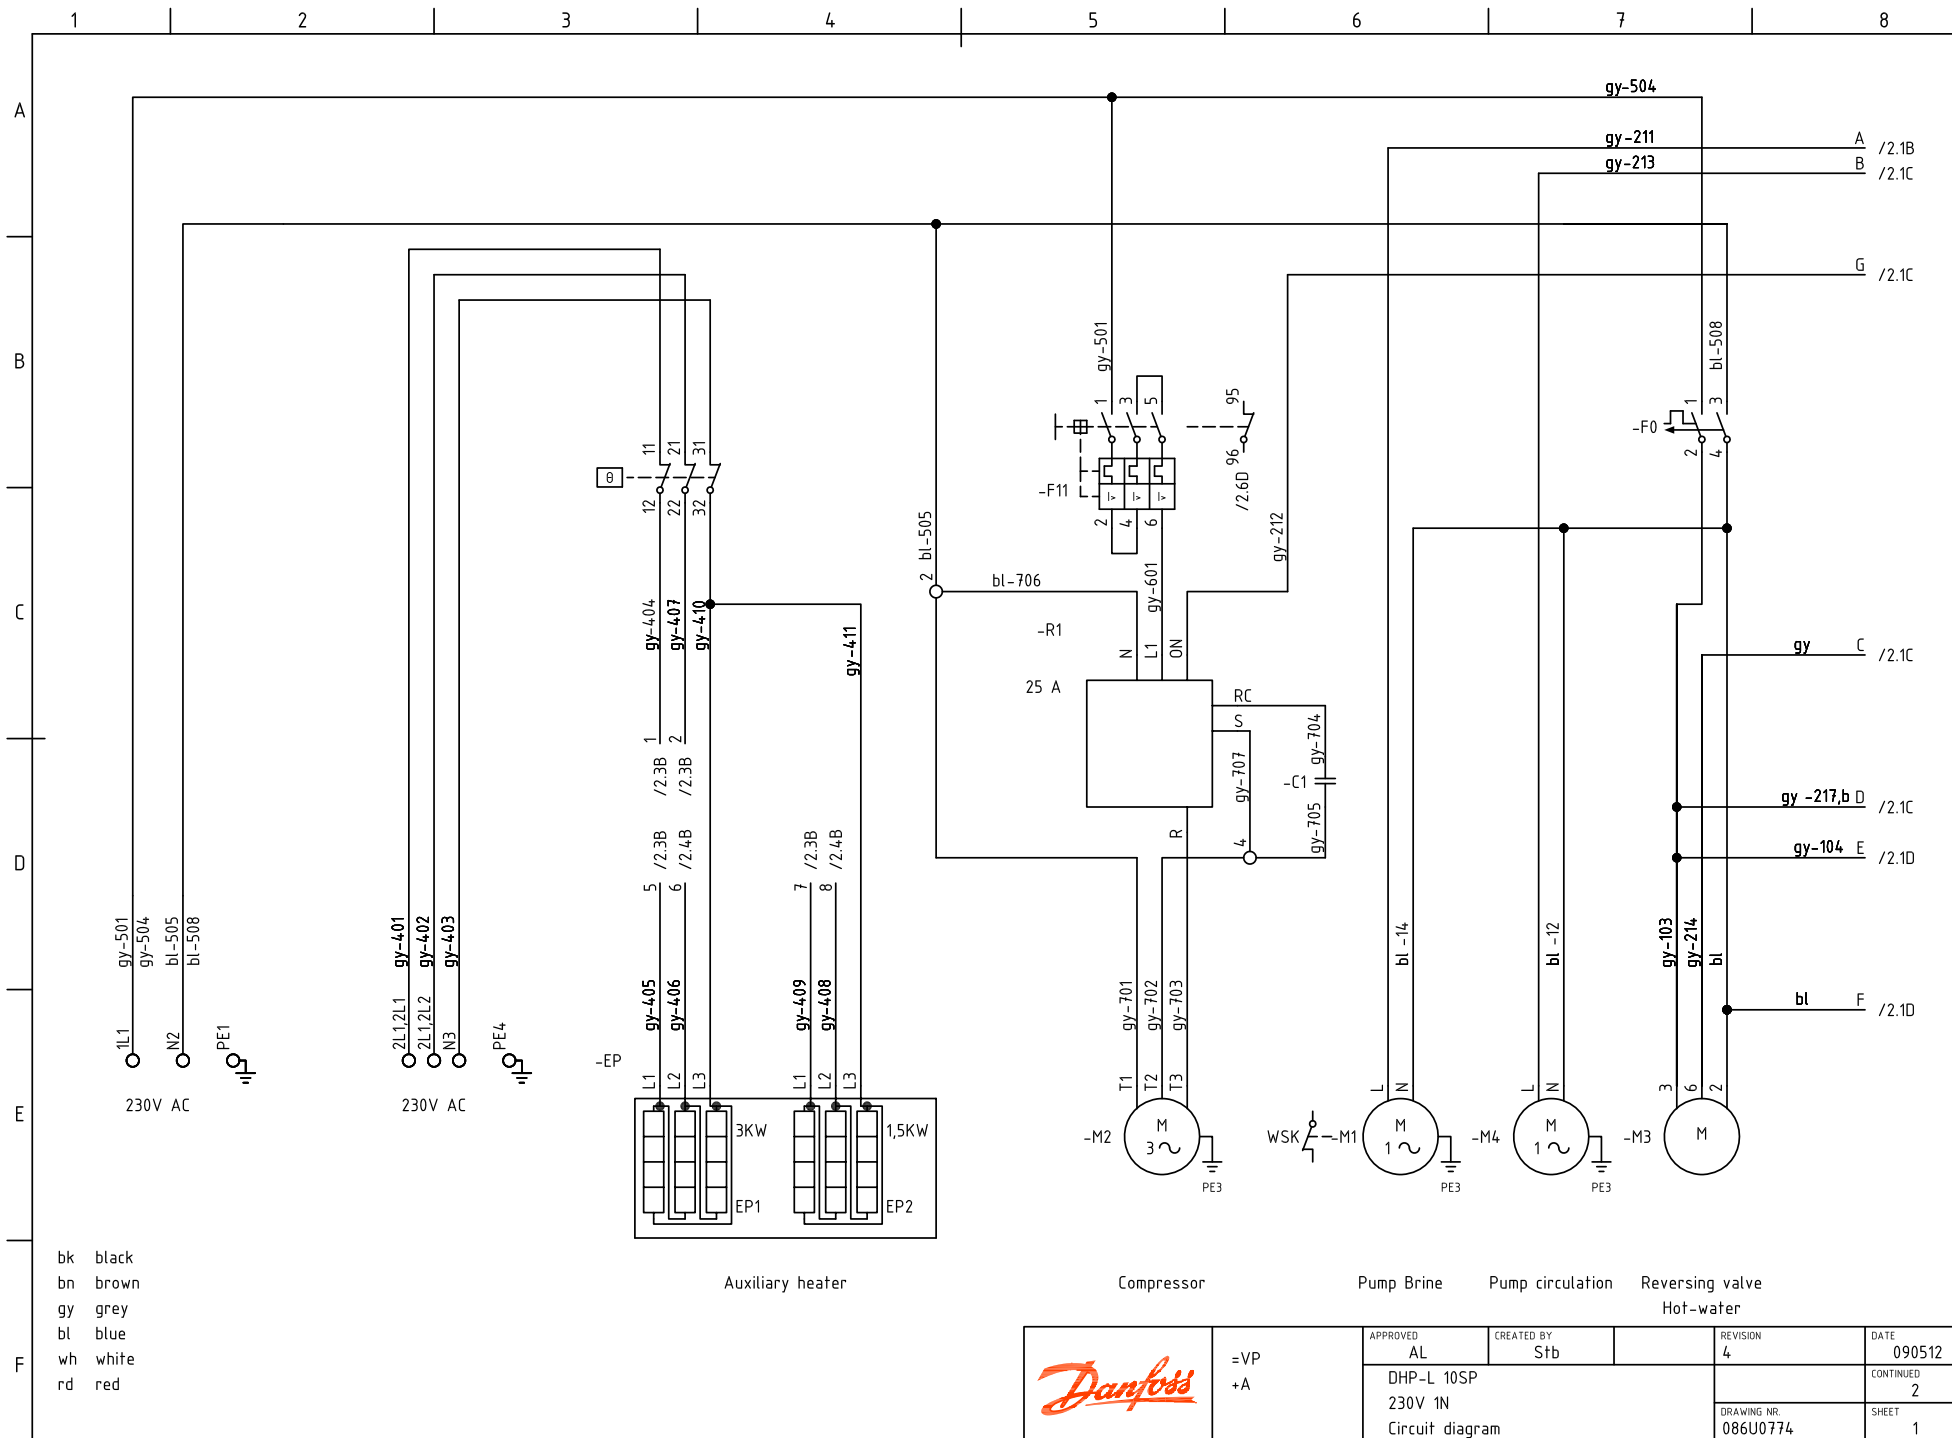



	=VP +A	APPROVED	CREATED BY		REVISION	DATE
		AL	Stb		4	090512
		DHP-L 10SP 230V 1N Circuit diagram			DRAWING NR. 086U0774	CONTINUED 2 SHEET 1

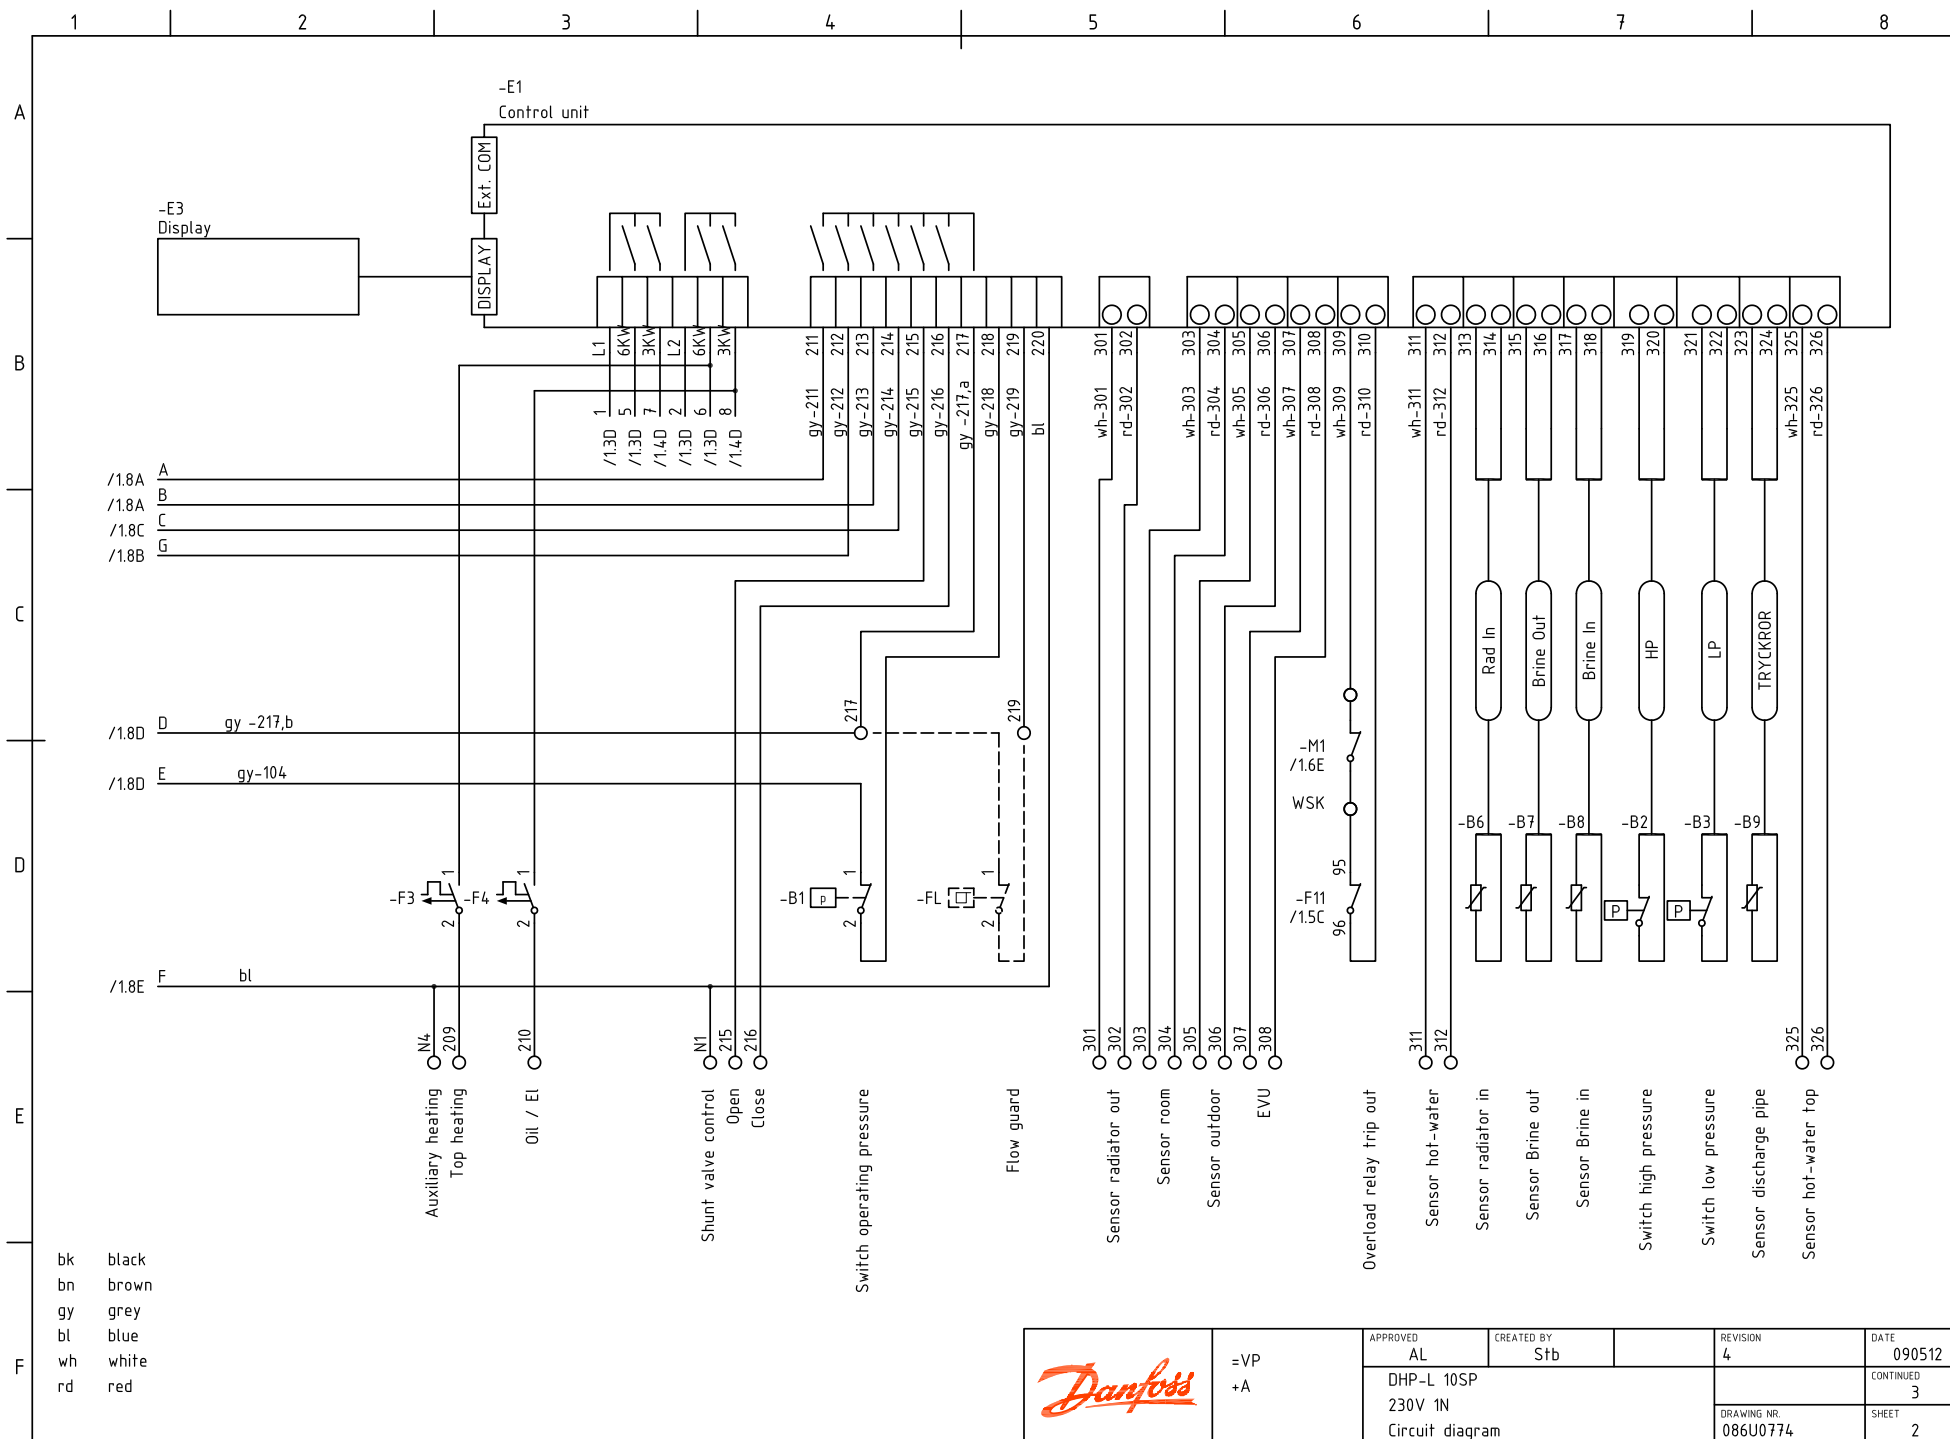

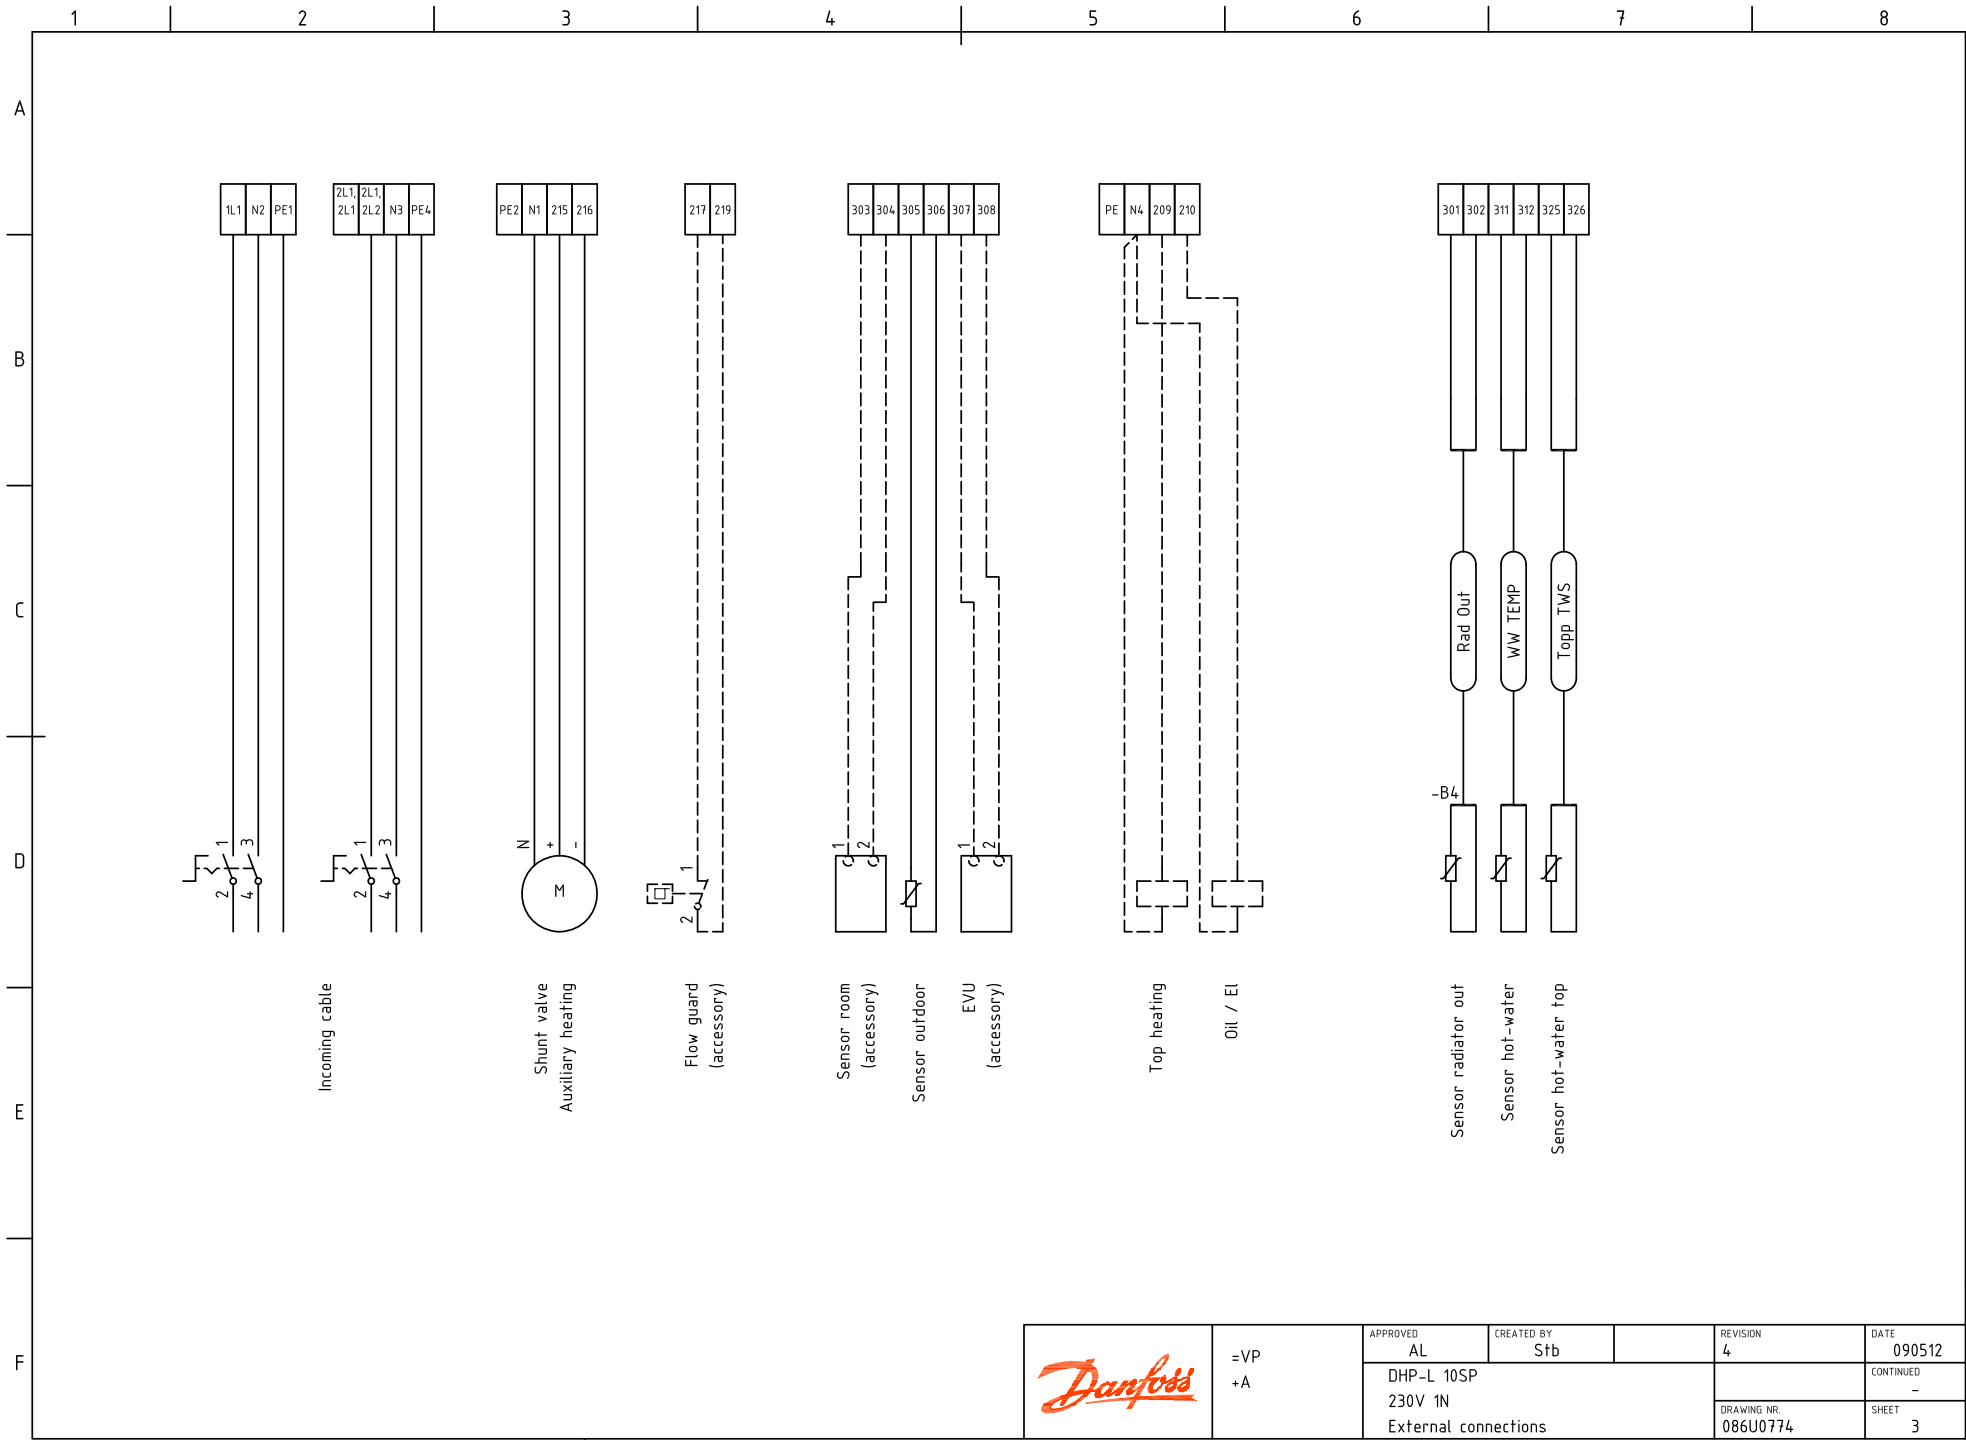
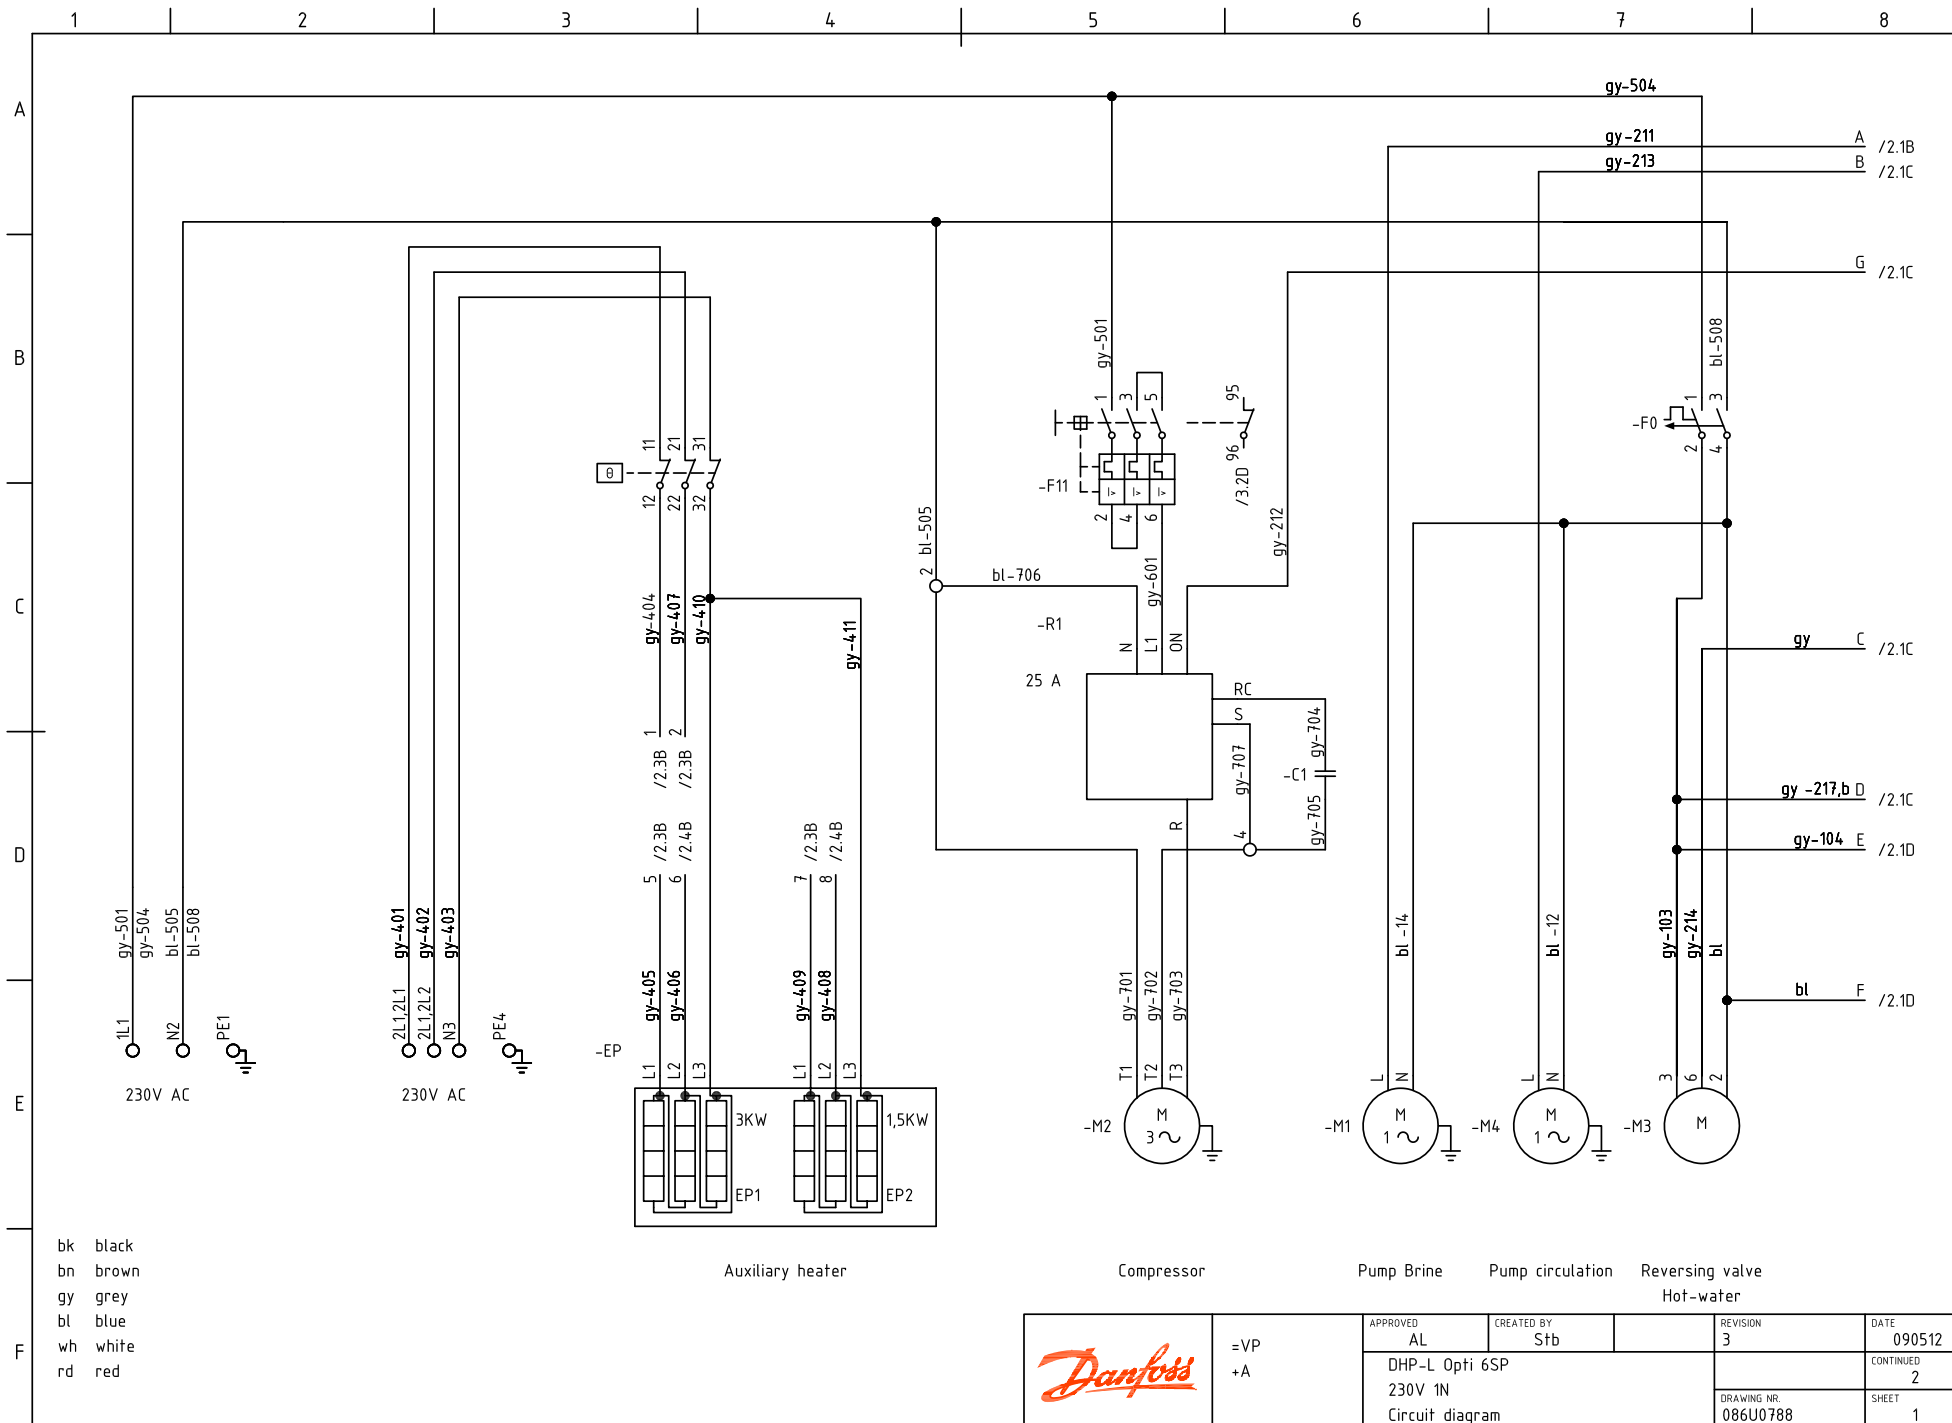


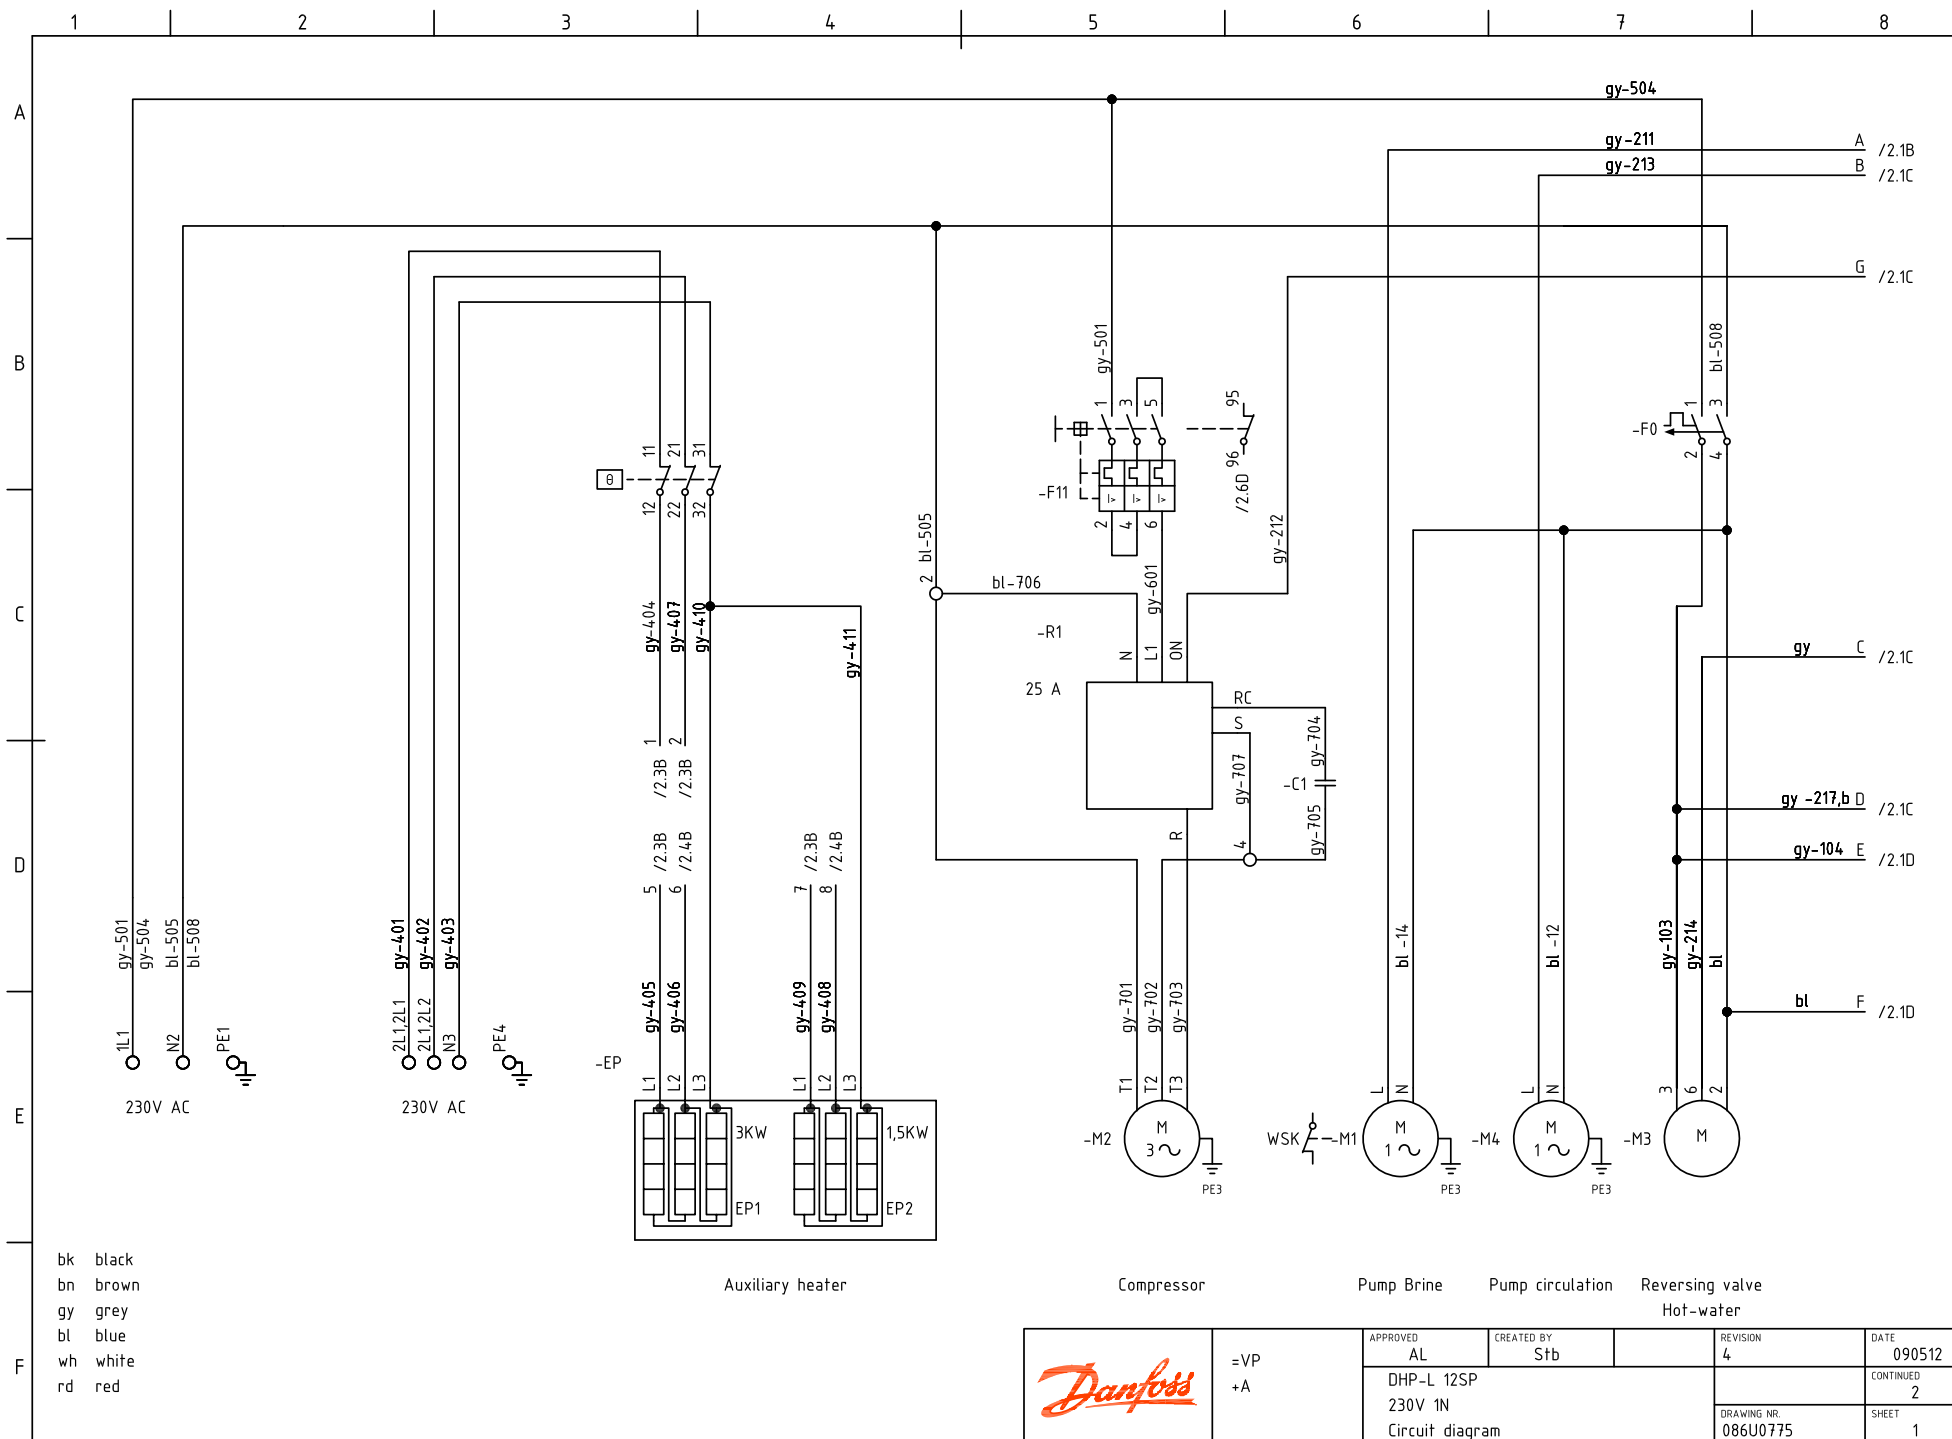

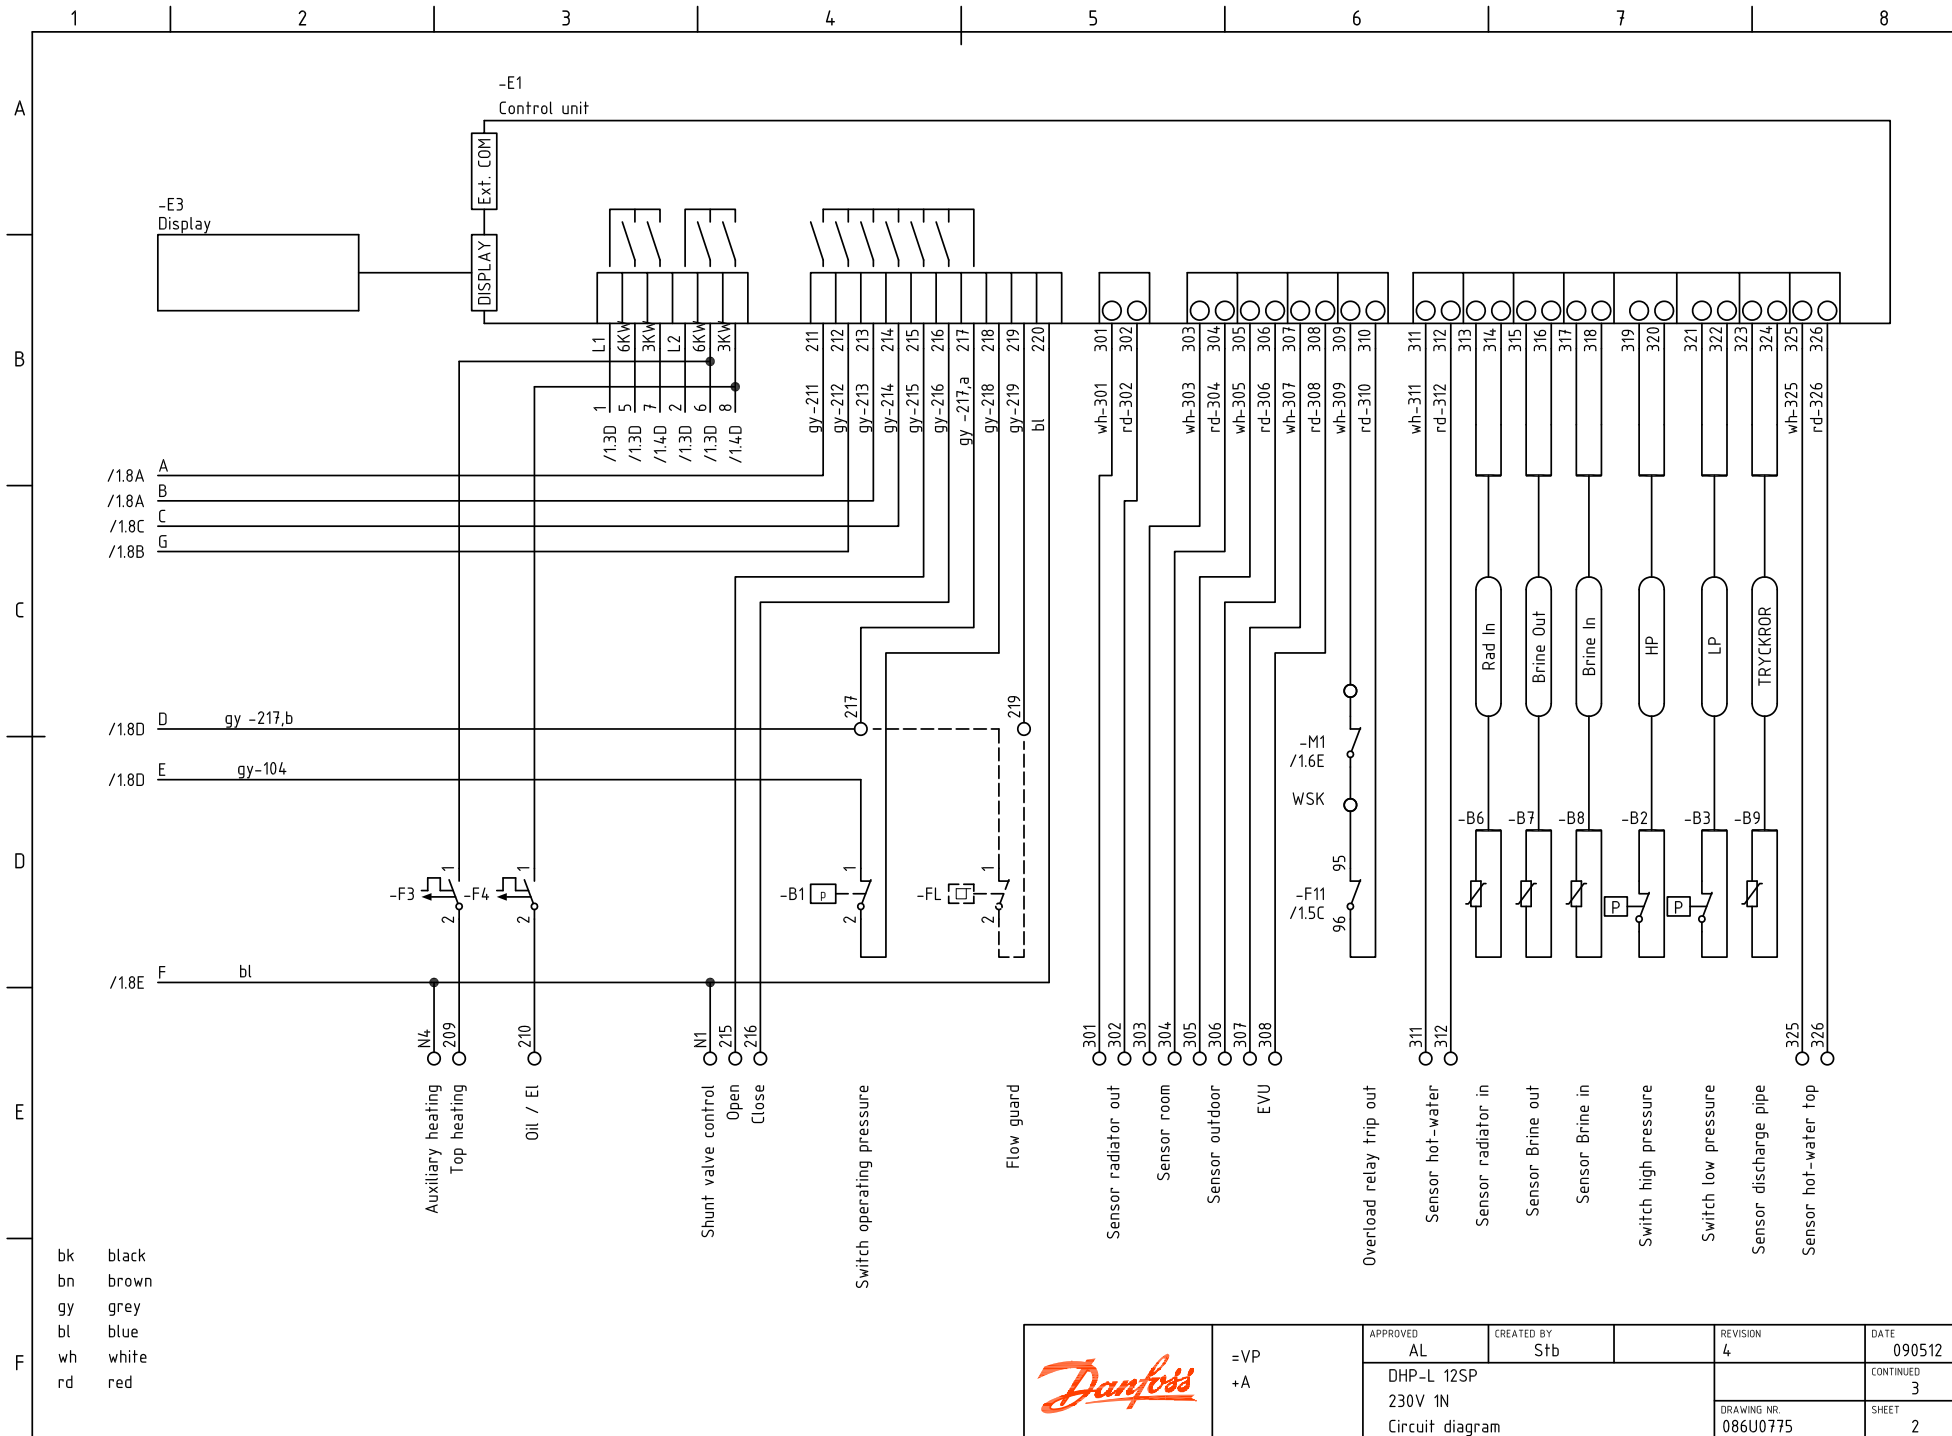


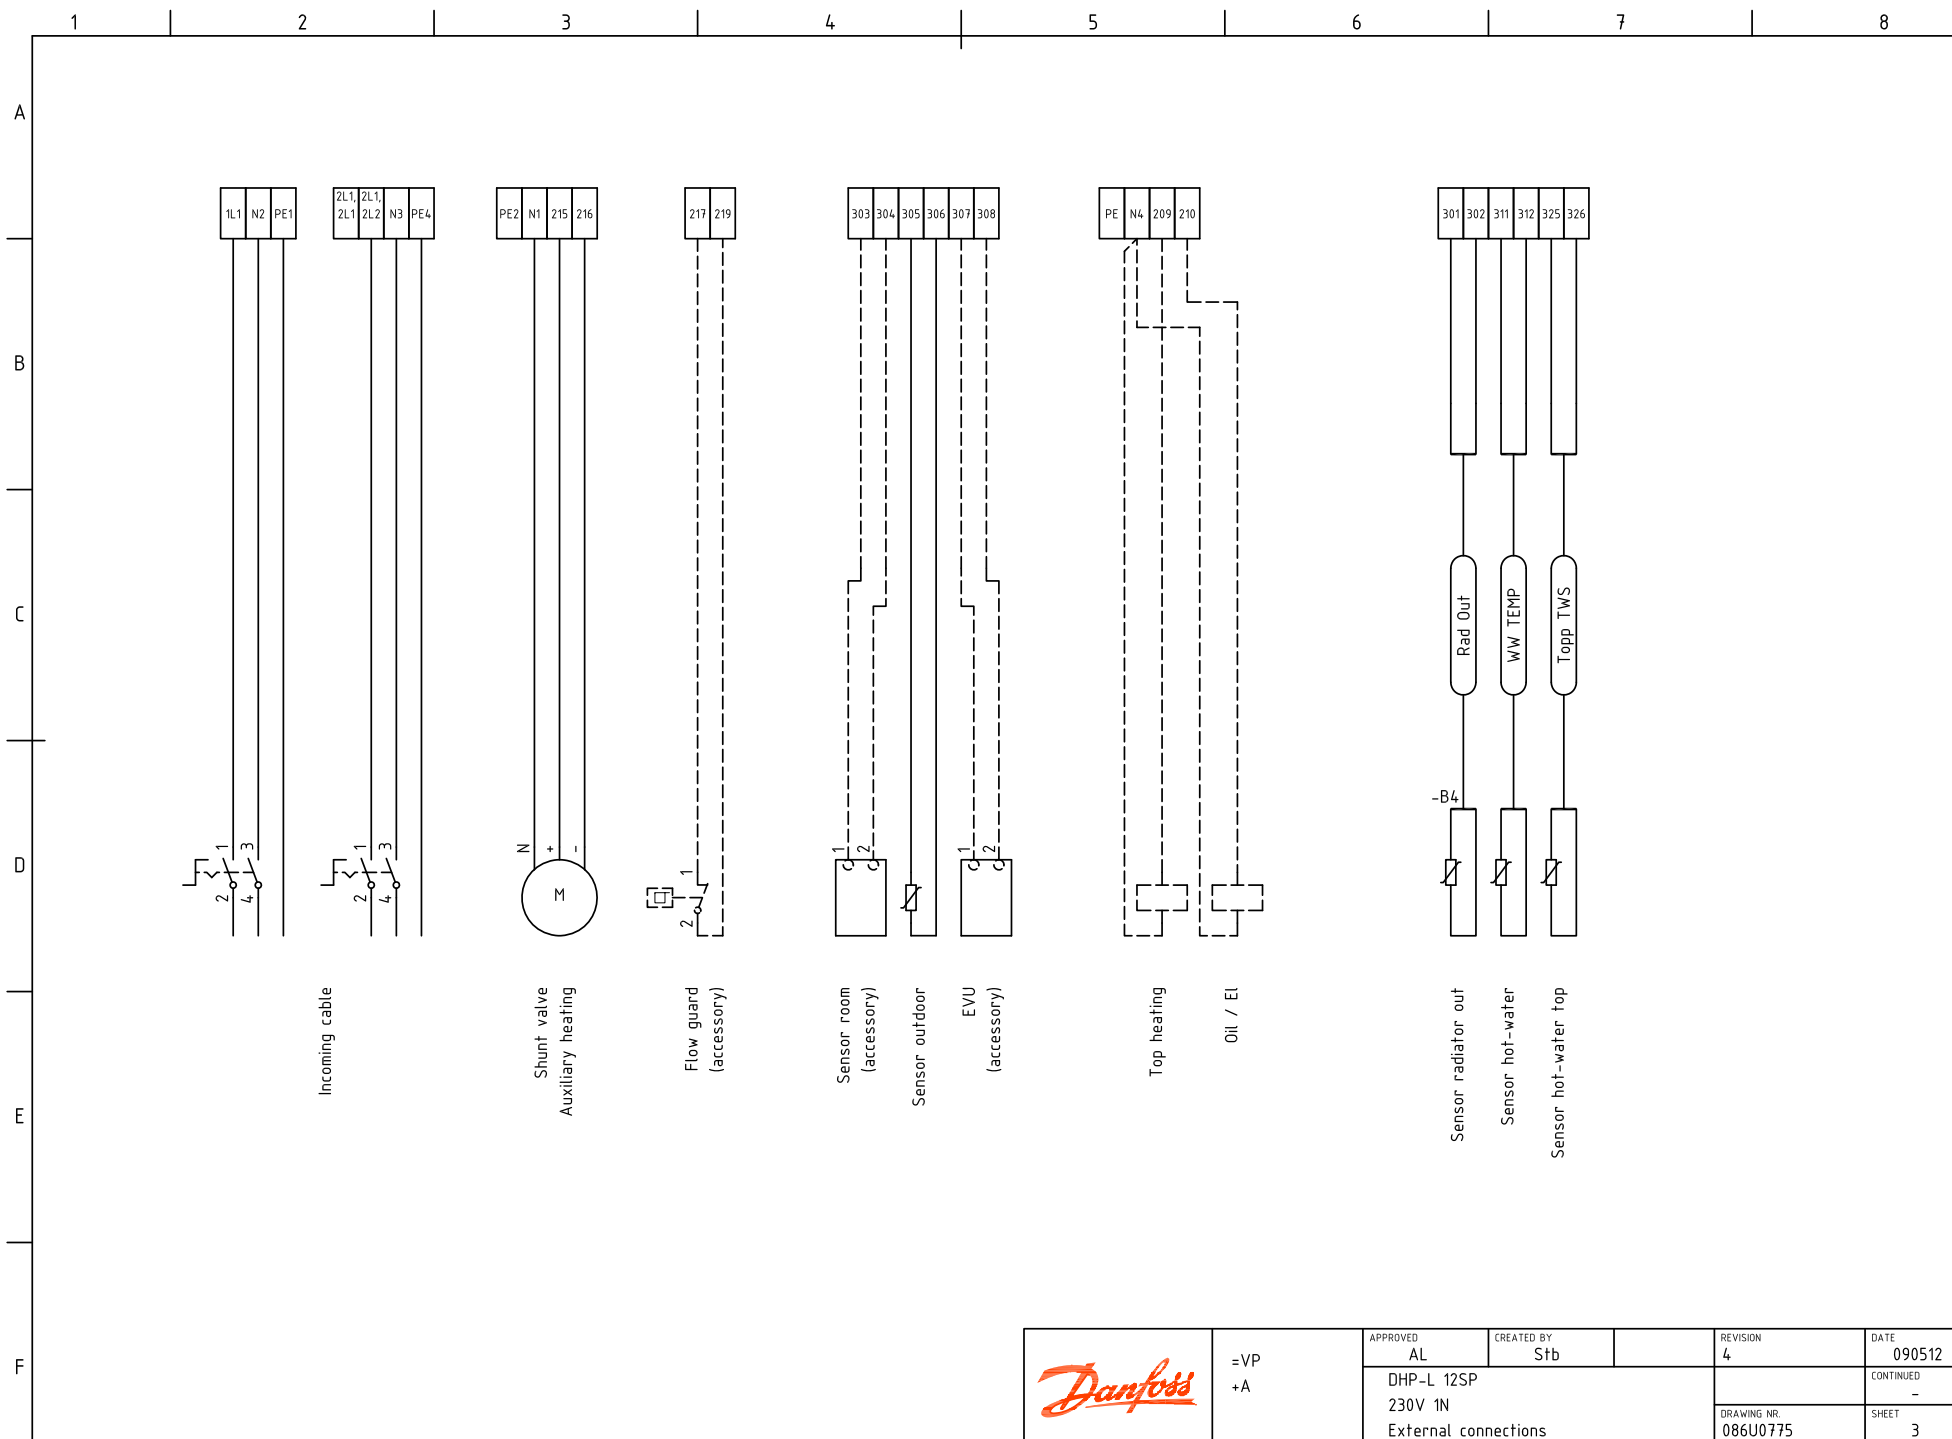



	=VP +A	APPROVED AL	CREATED BY Stb	REVISION 4	DATE 090512
		DHP-L 12SP			CONTINUED -
		230V 1N External connections			SHEET 3







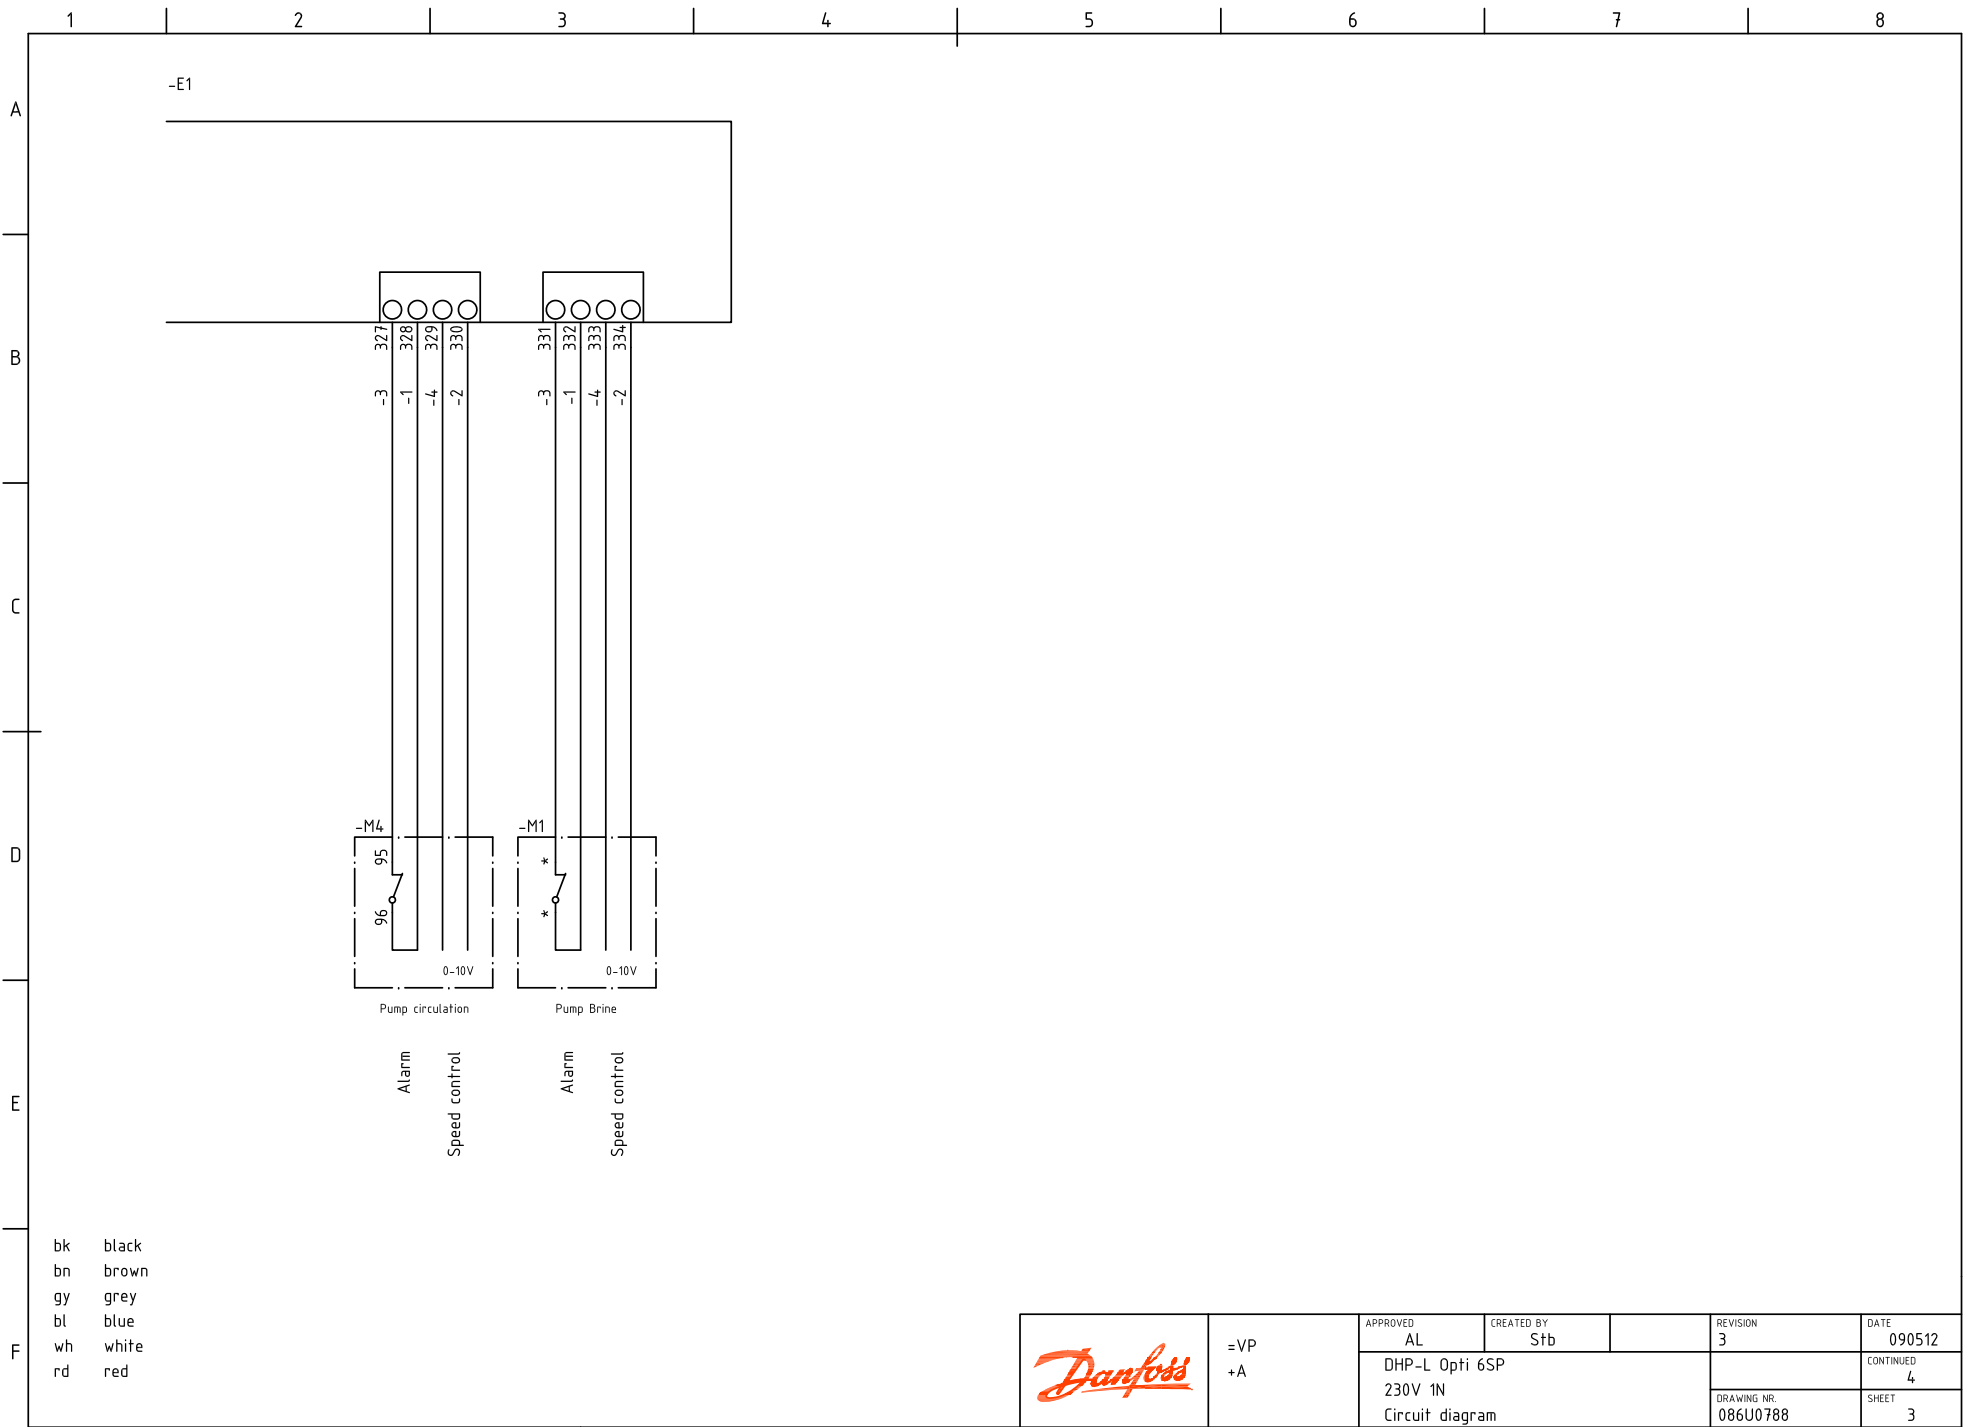


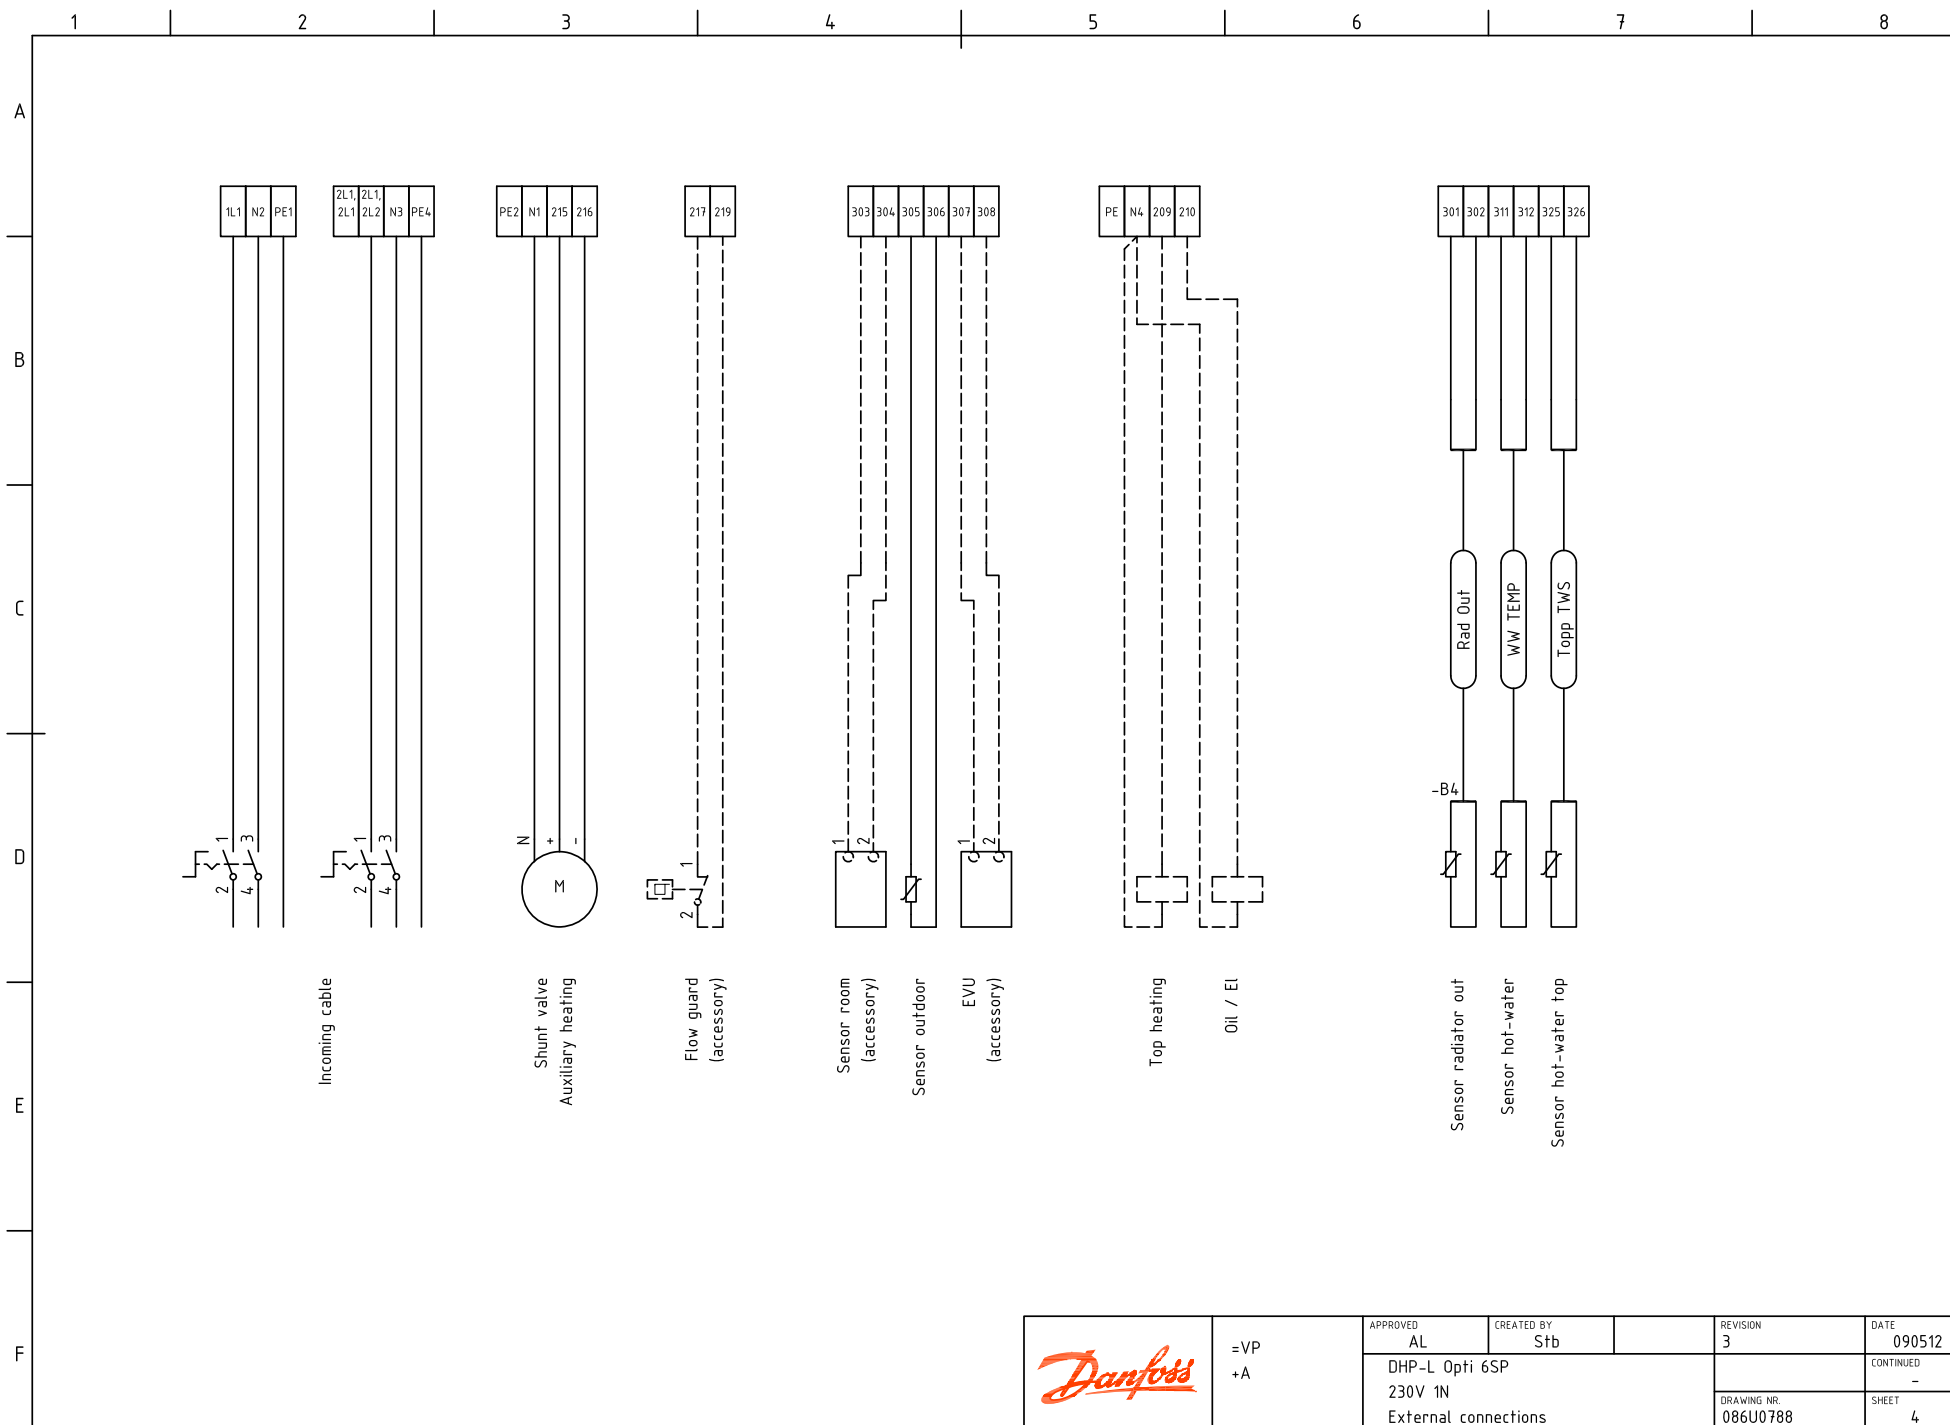


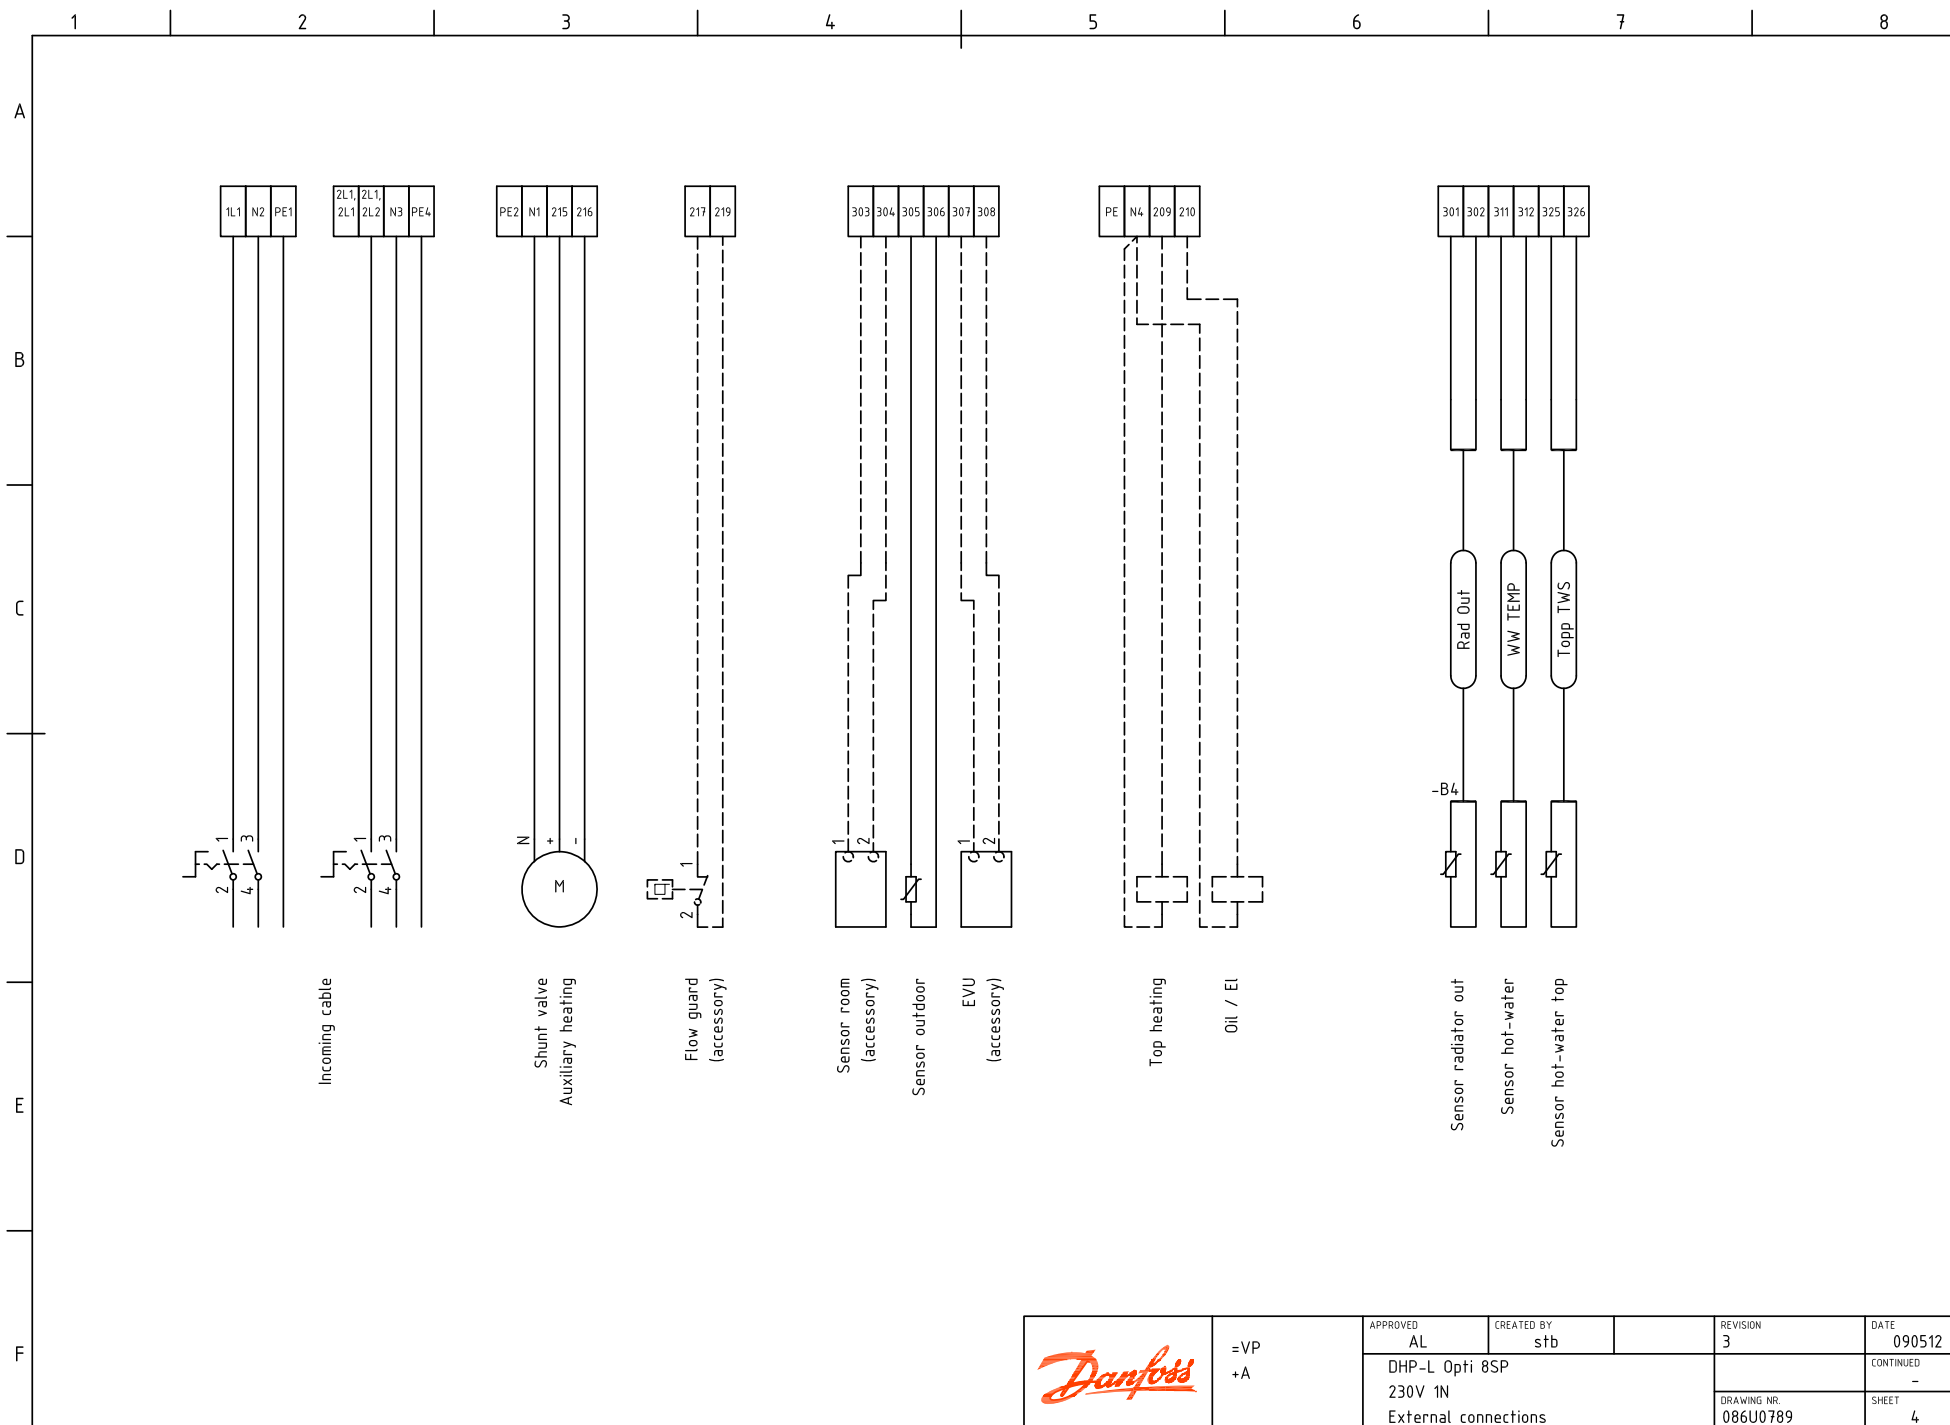
	=VP +A	APPROVED	CREATED BY	REVISION	DATE
		AL	Stb	3	090512
		DHP-L Opti 6SP 230V 1N External connections			CONTINUED -
				DRAWING NR. 086U0788	SHEET 4

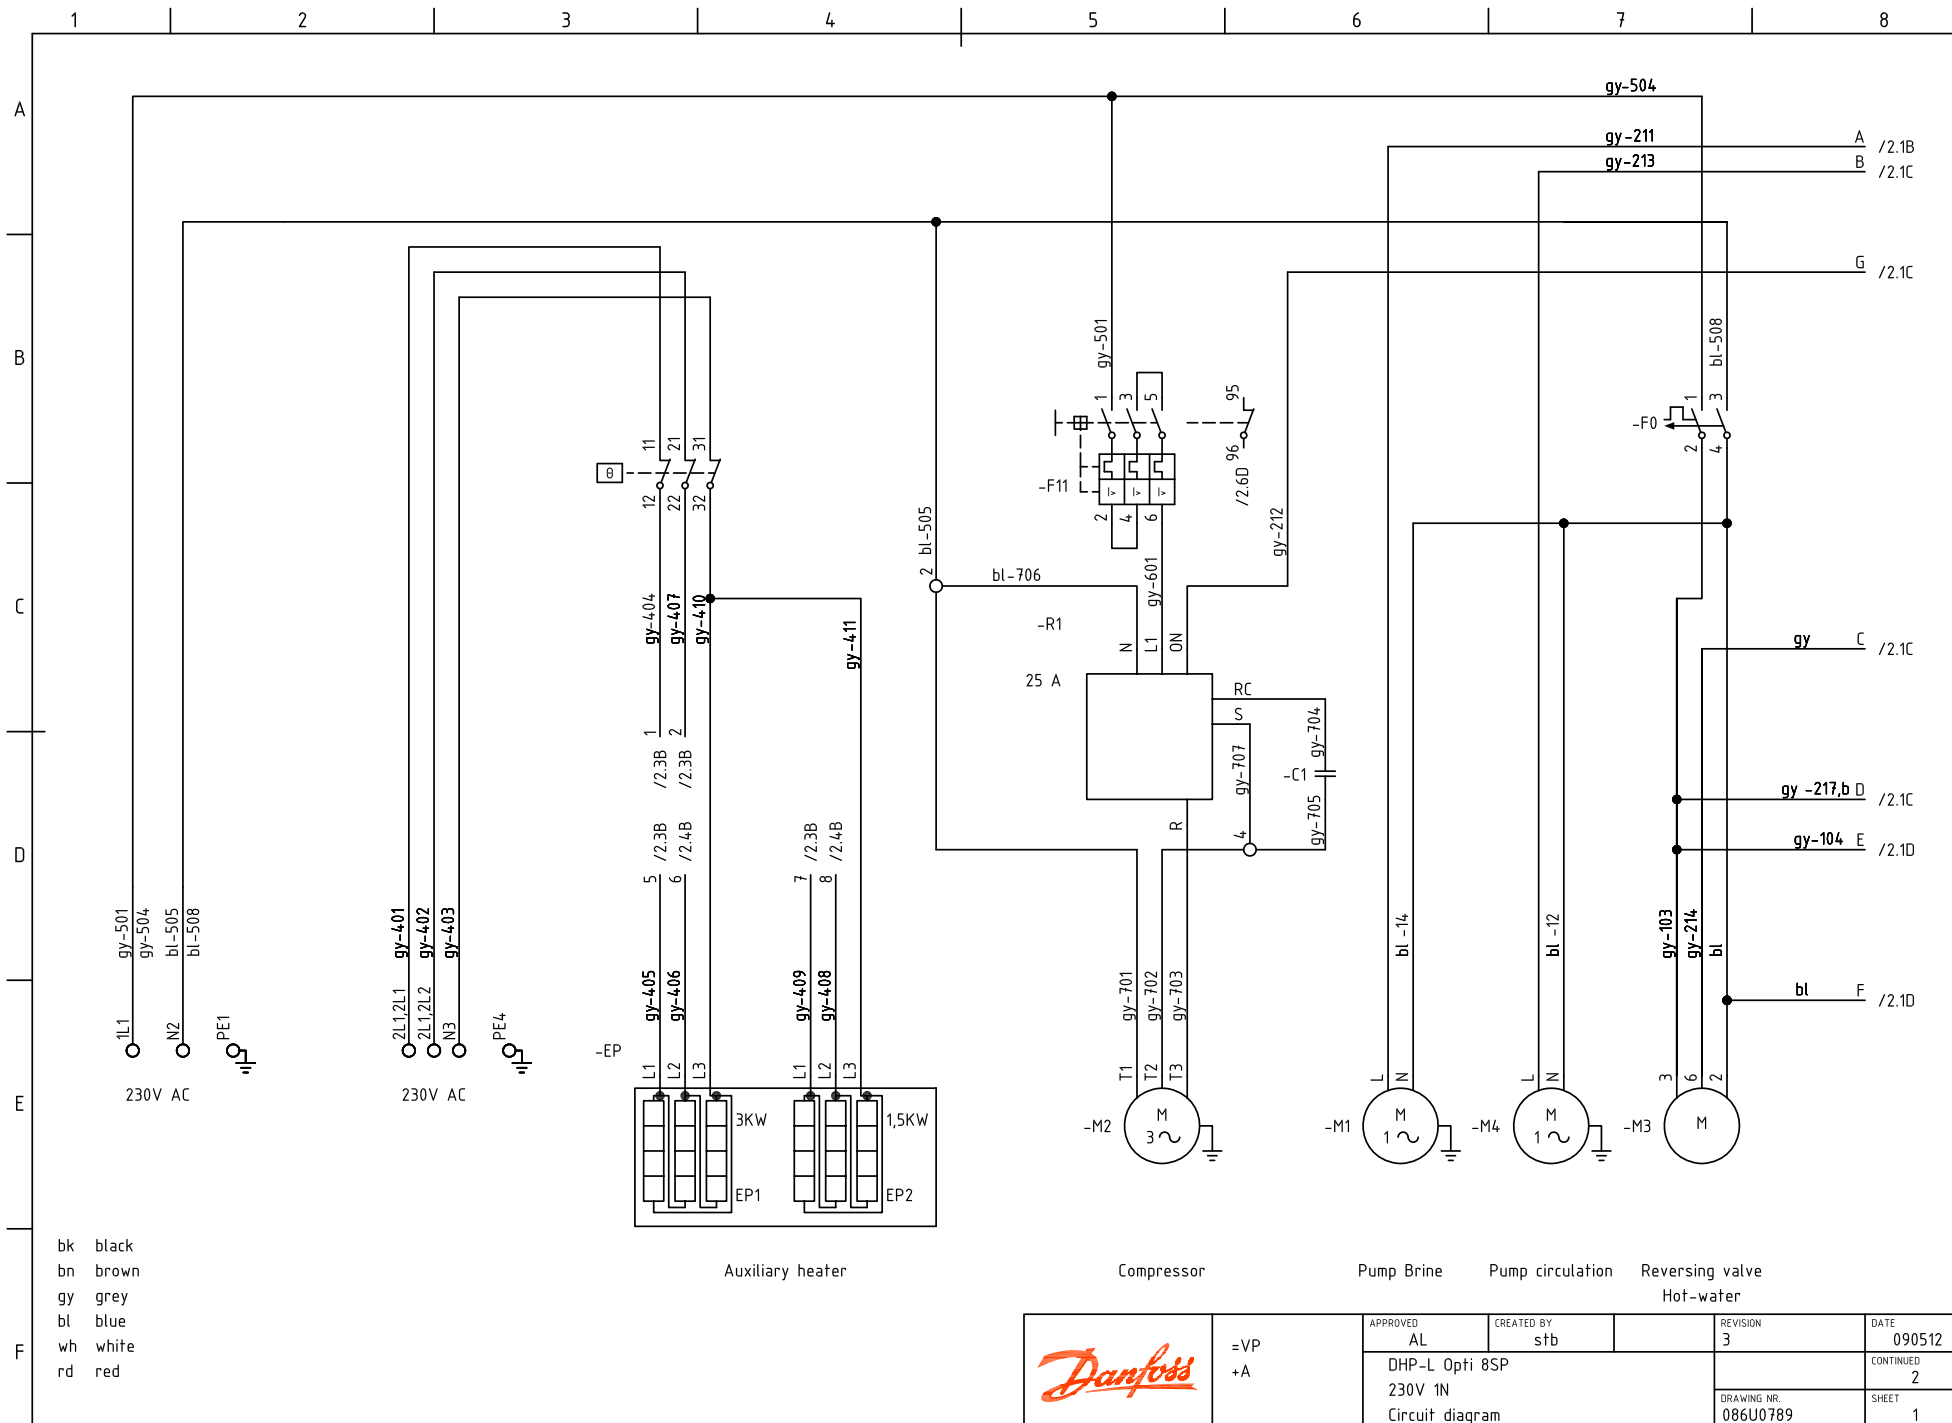

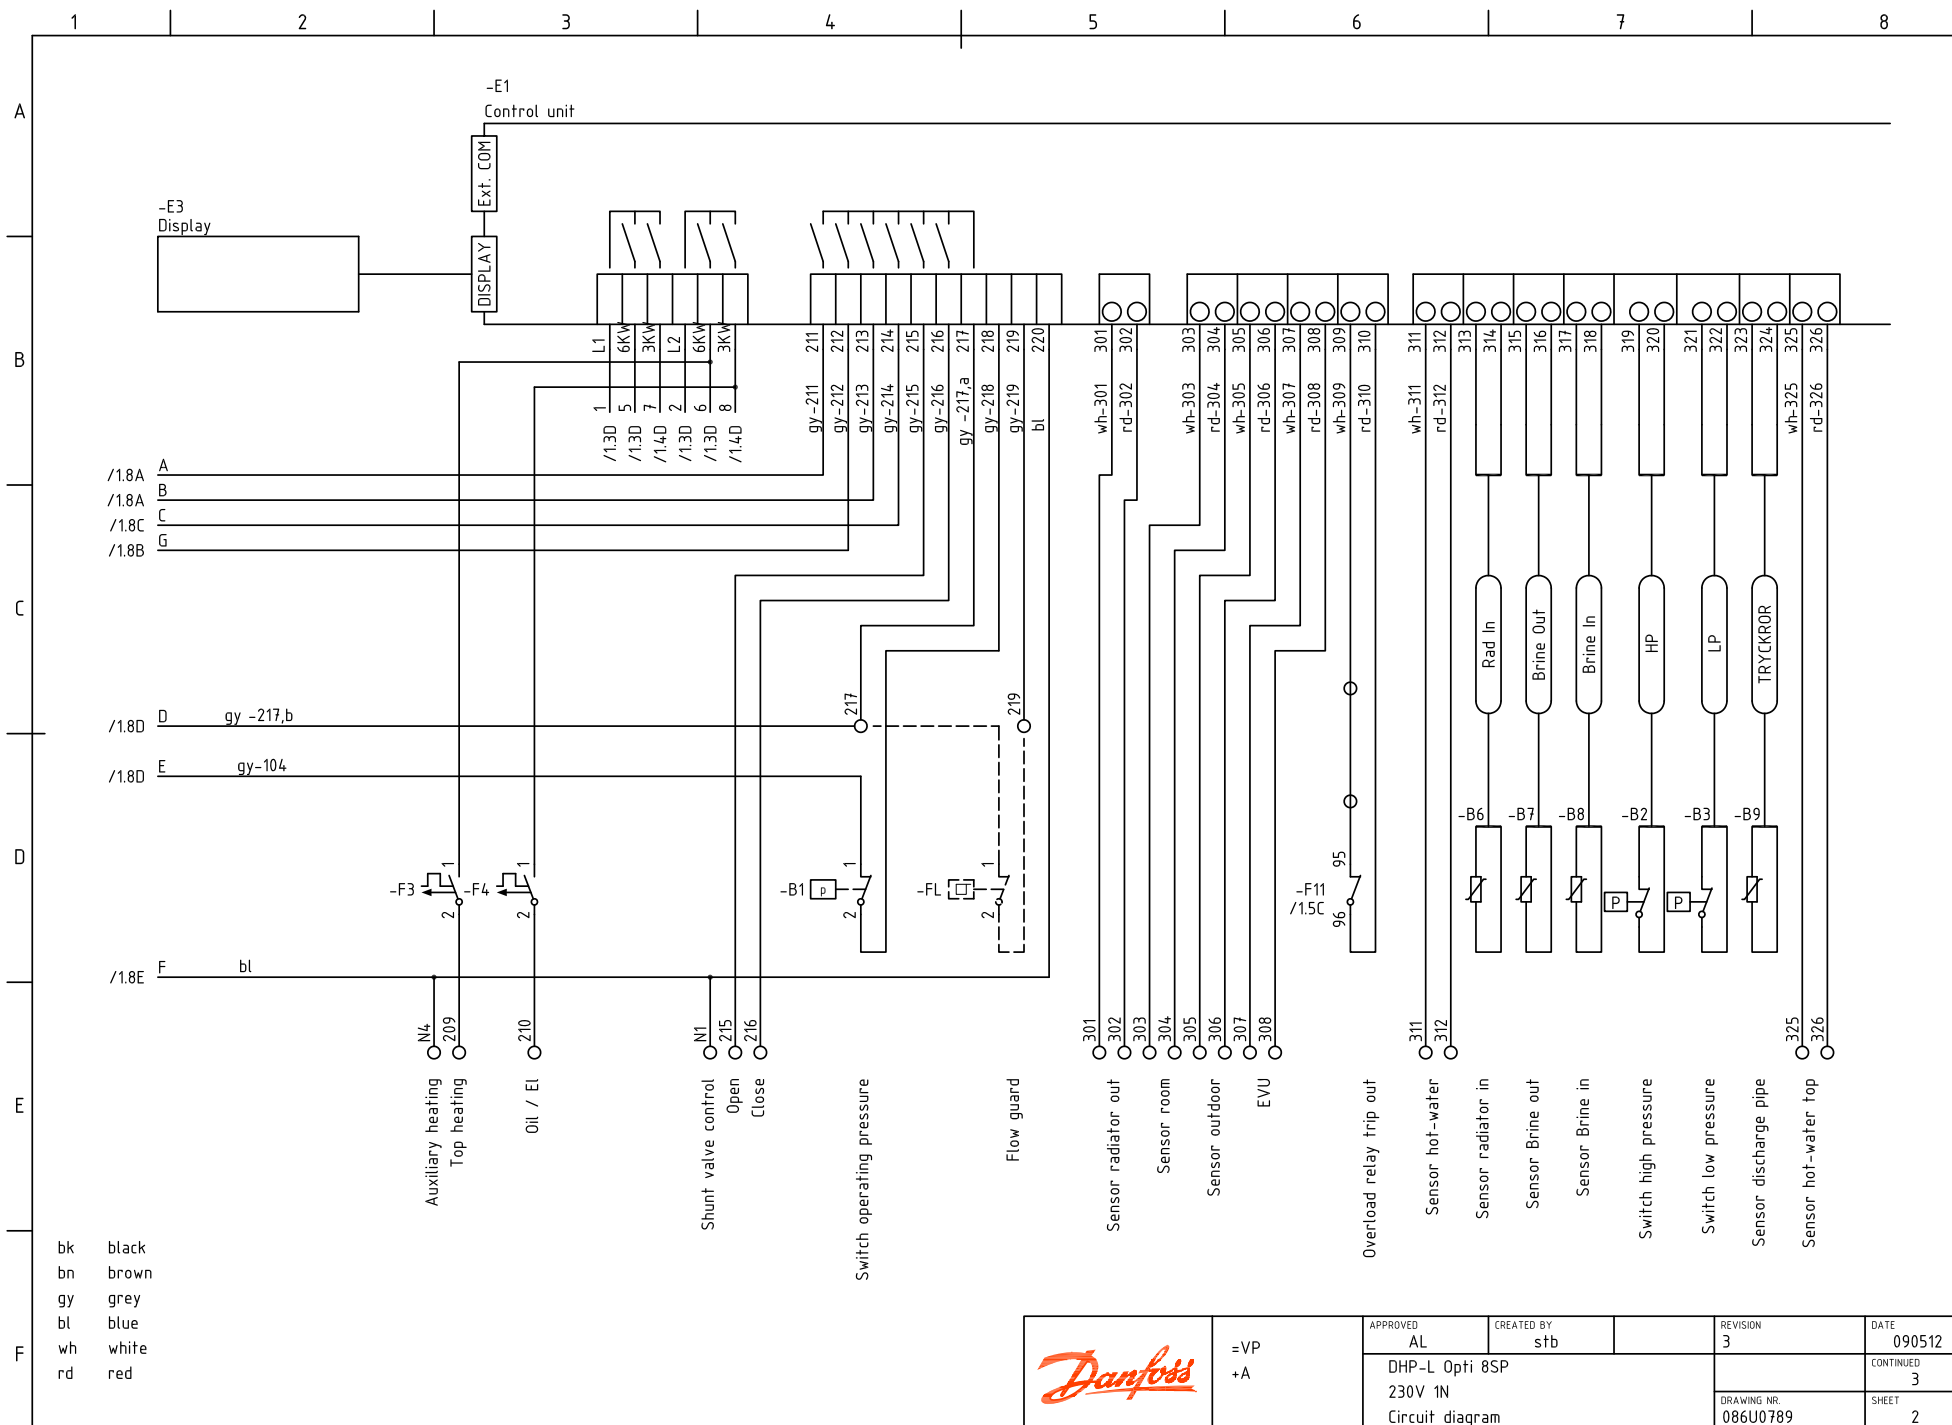
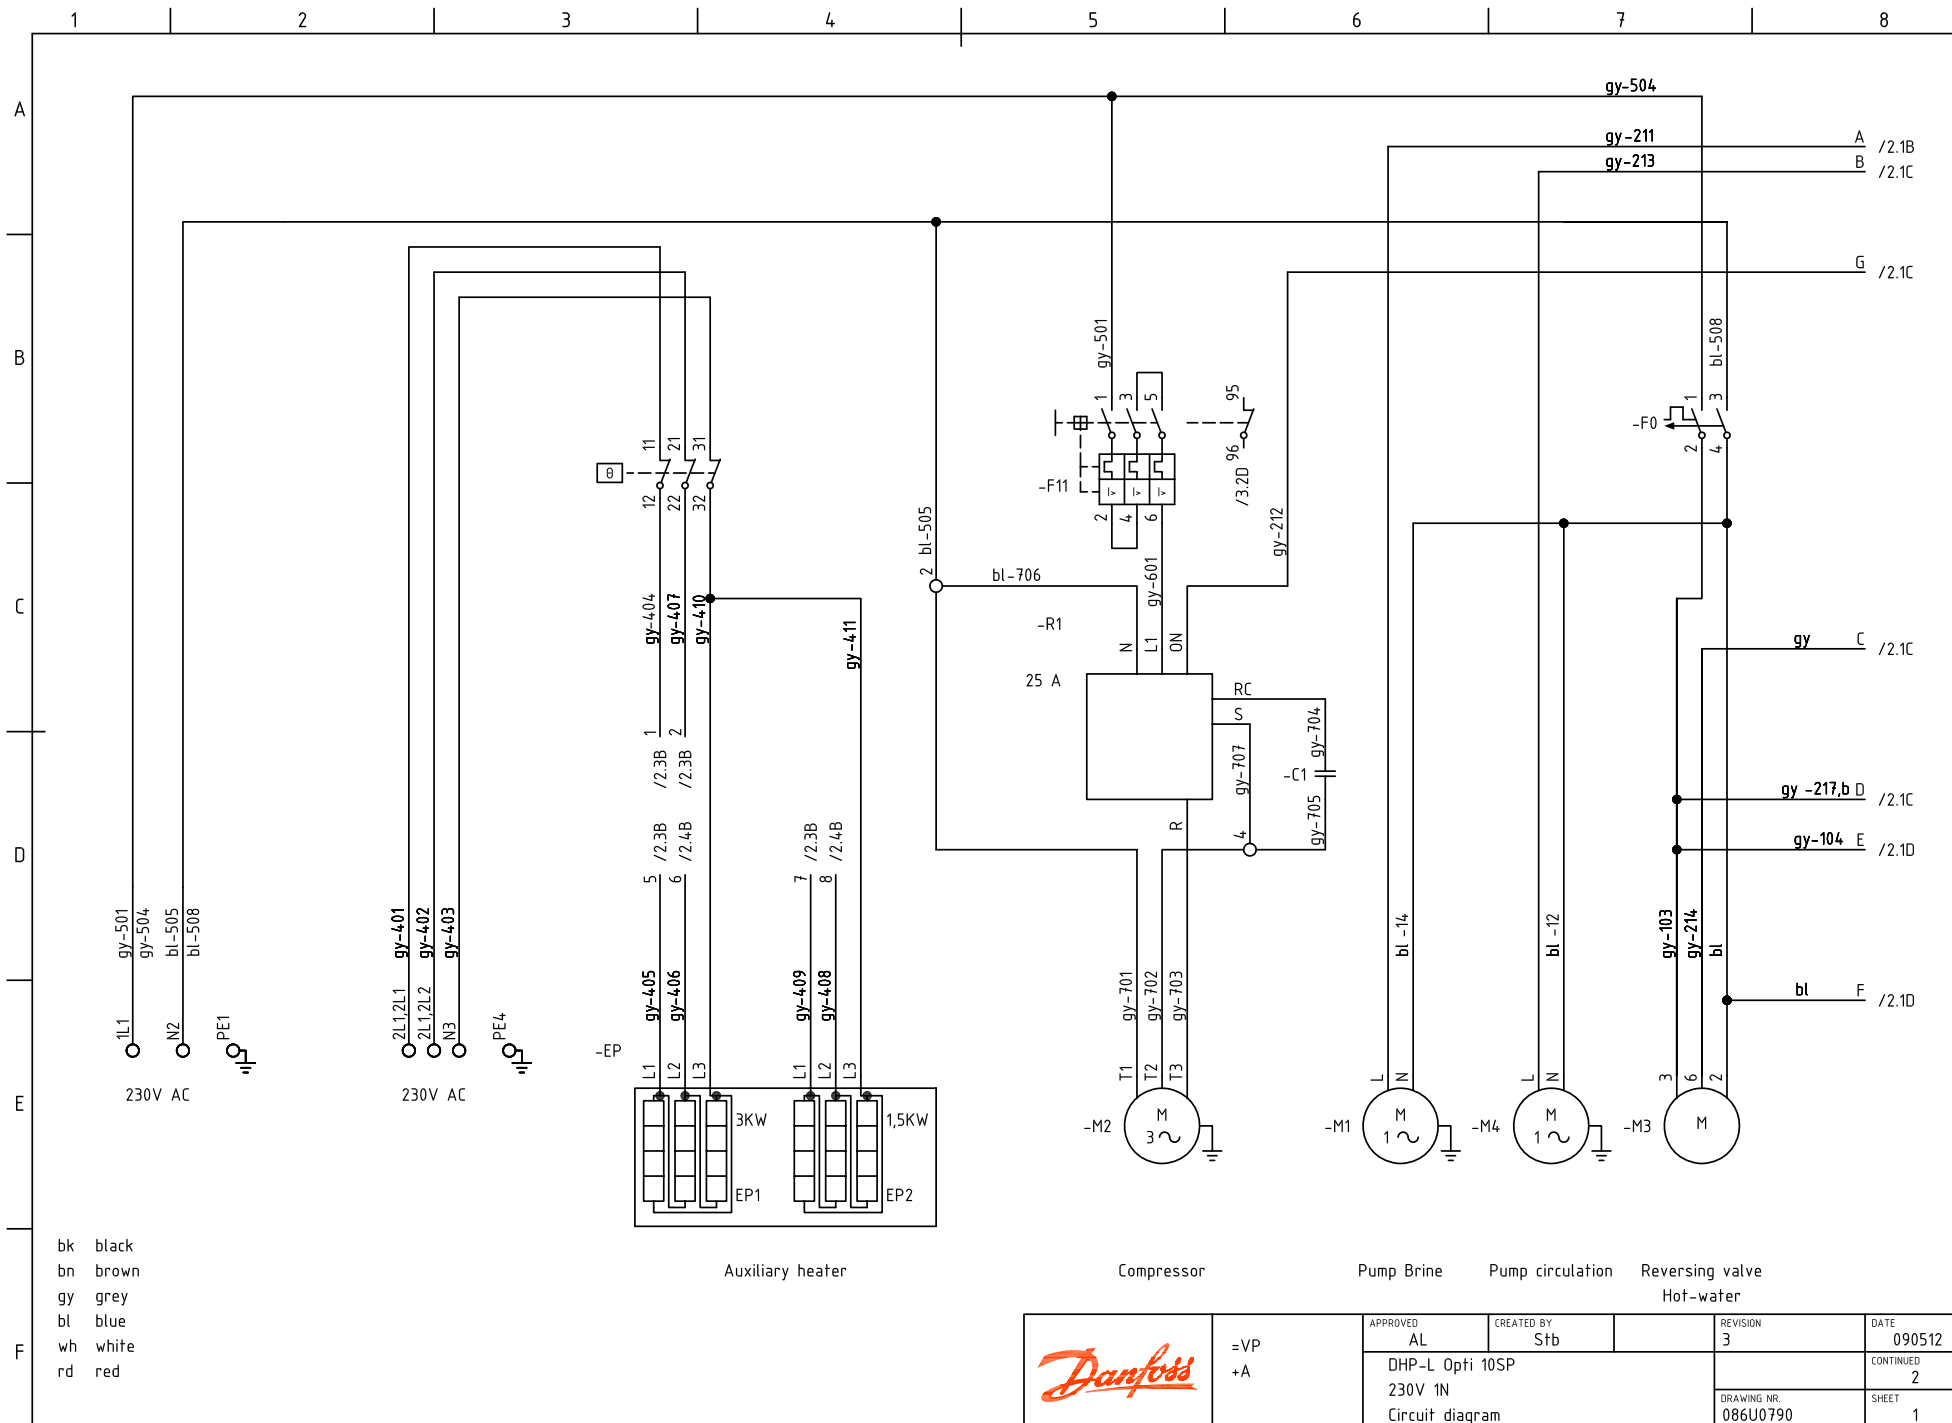


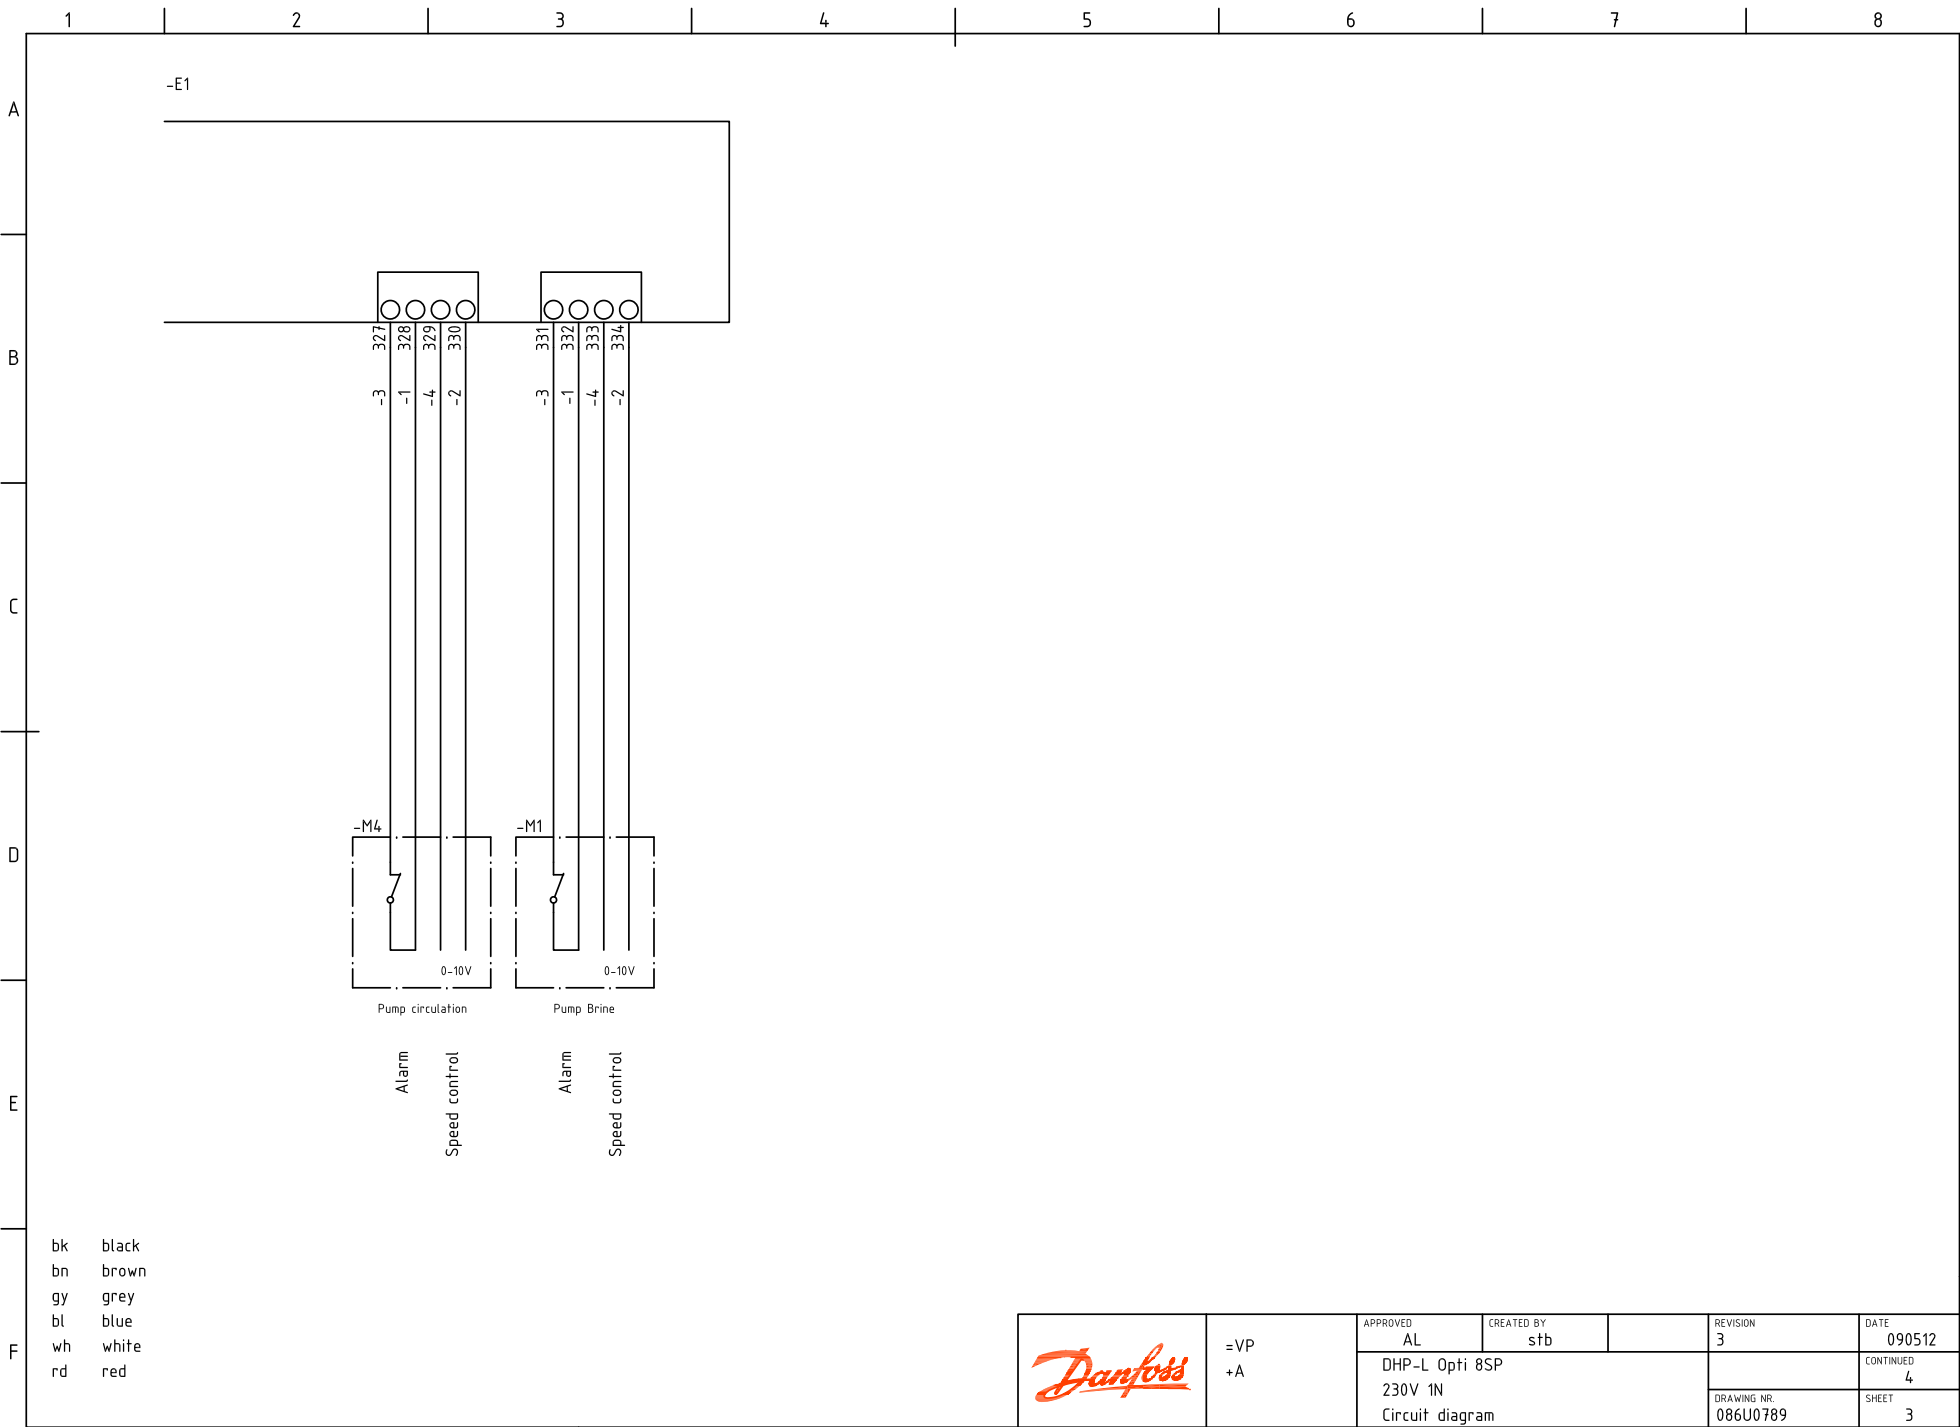



	=VP +A	APPROVED AL	CREATED BY stb	REVISION 3	DATE 090512
		DHP-L Opti 8SP 230V 1N Circuit diagram			CONTINUED 4
					SHEET 3





	=VP +A	APPROVED AL	CREATED BY stb	REVISION 3	DATE 090512
		DHP-L Opti 8SP 230V 1N External connections			CONTINUED -
					SHEET 4







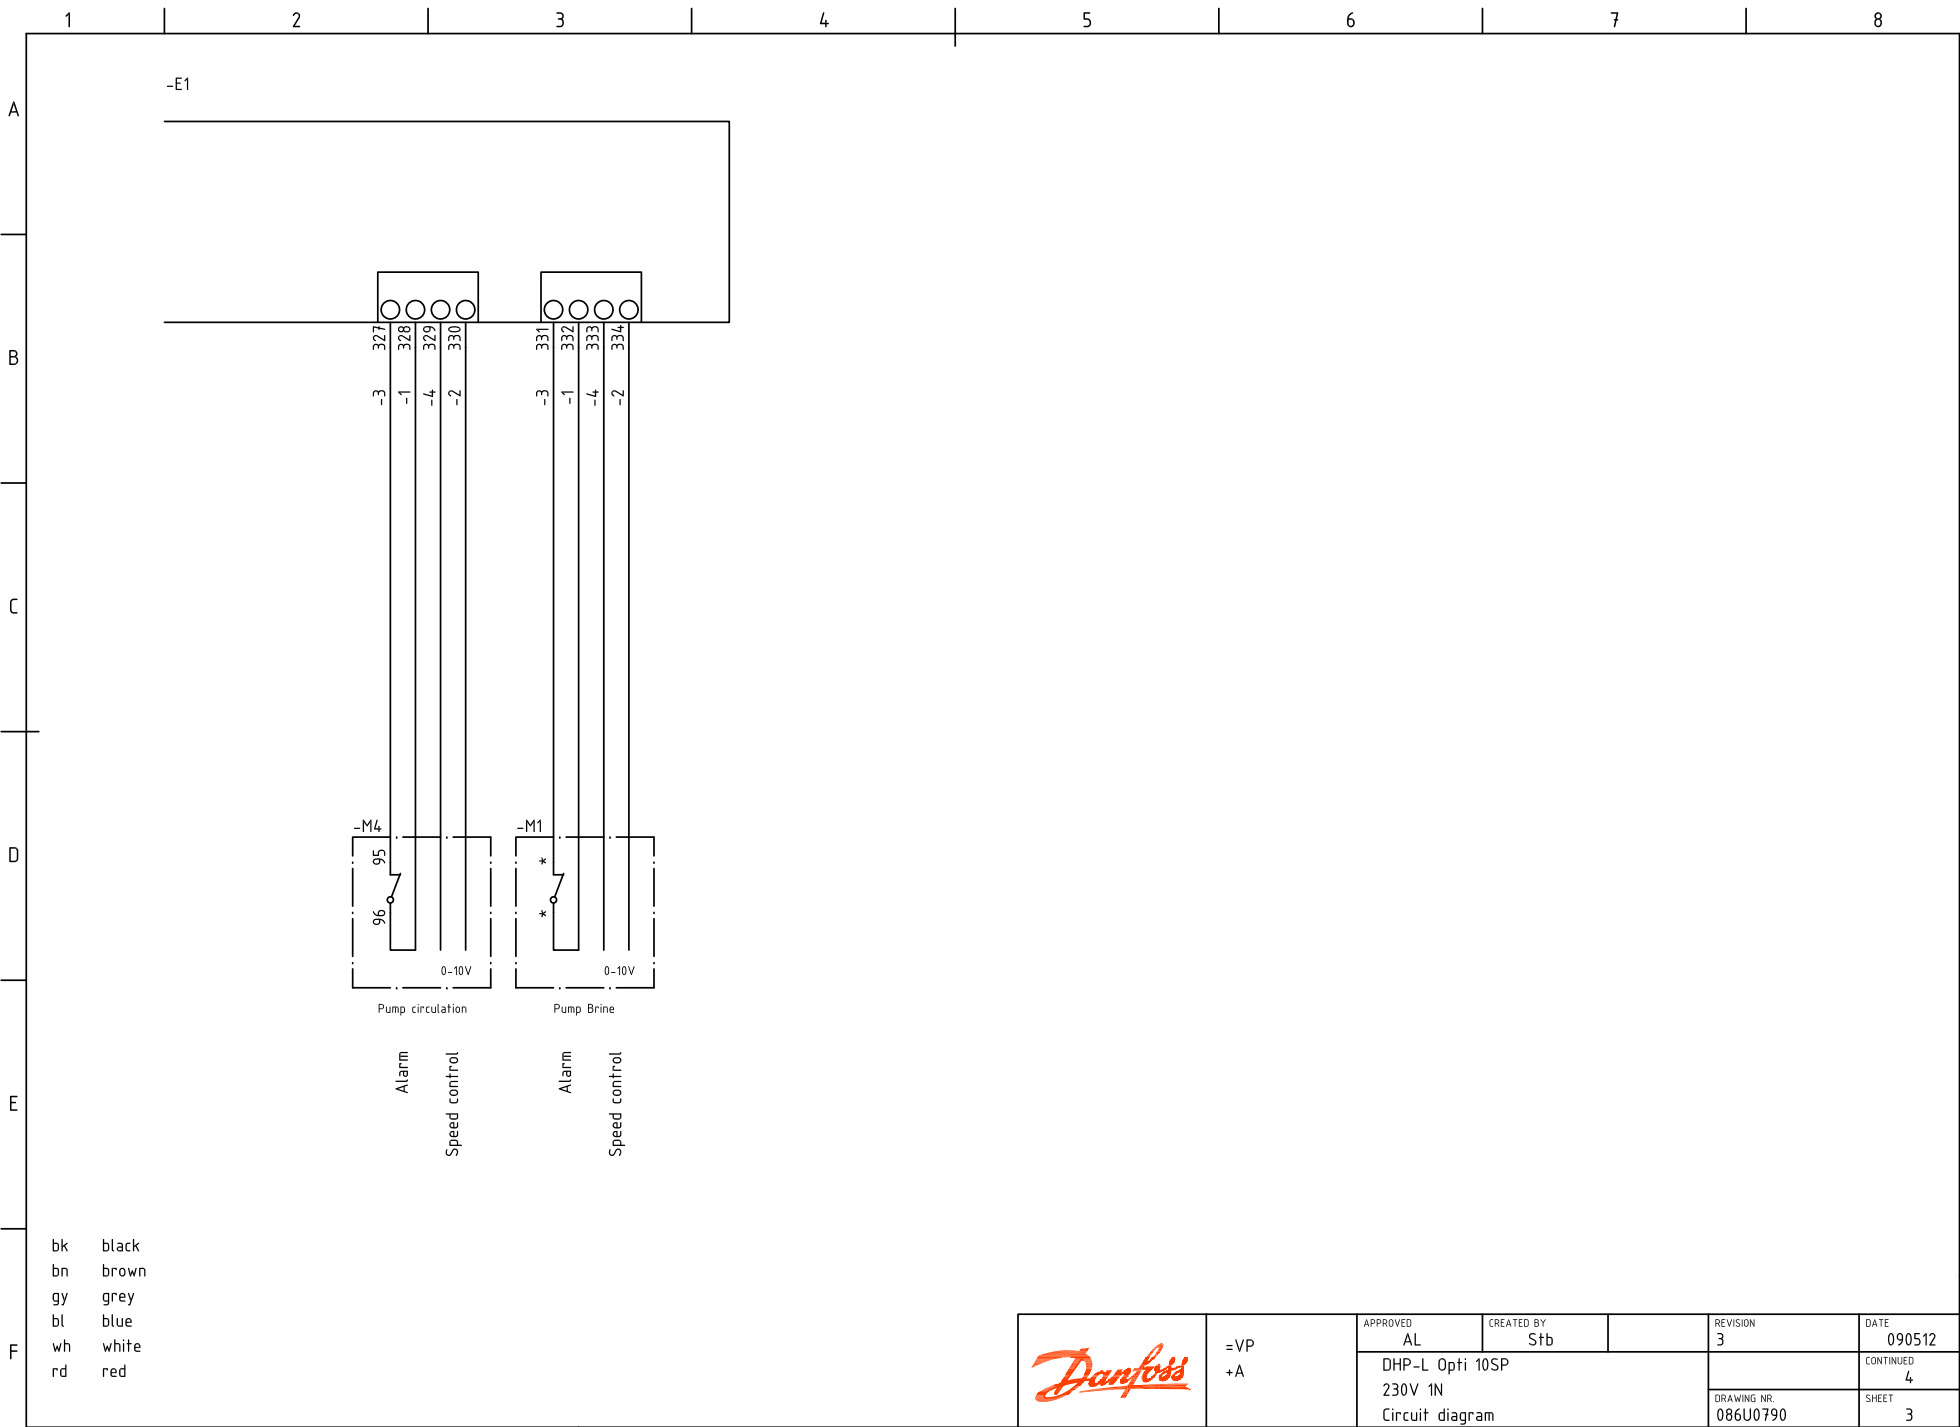


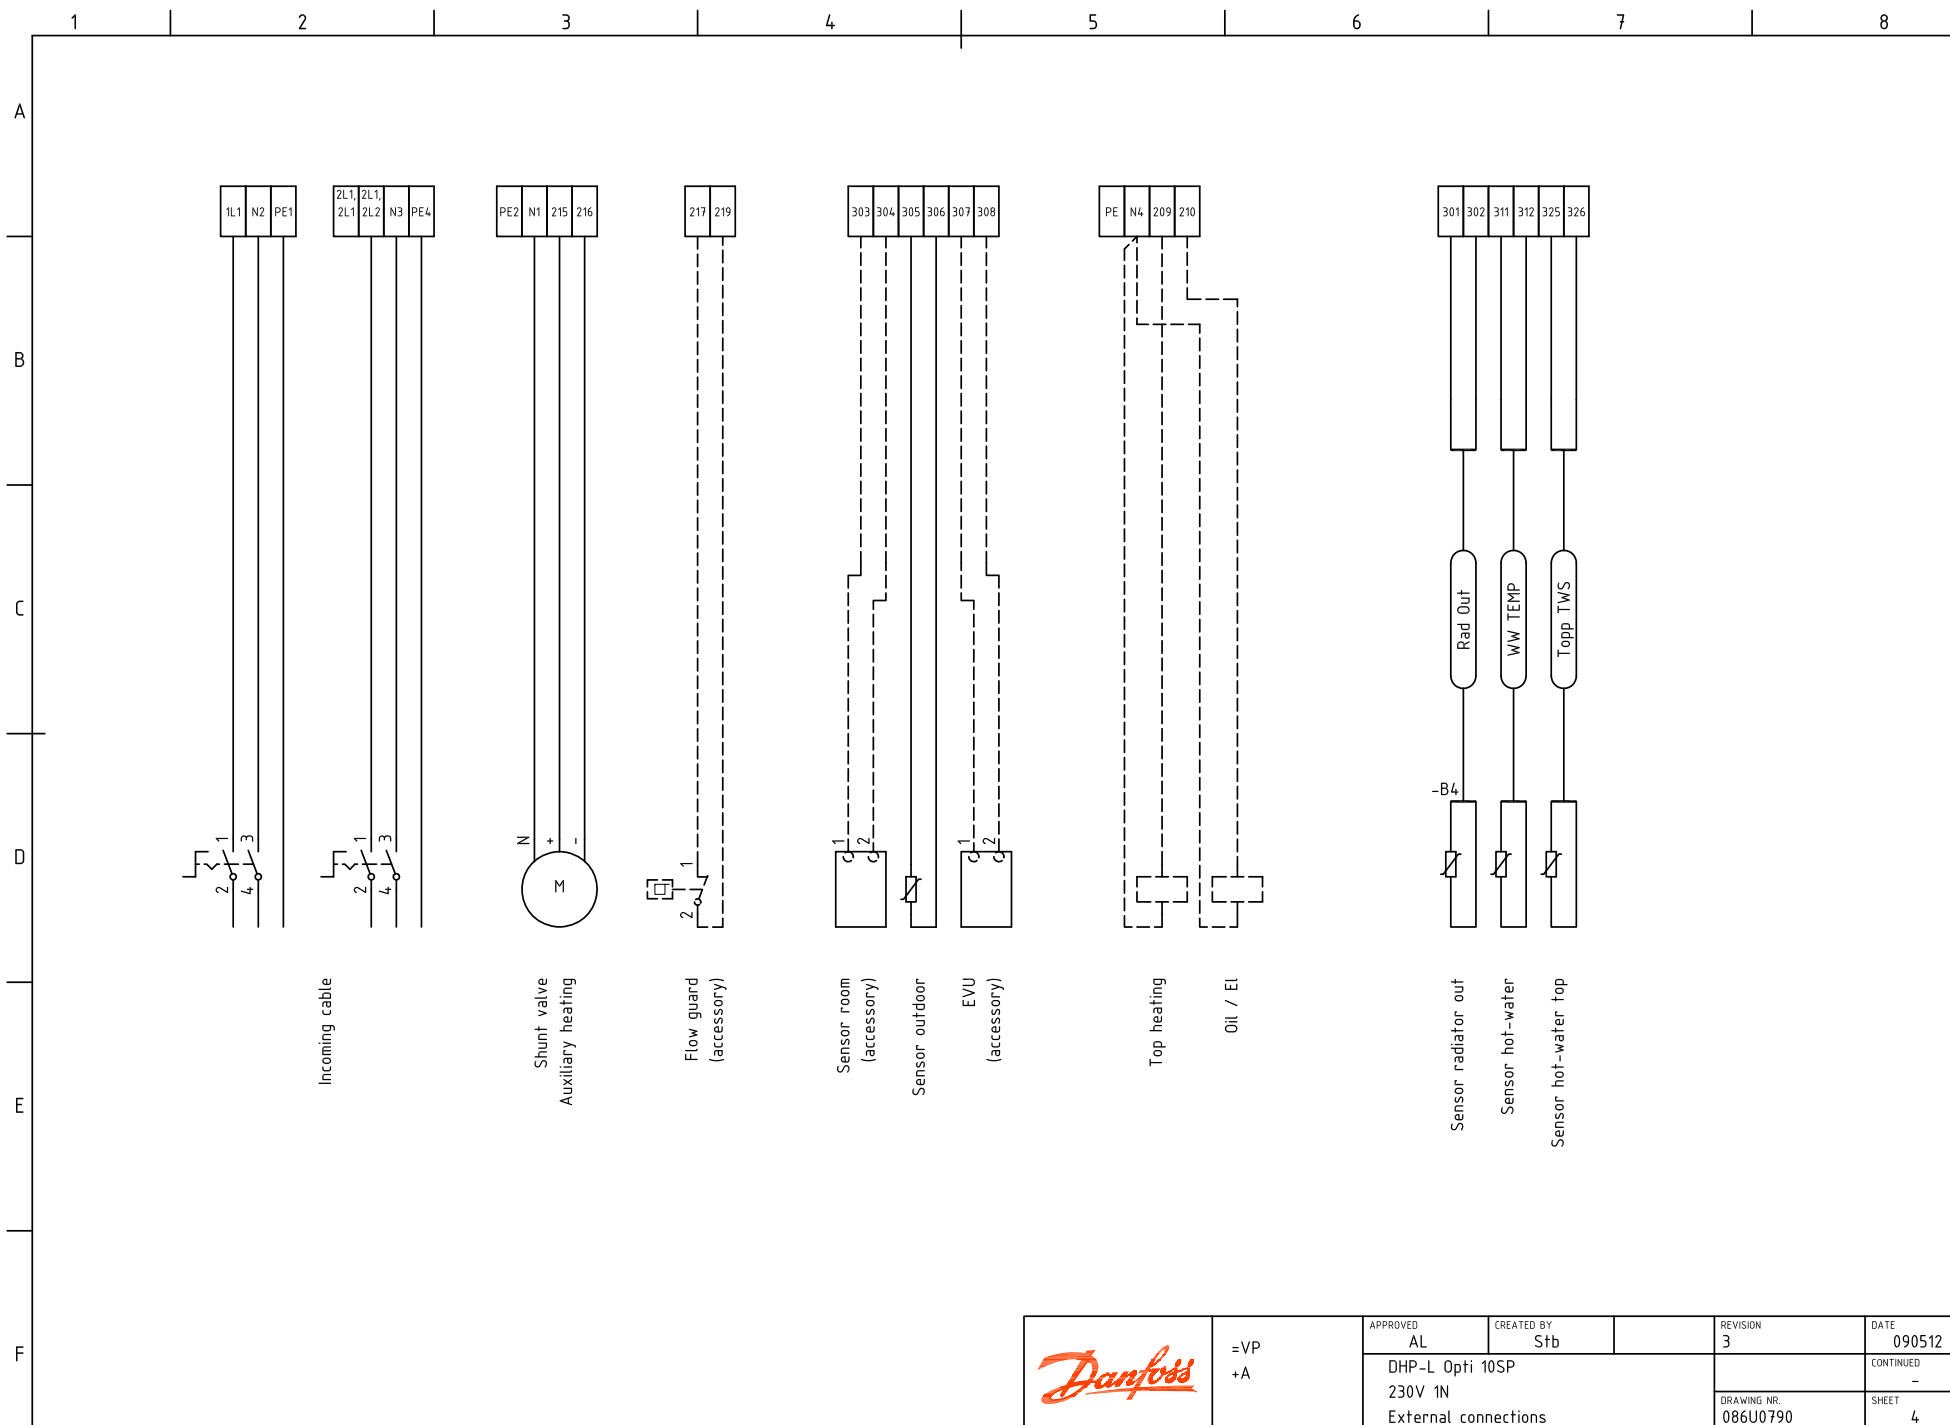


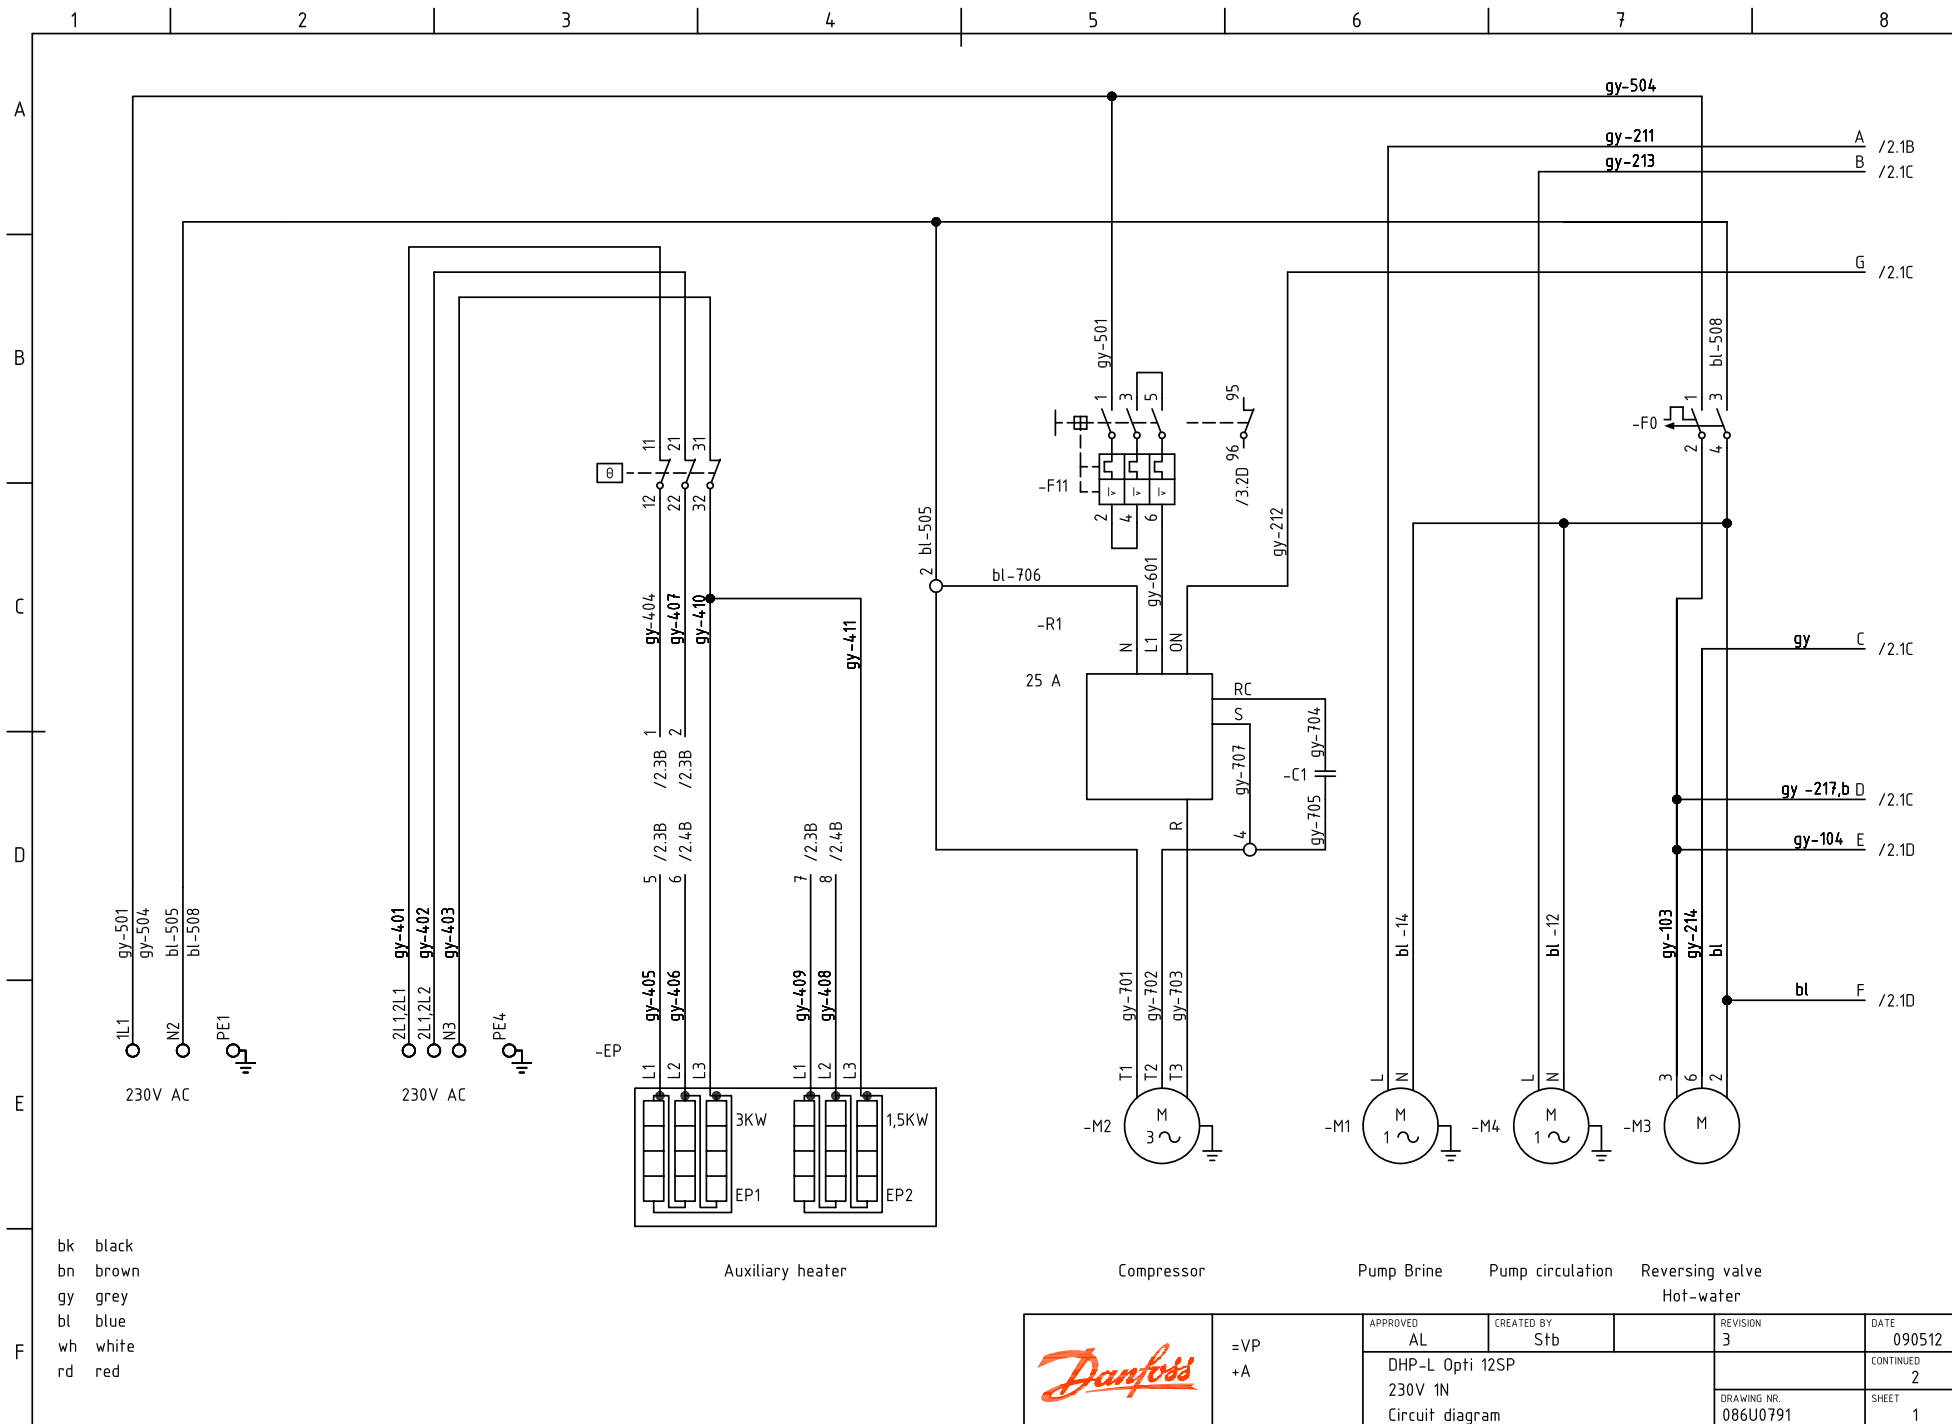


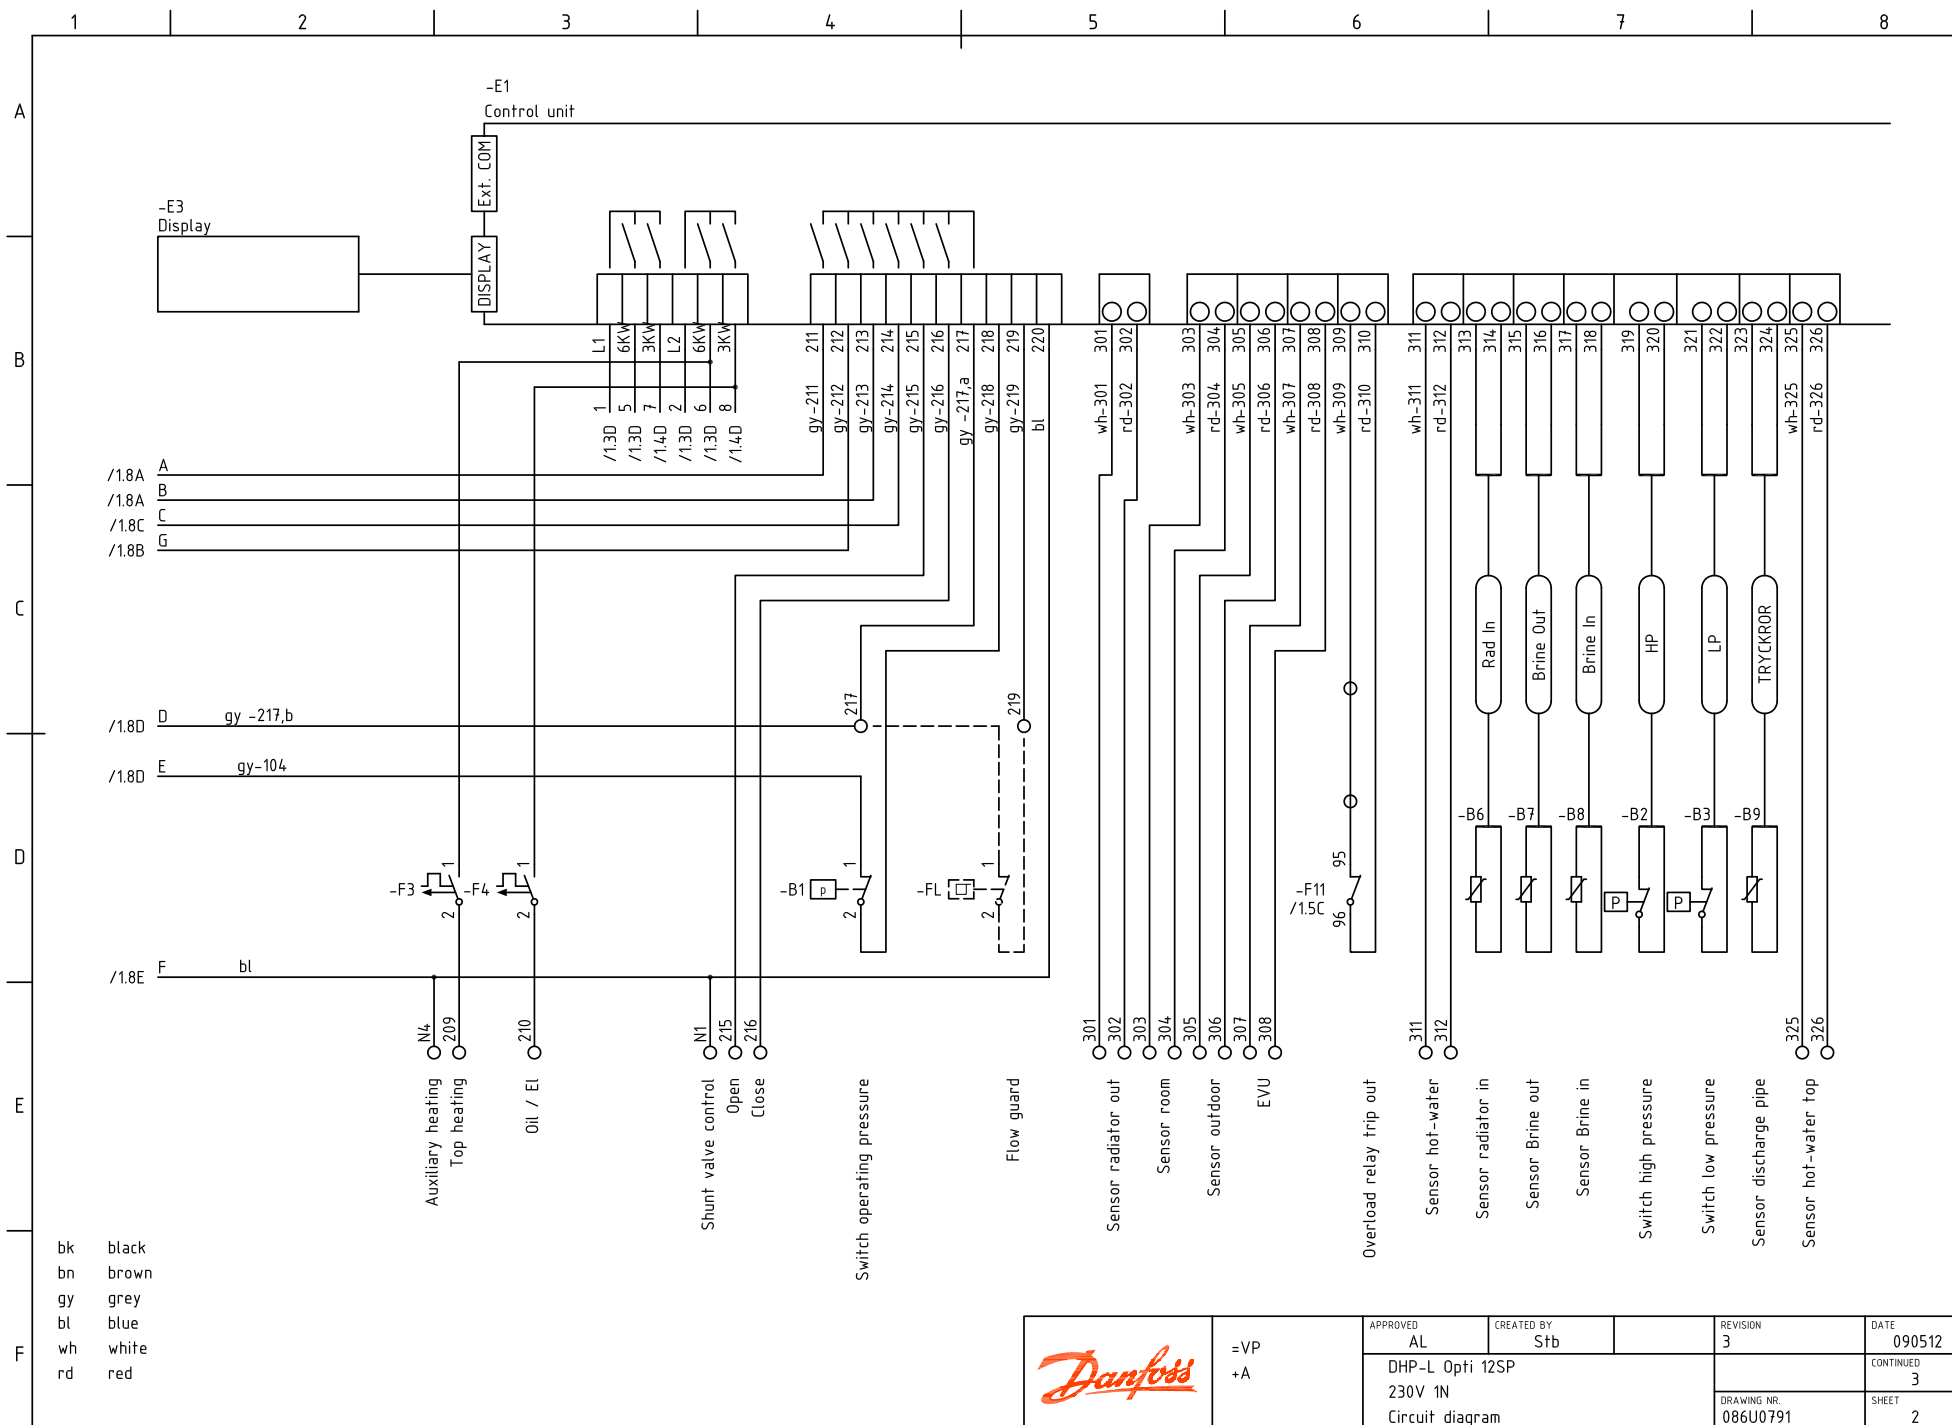


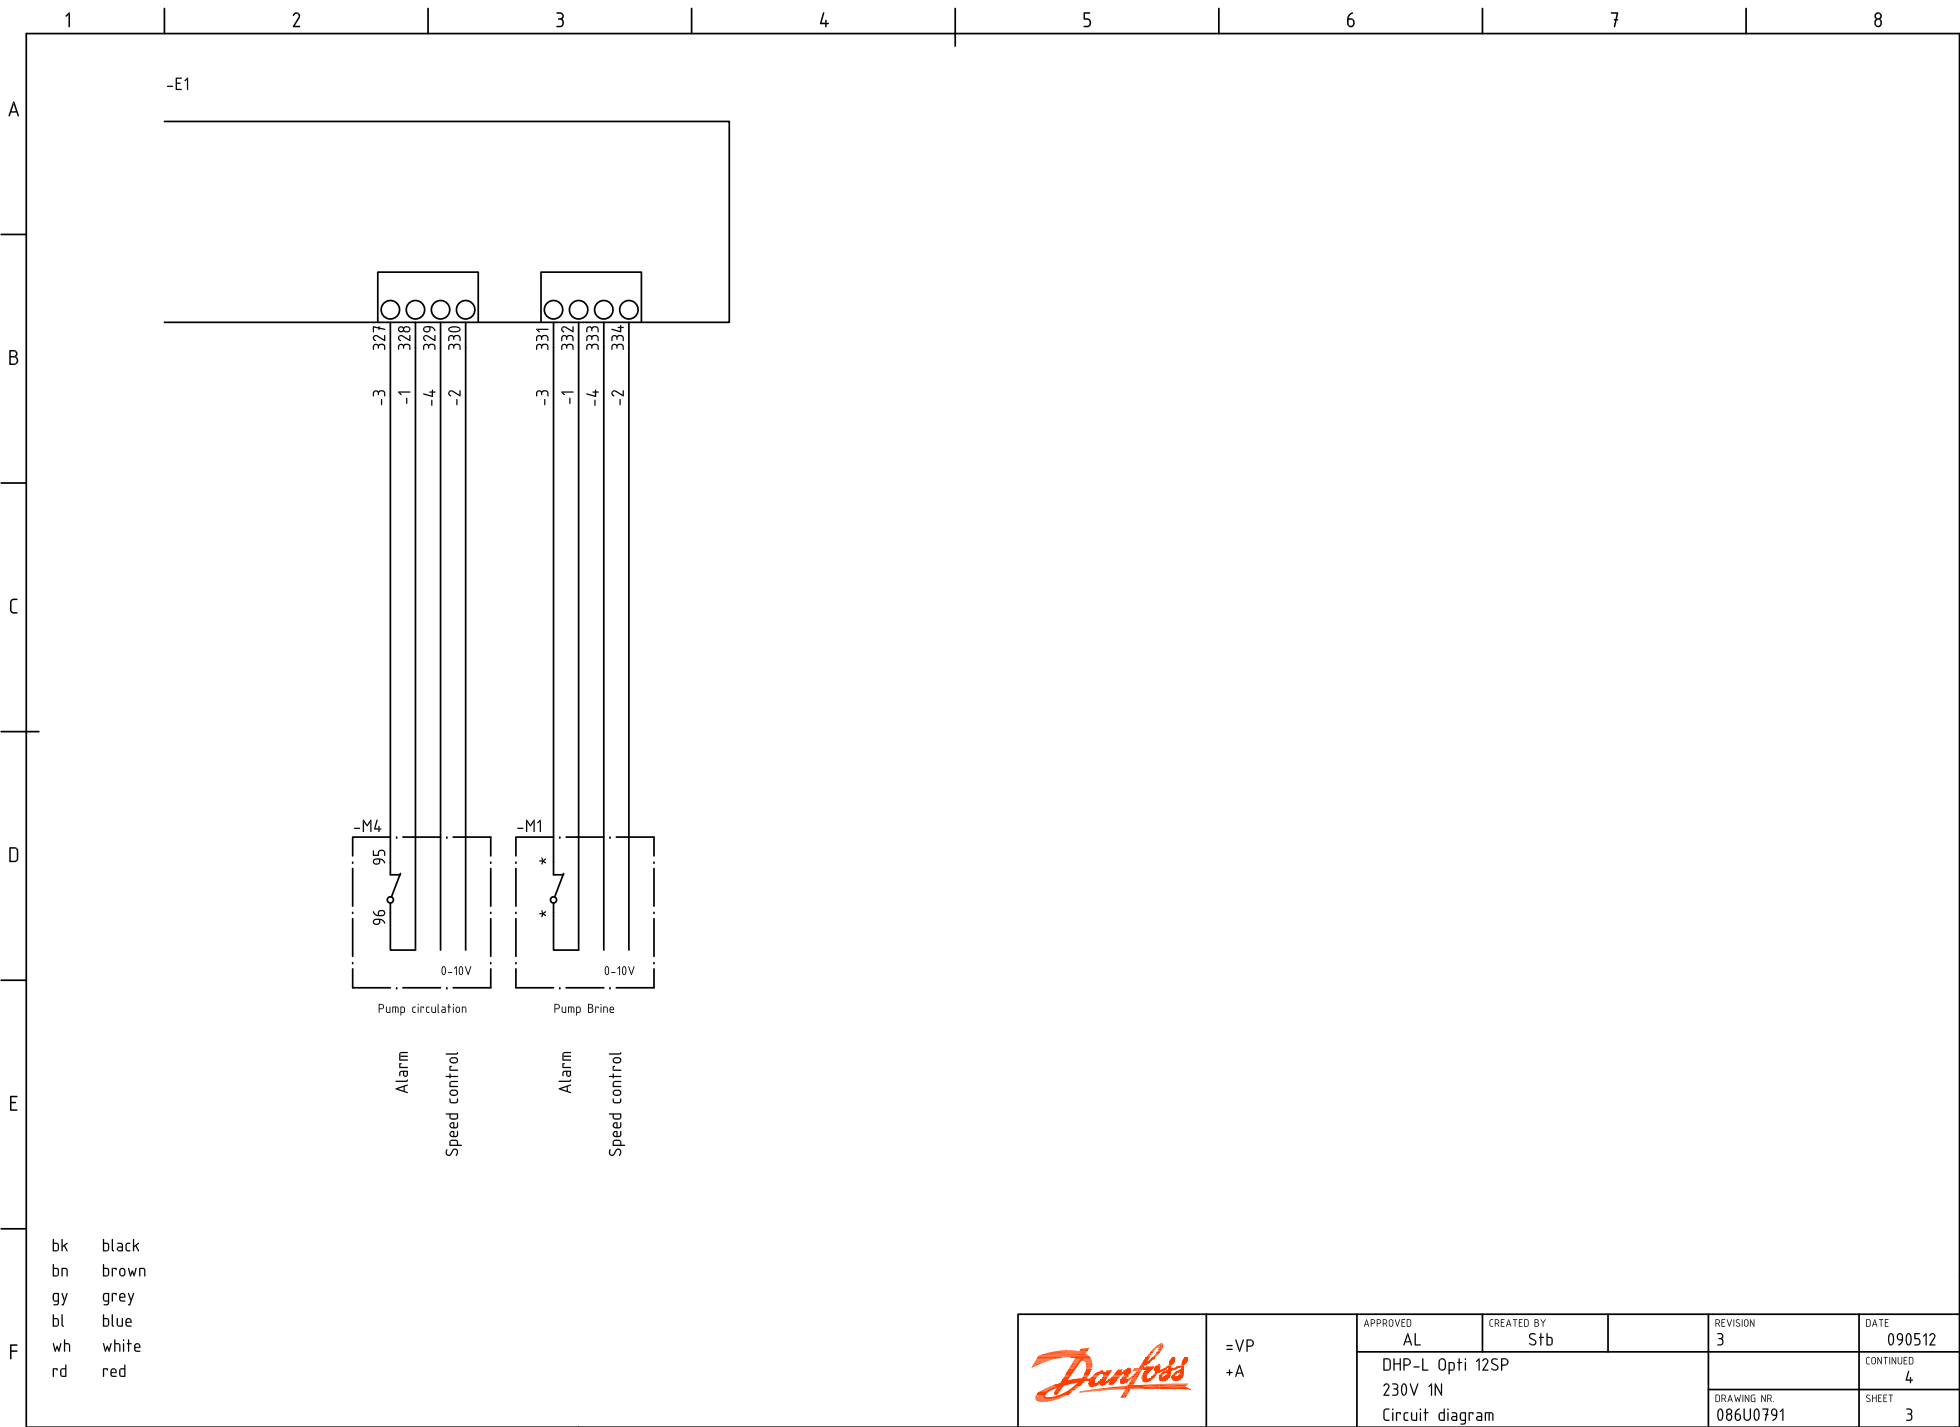


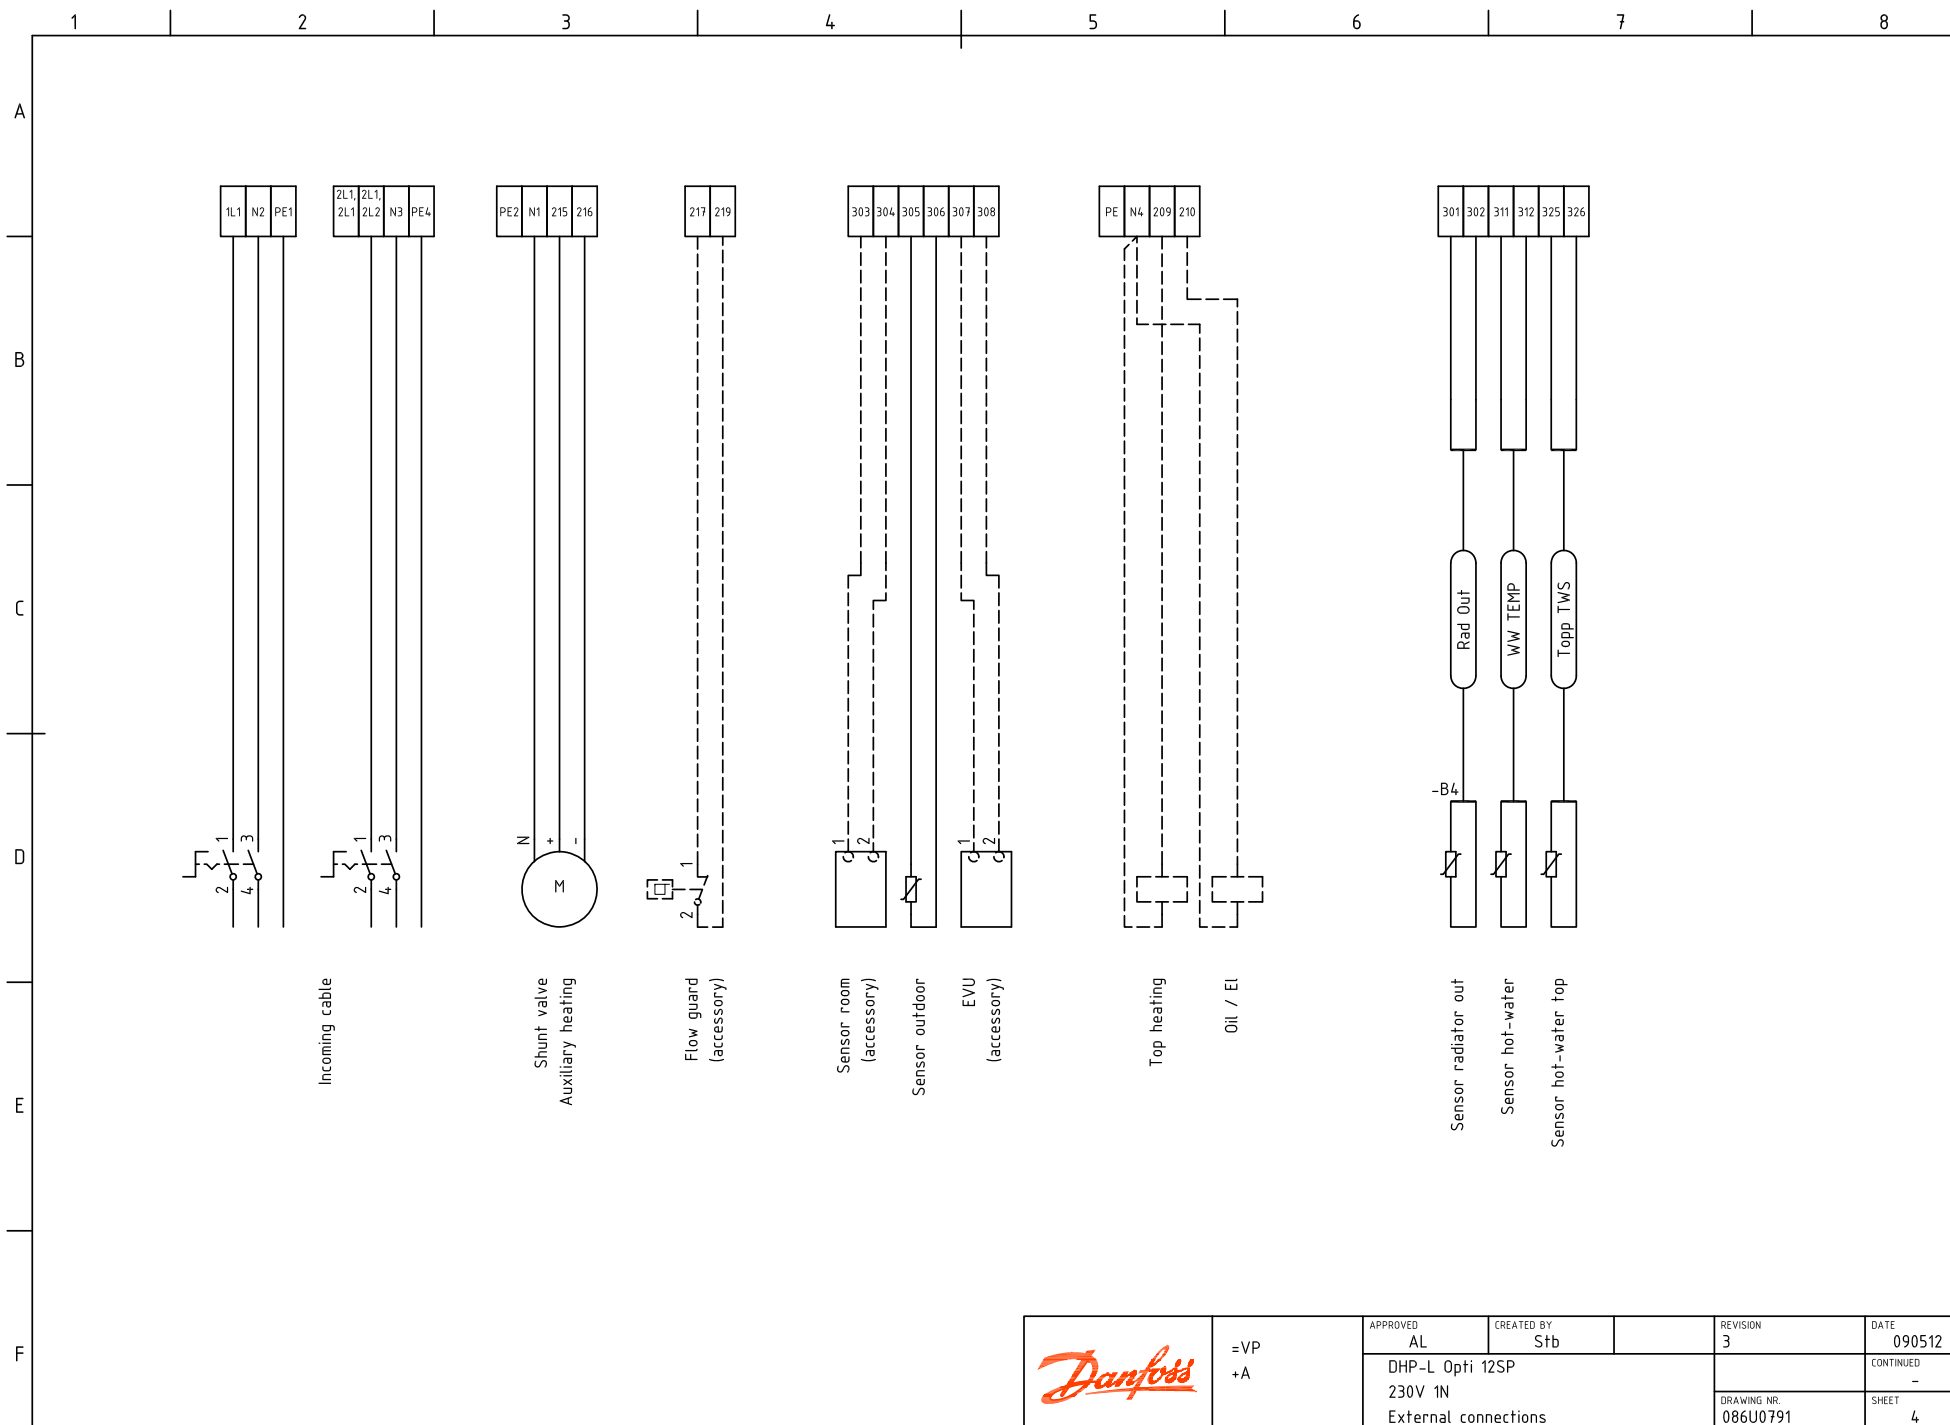

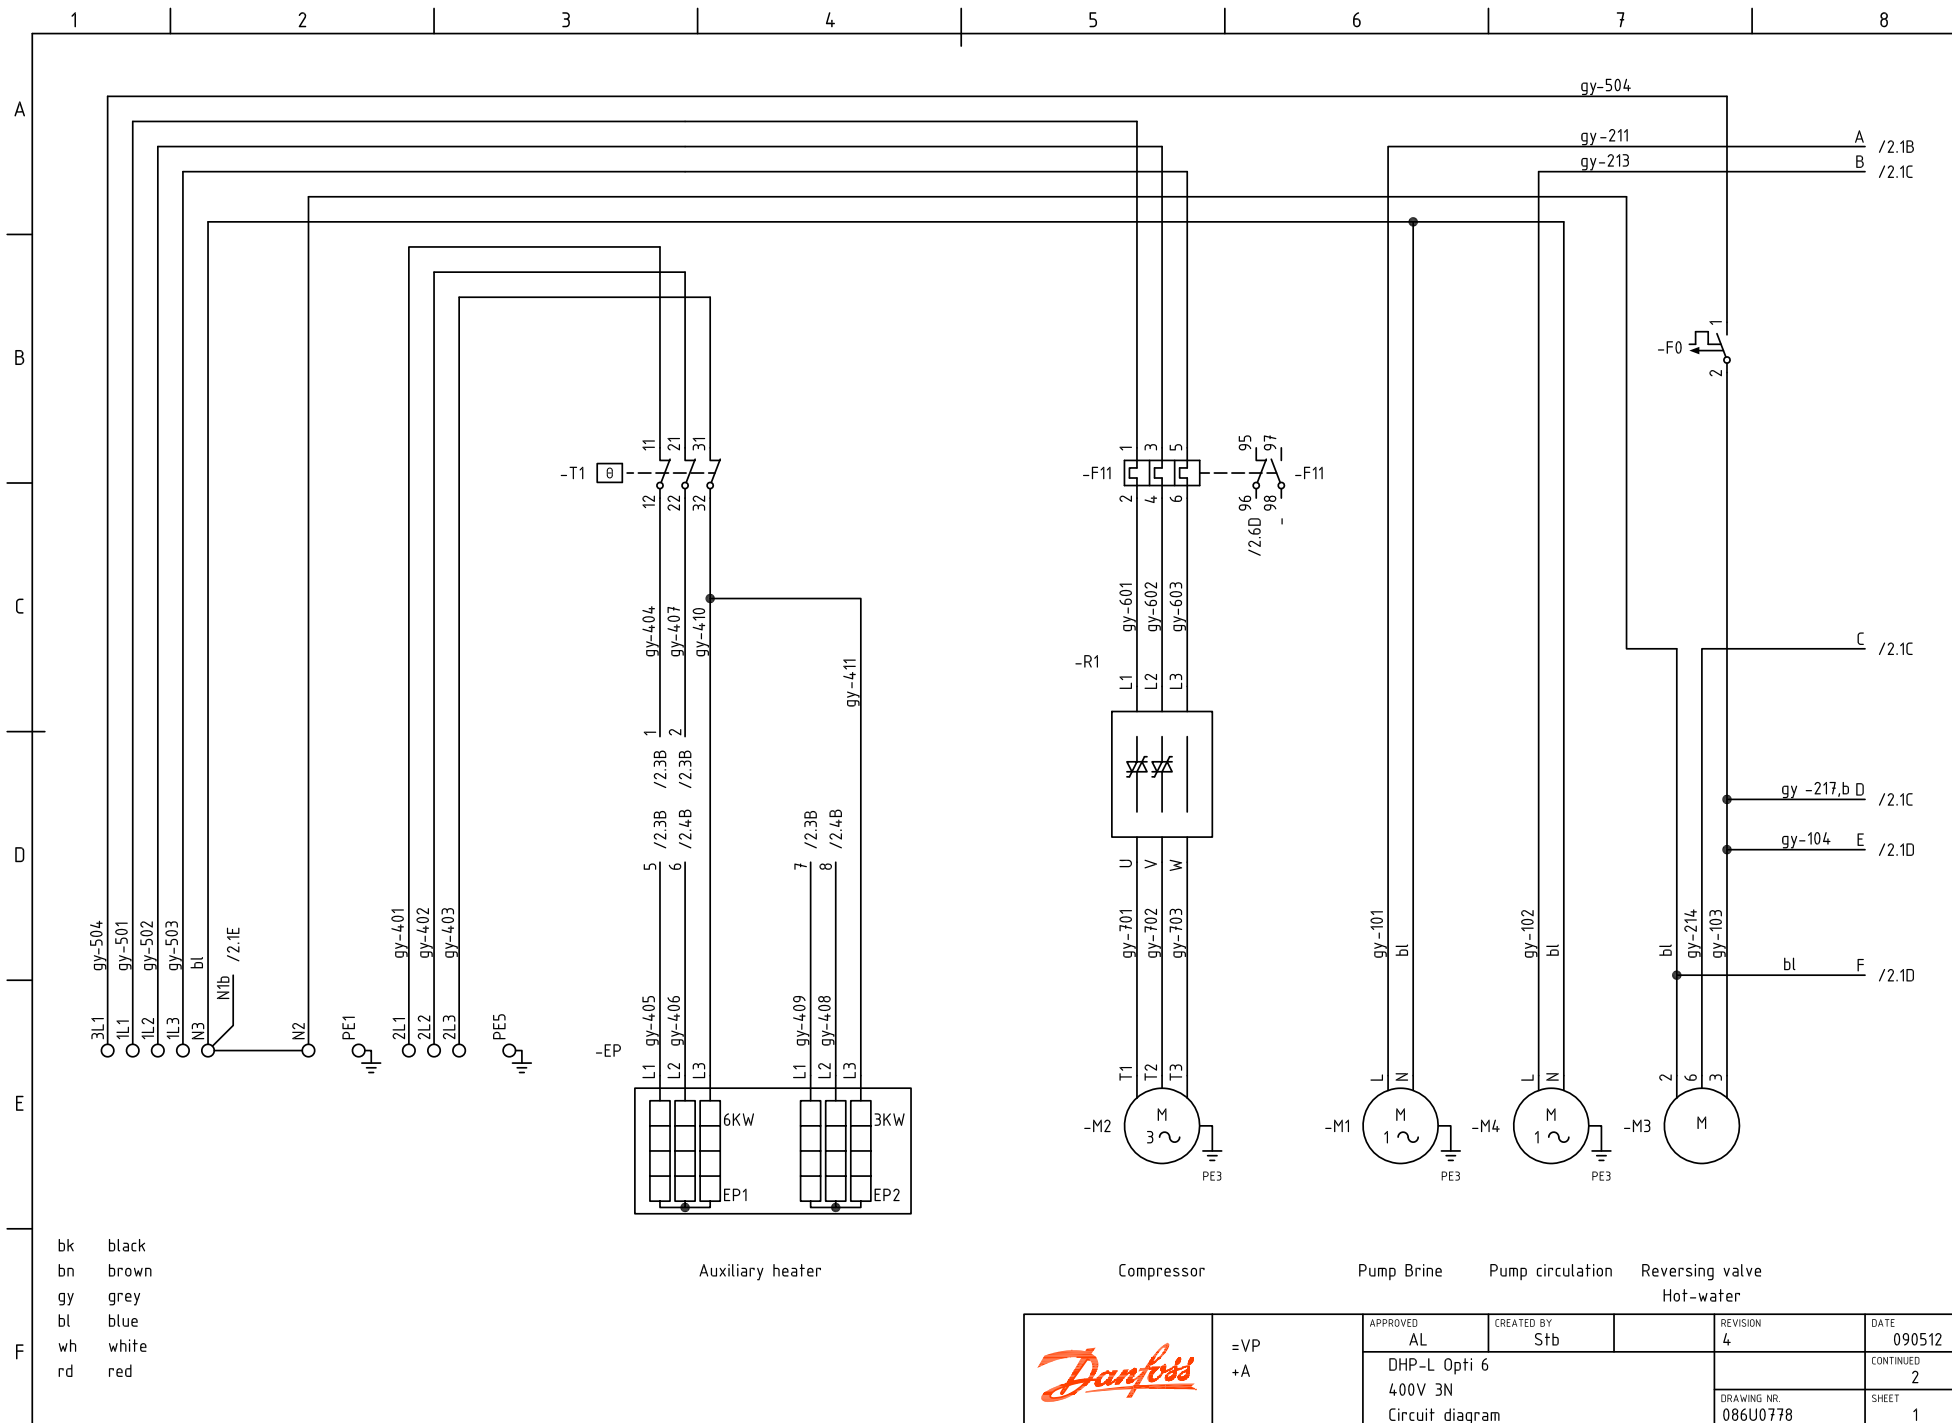
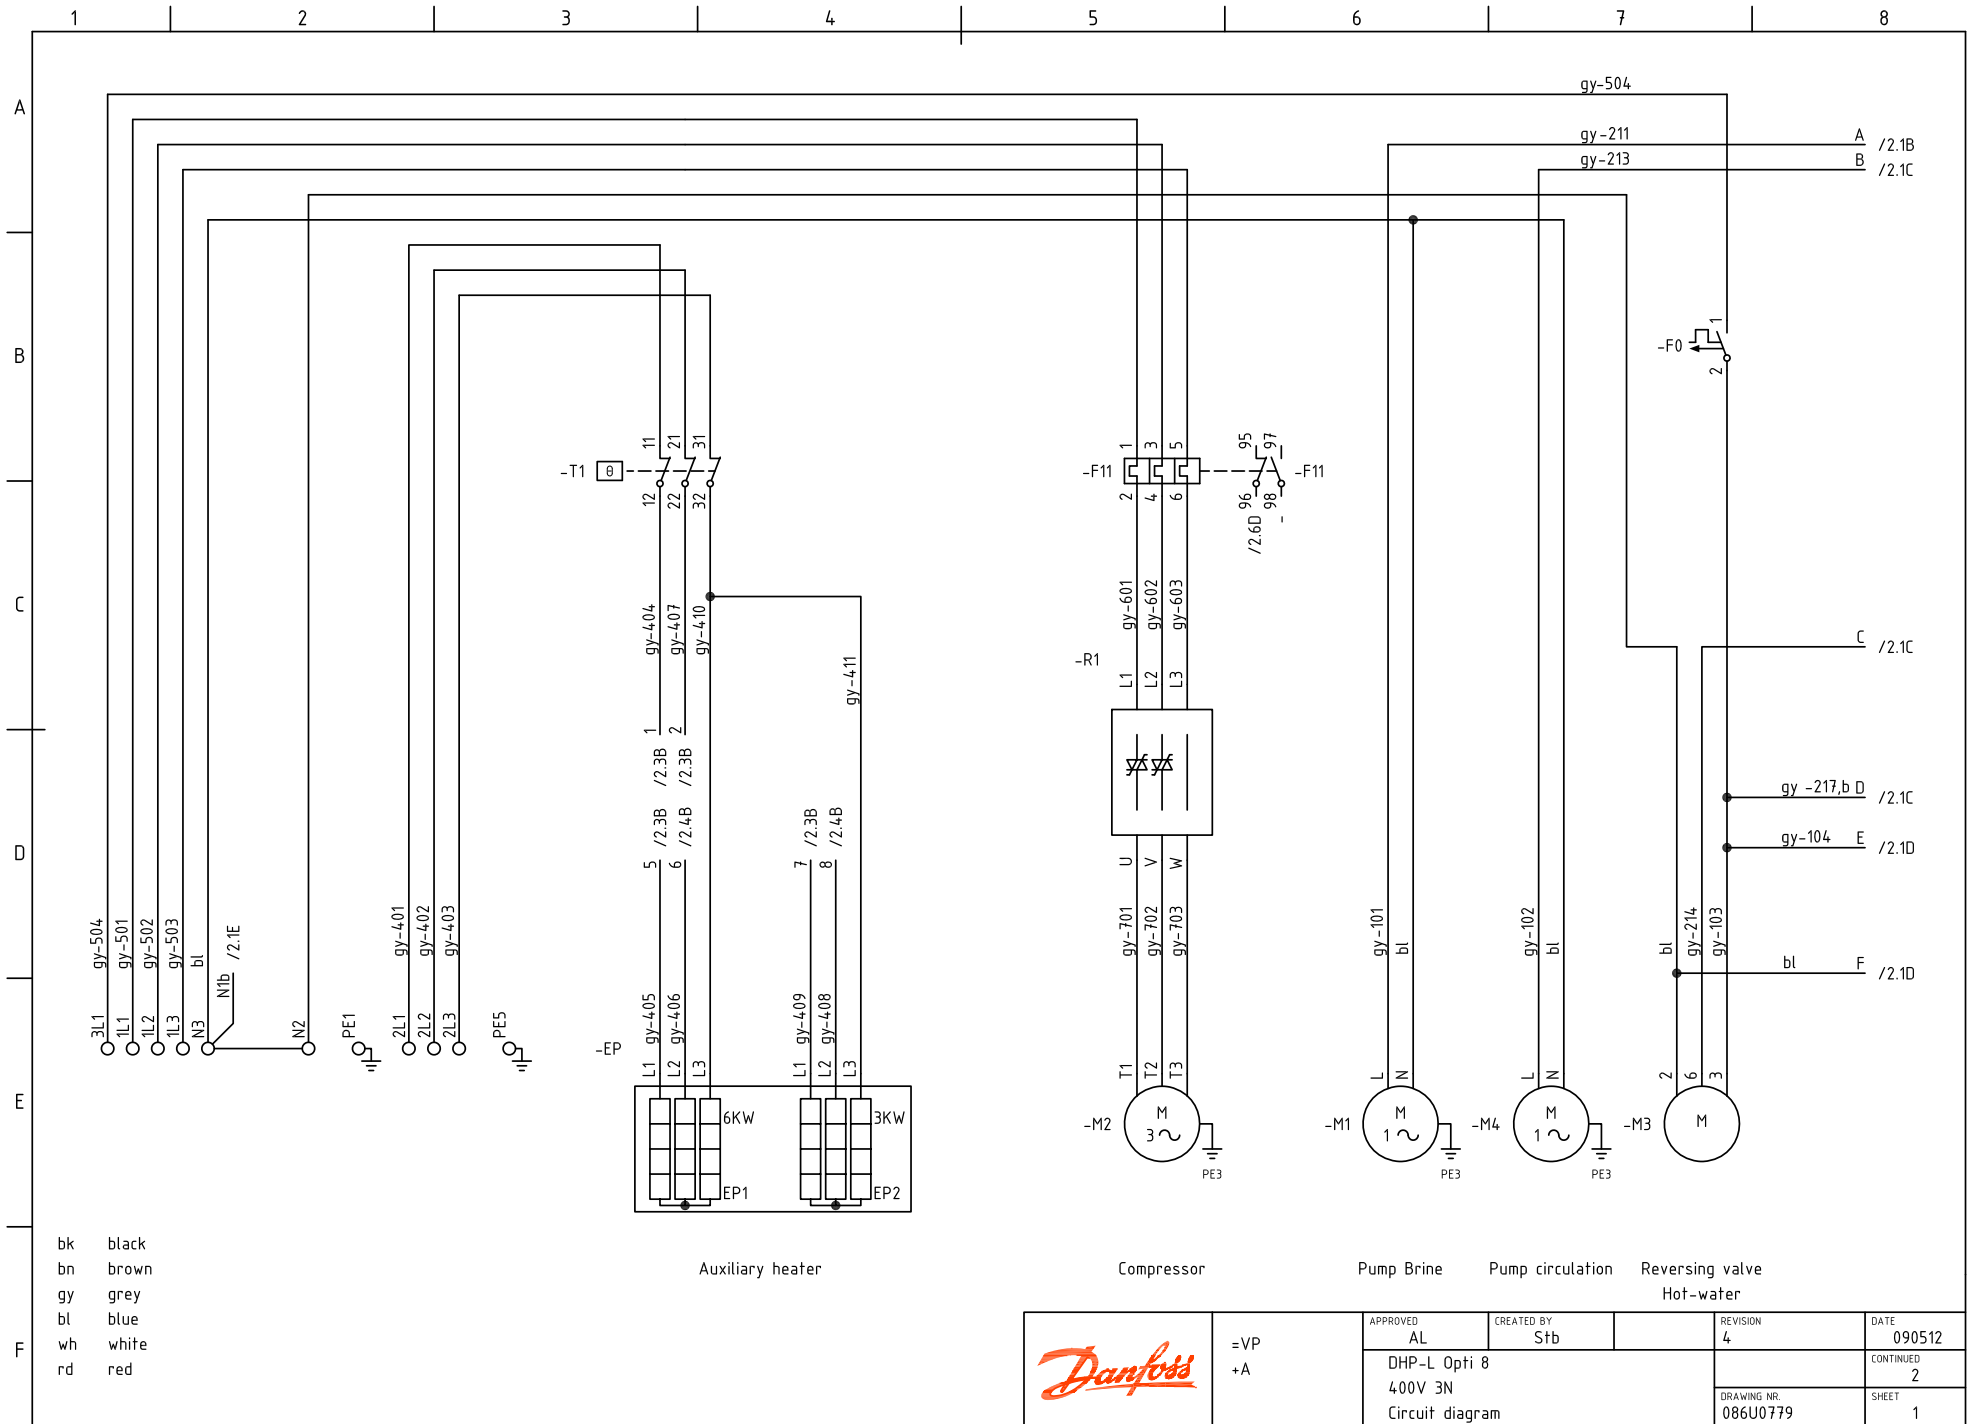


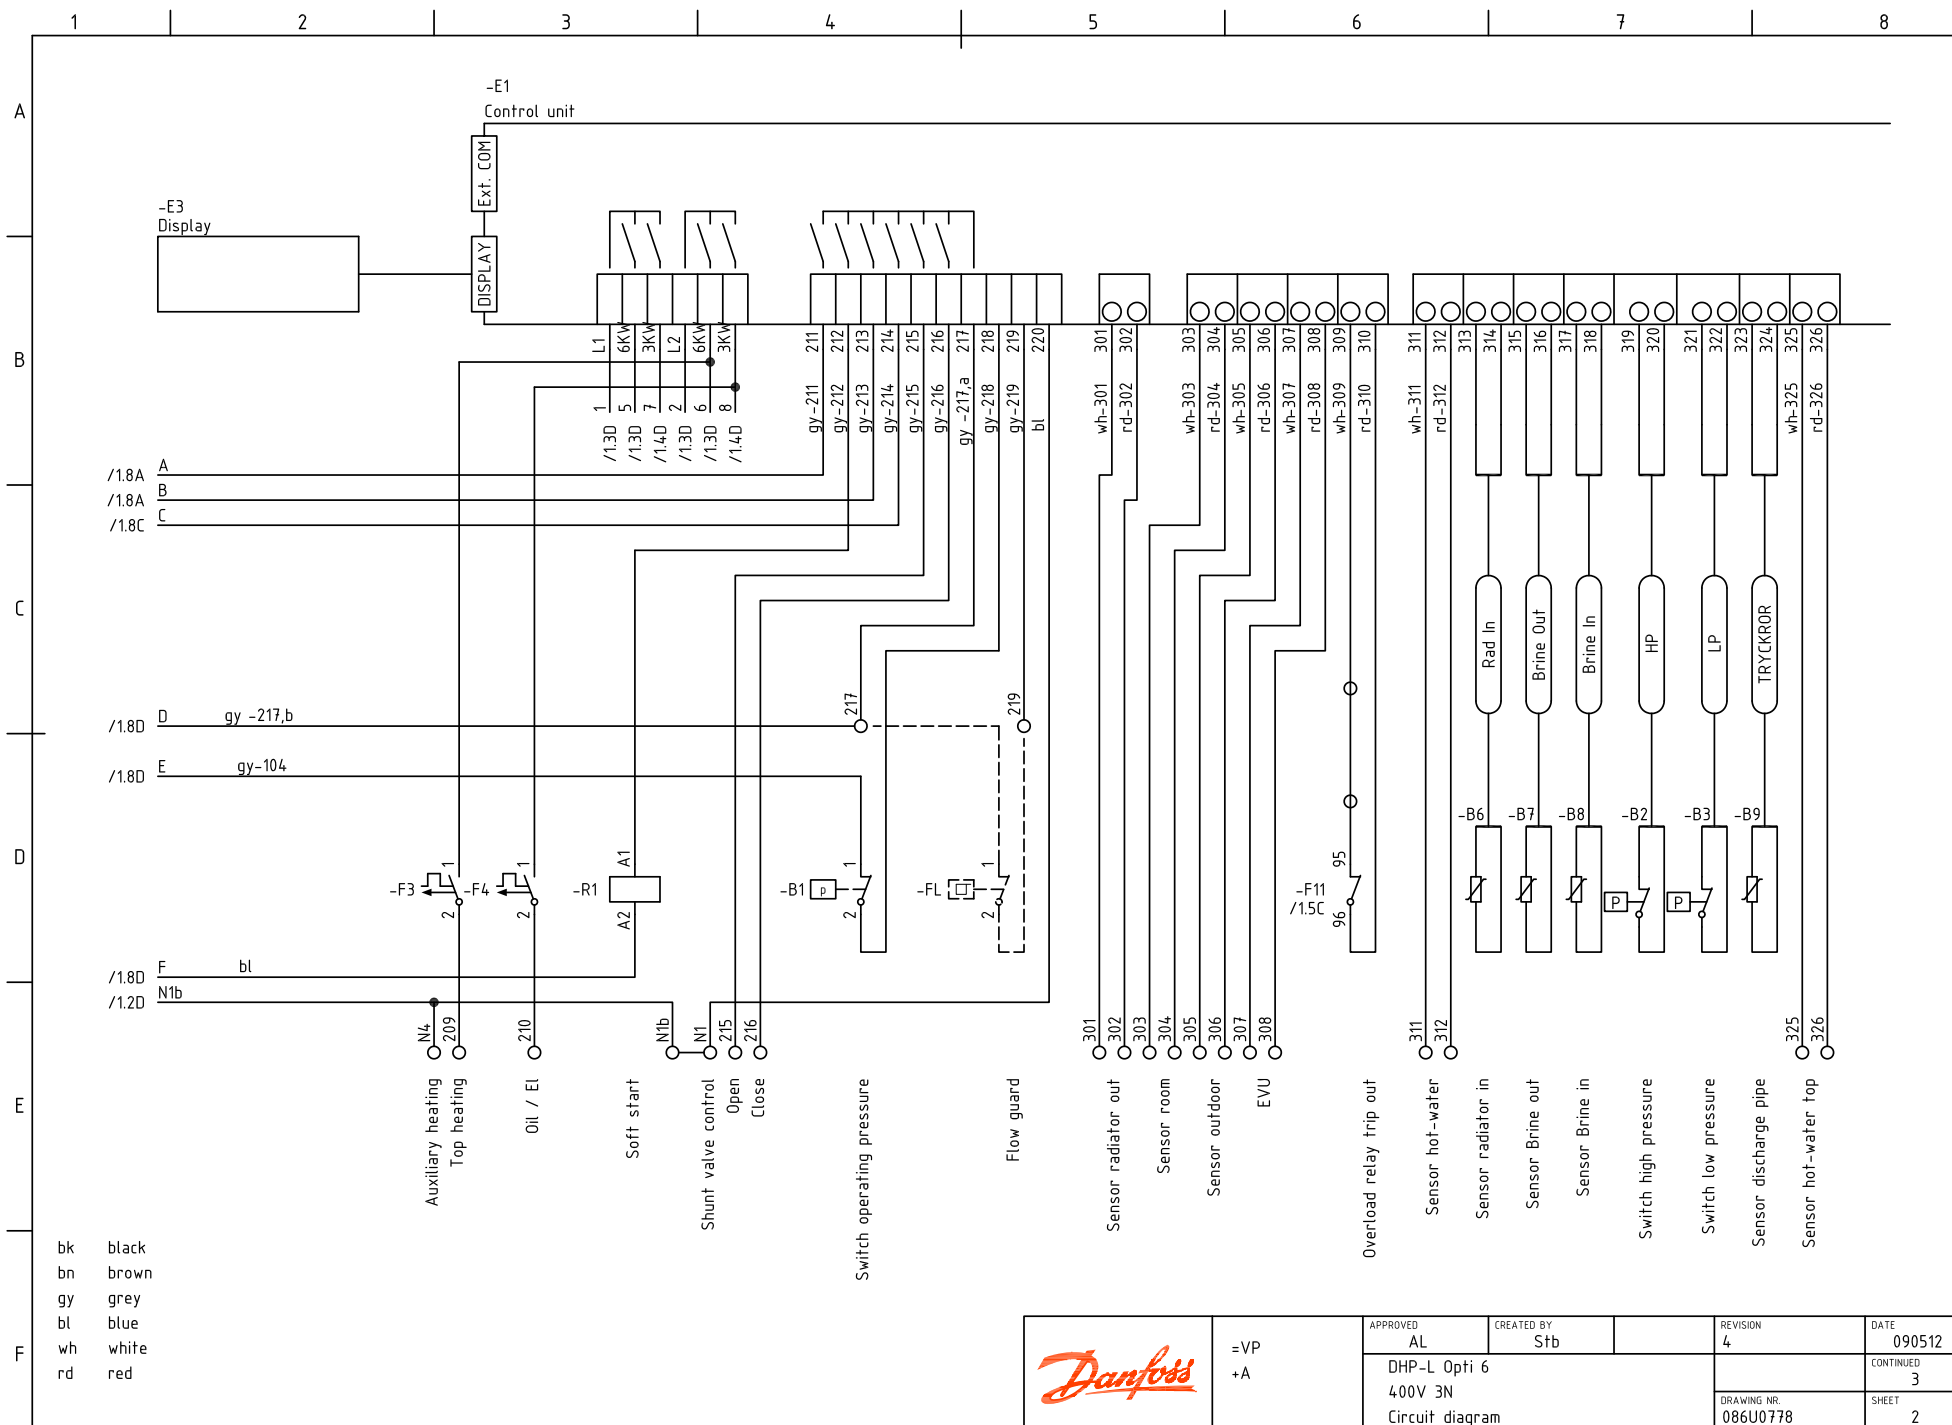


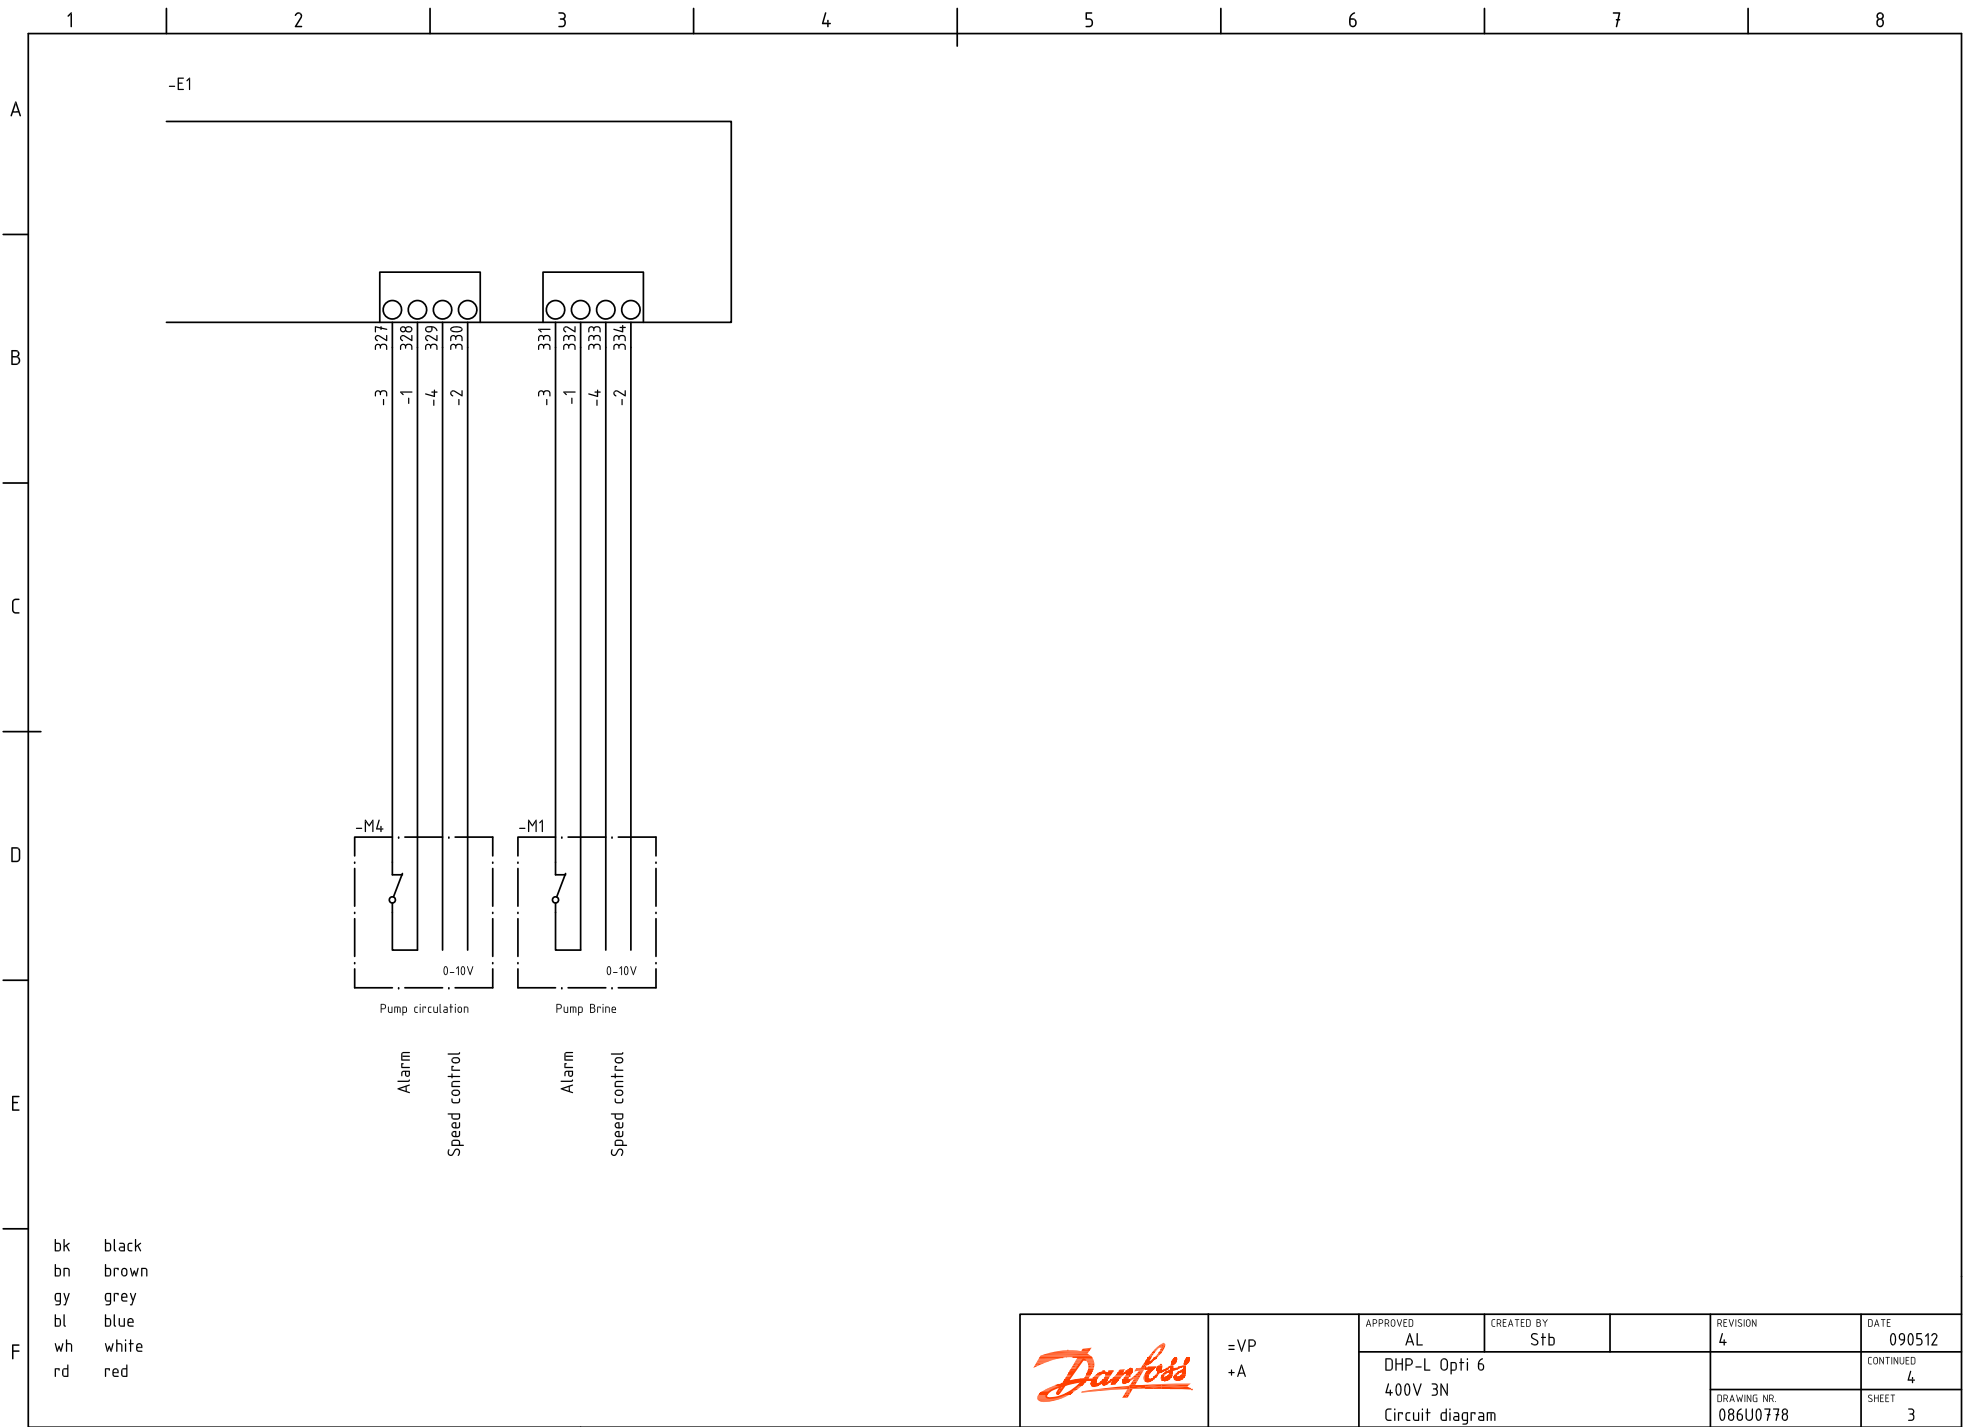


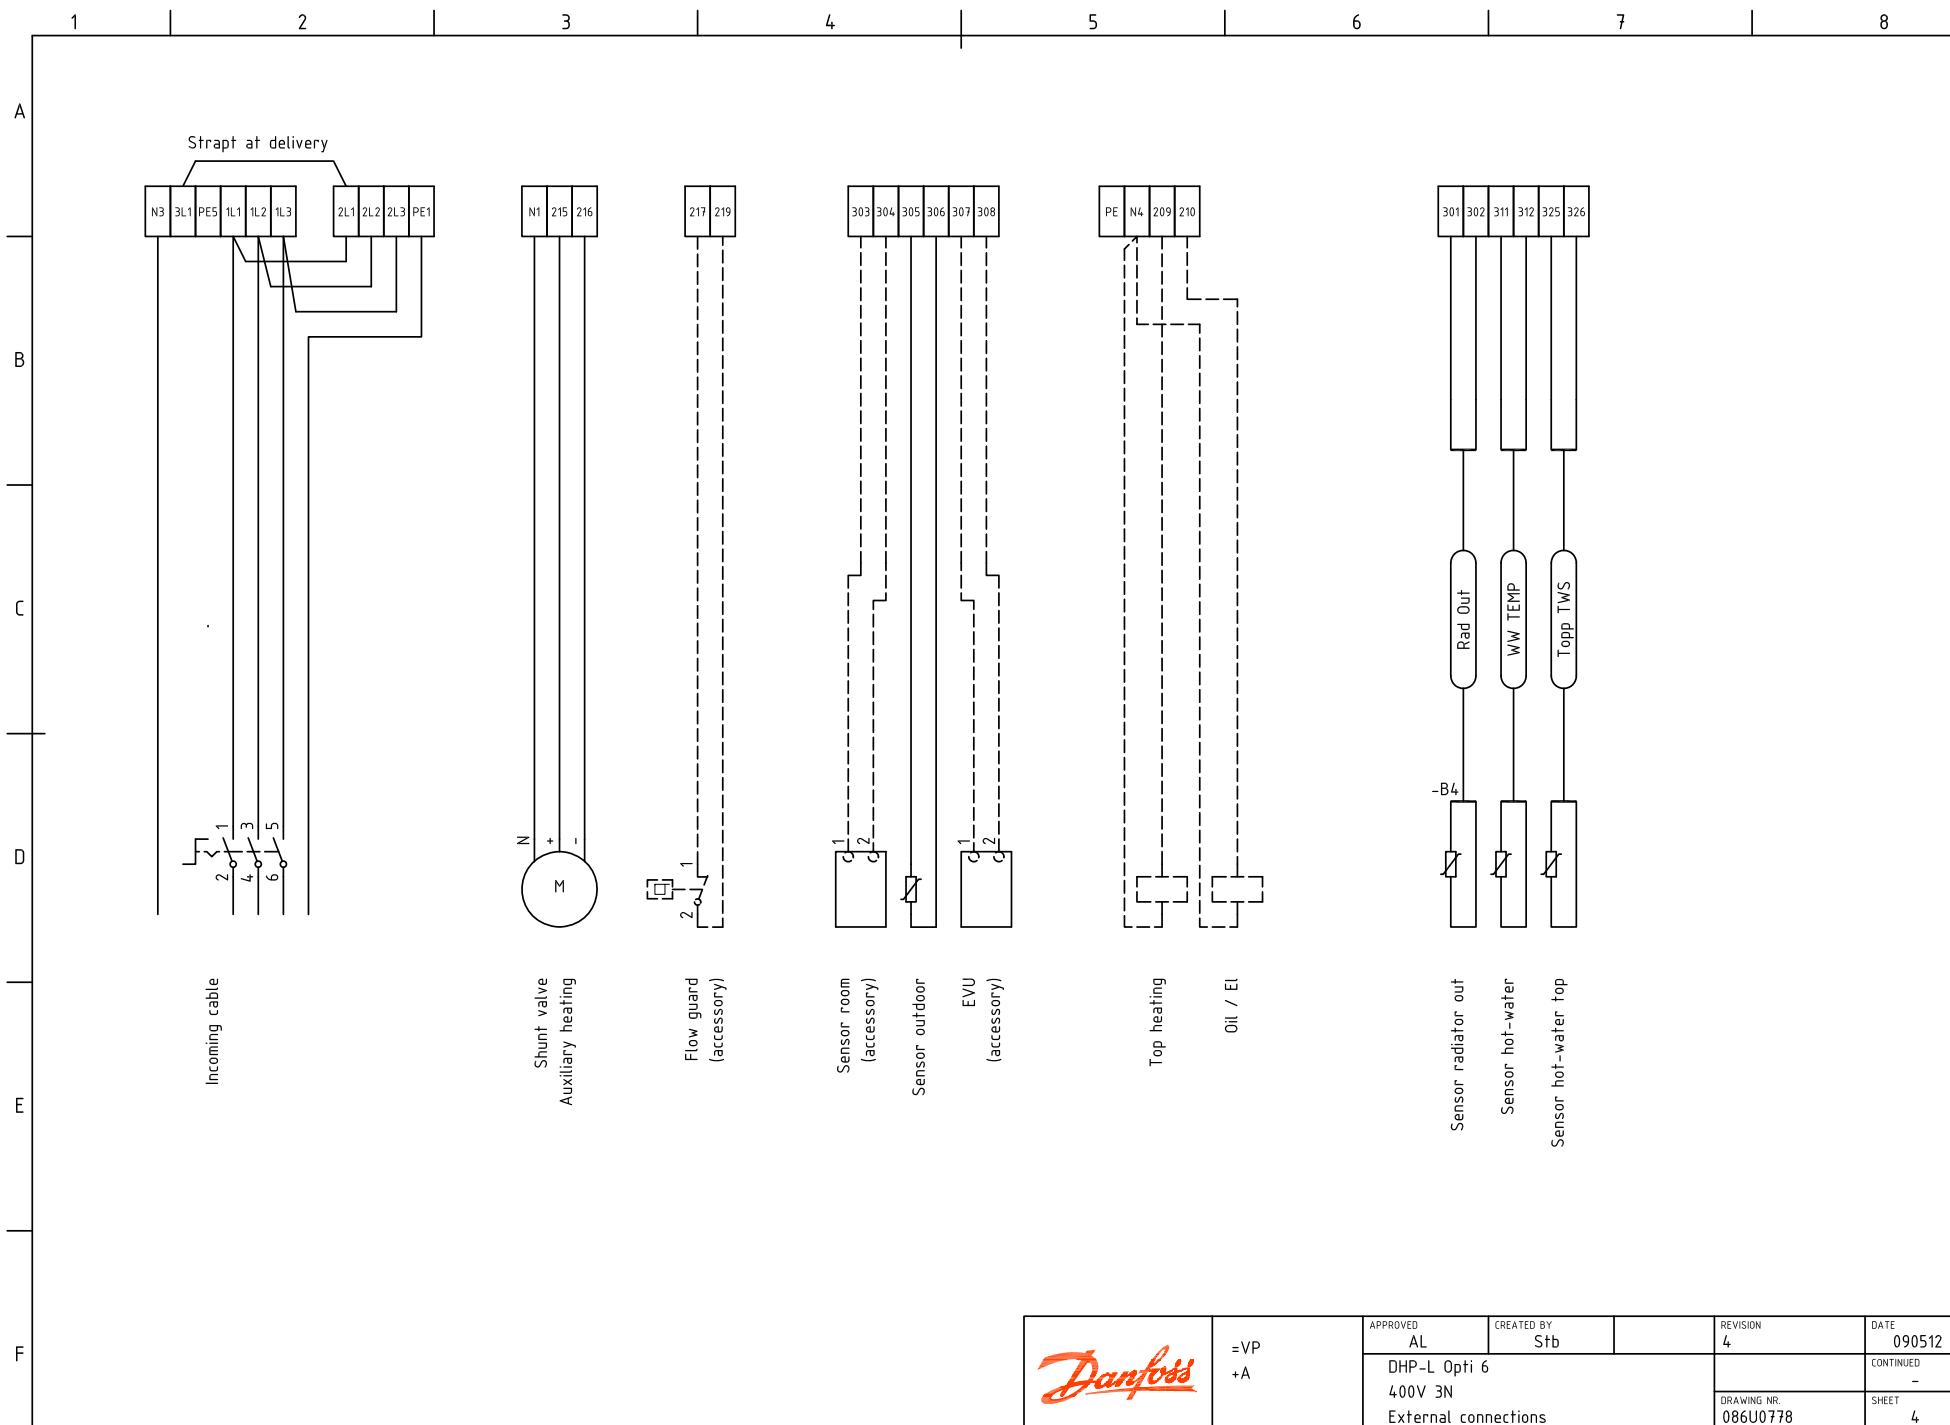



	=VP +A	APPROVED	CREATED BY		REVISION	DATE
		AL	Stb		4	090512
		DHP-L Opti 6 400V 3N External connections				CONTINUED
					-	
			DRAWING NR. 086U0778		SHEET	4




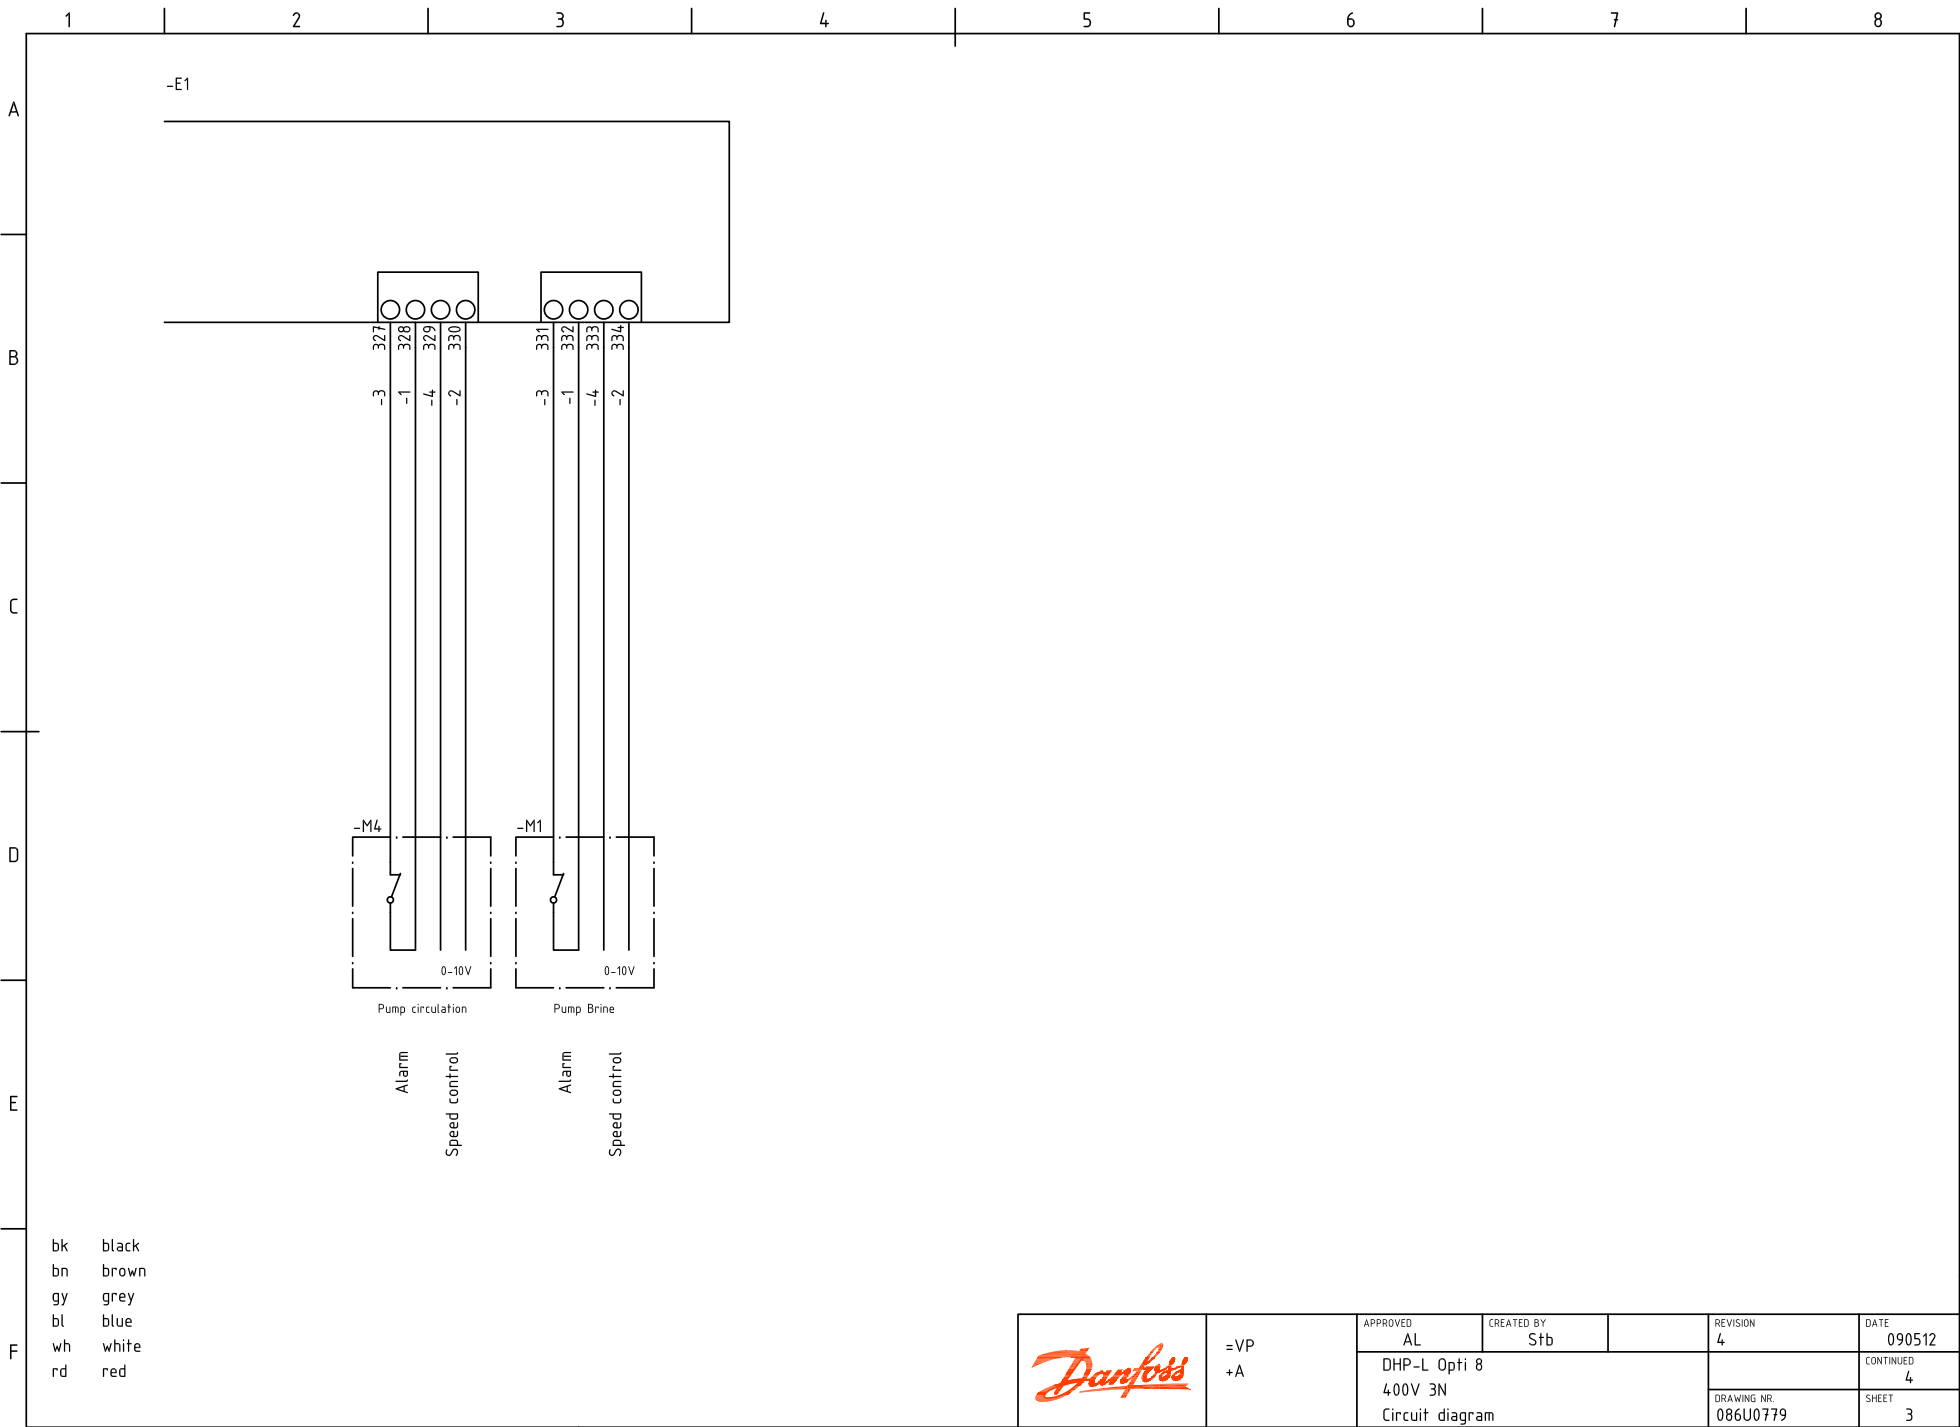


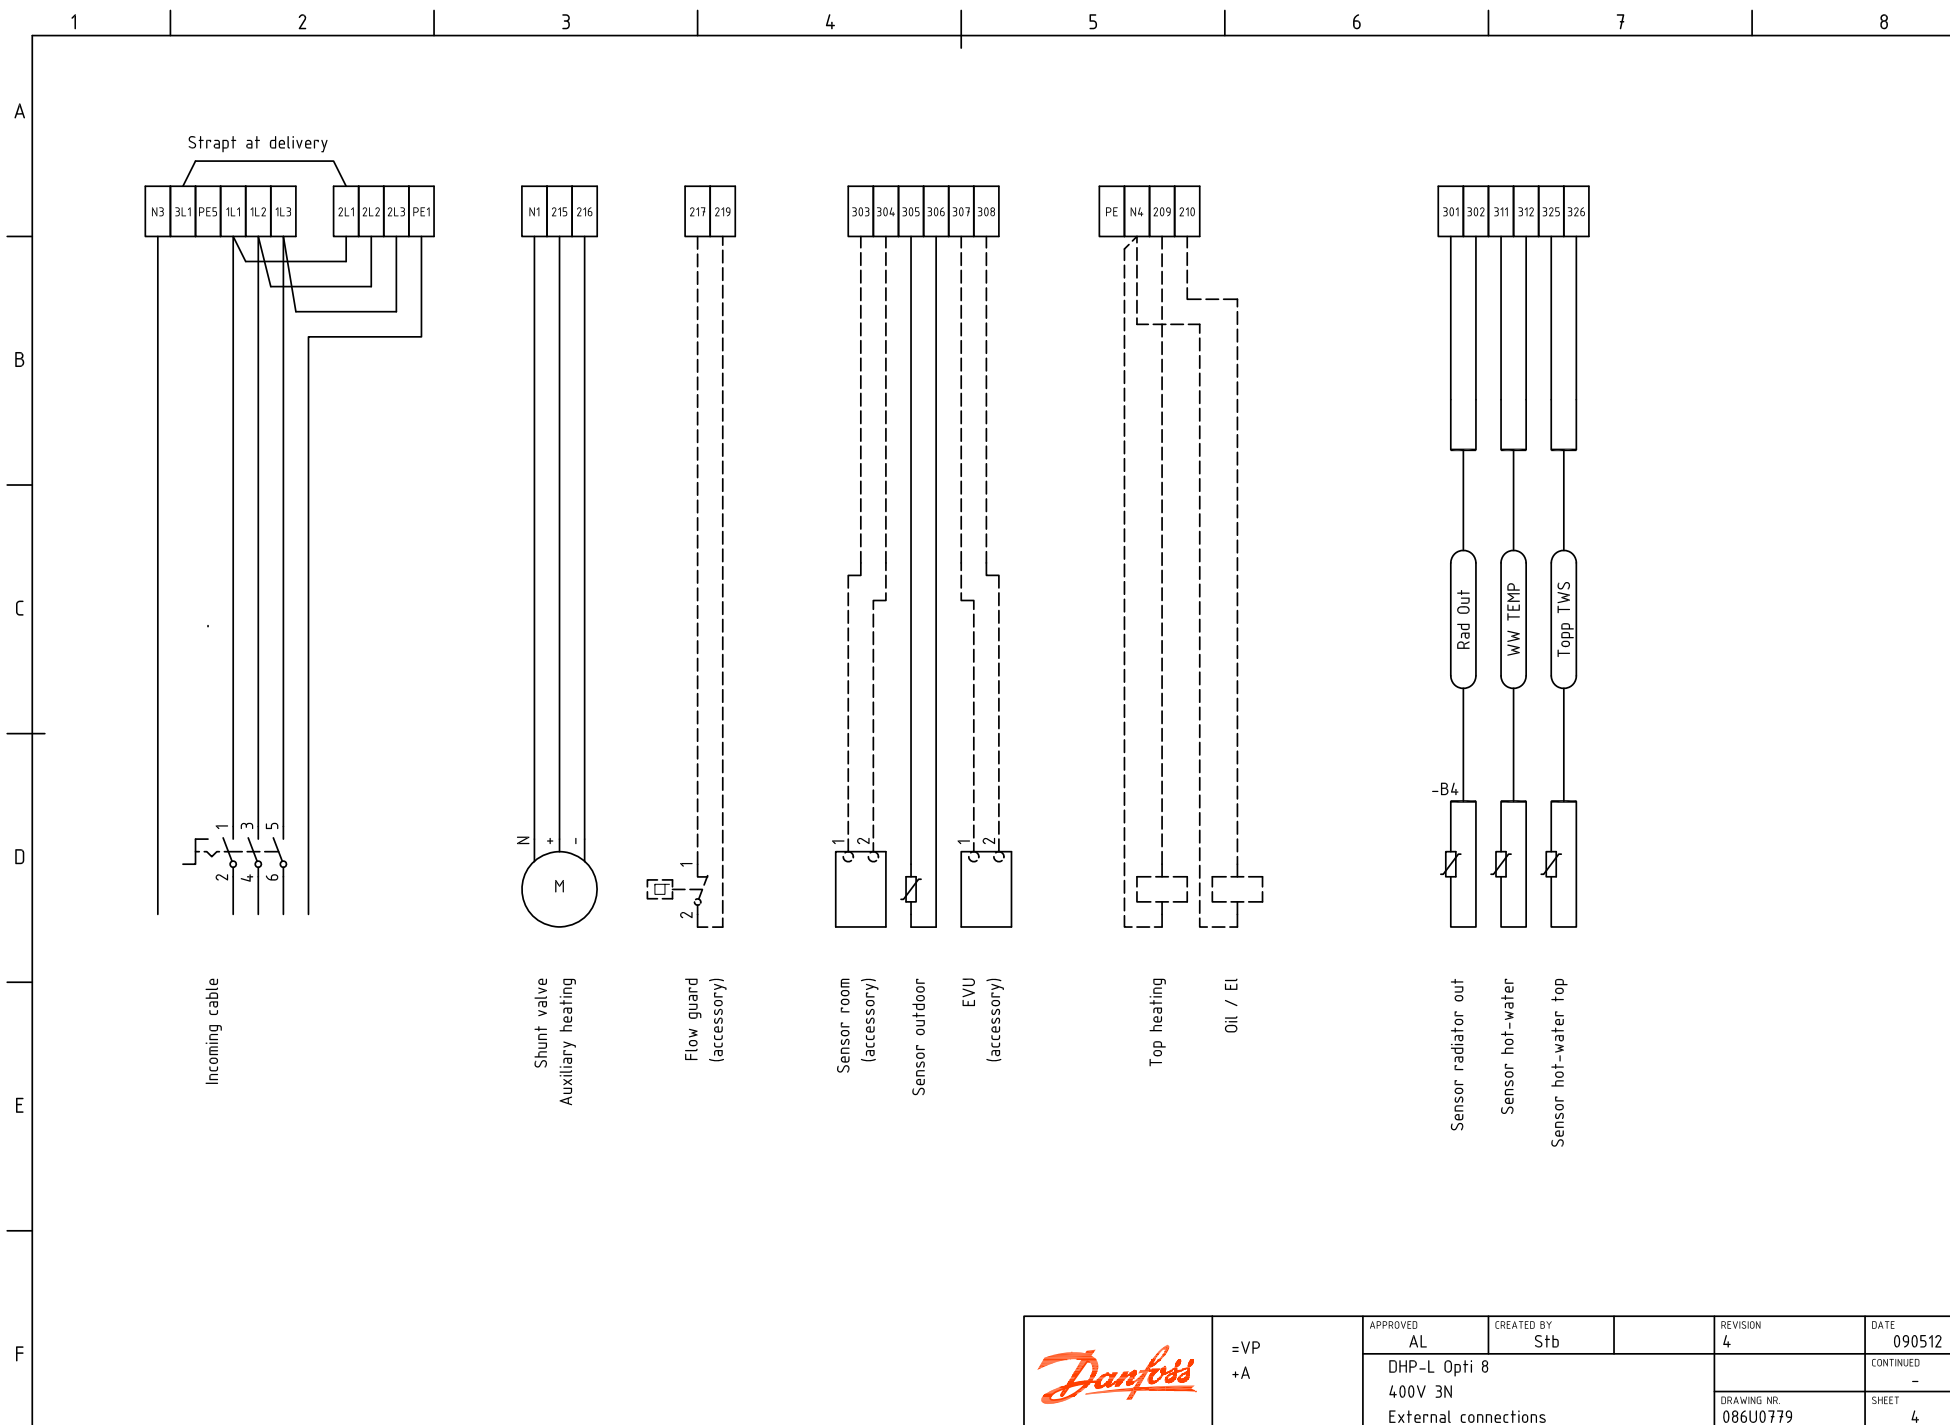


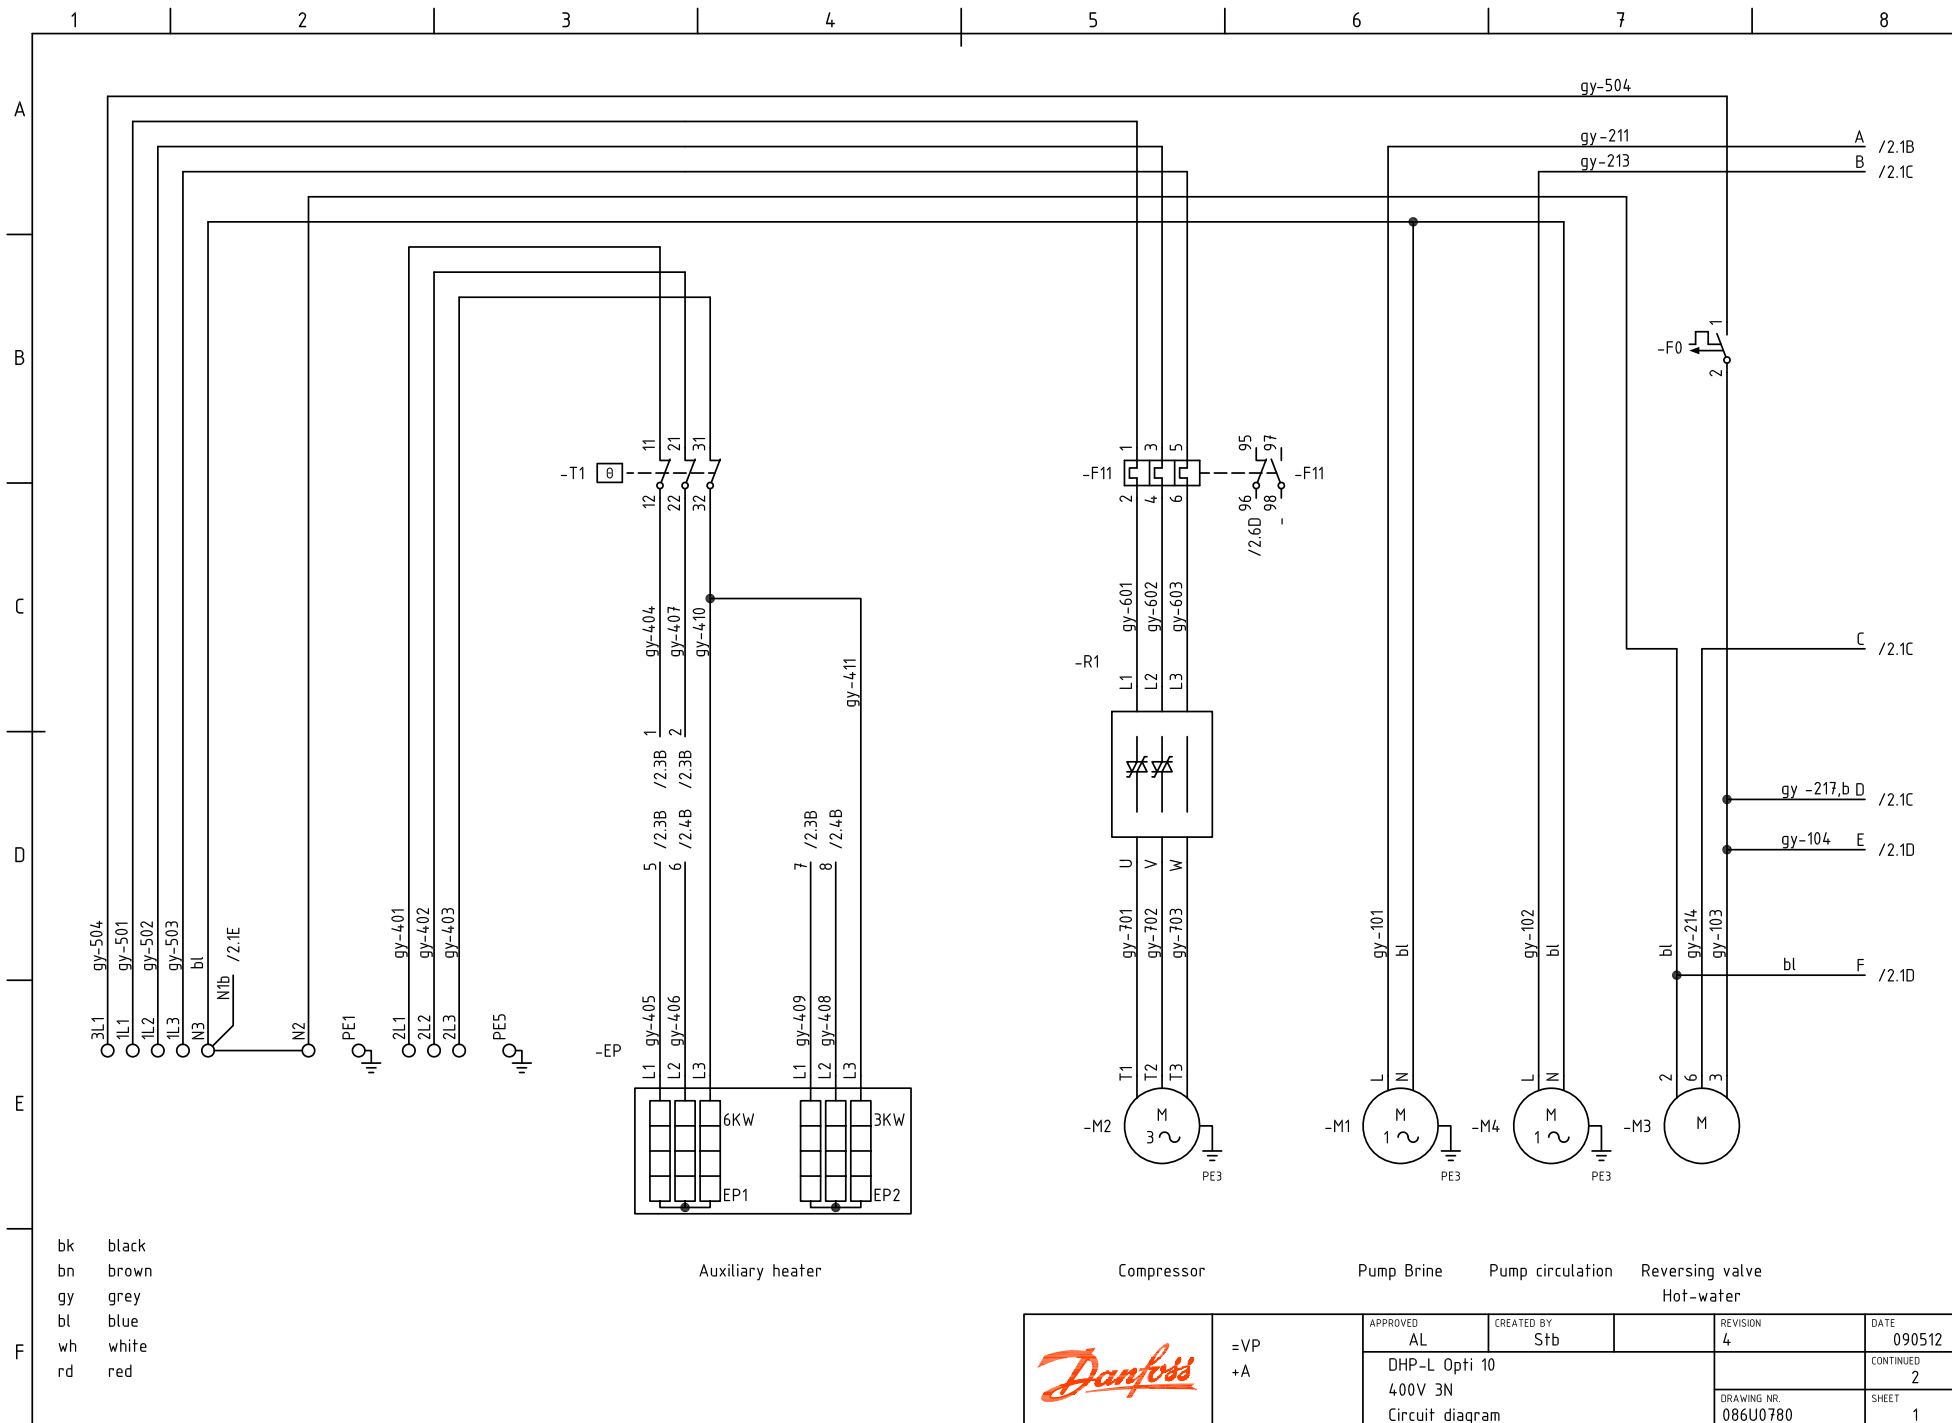


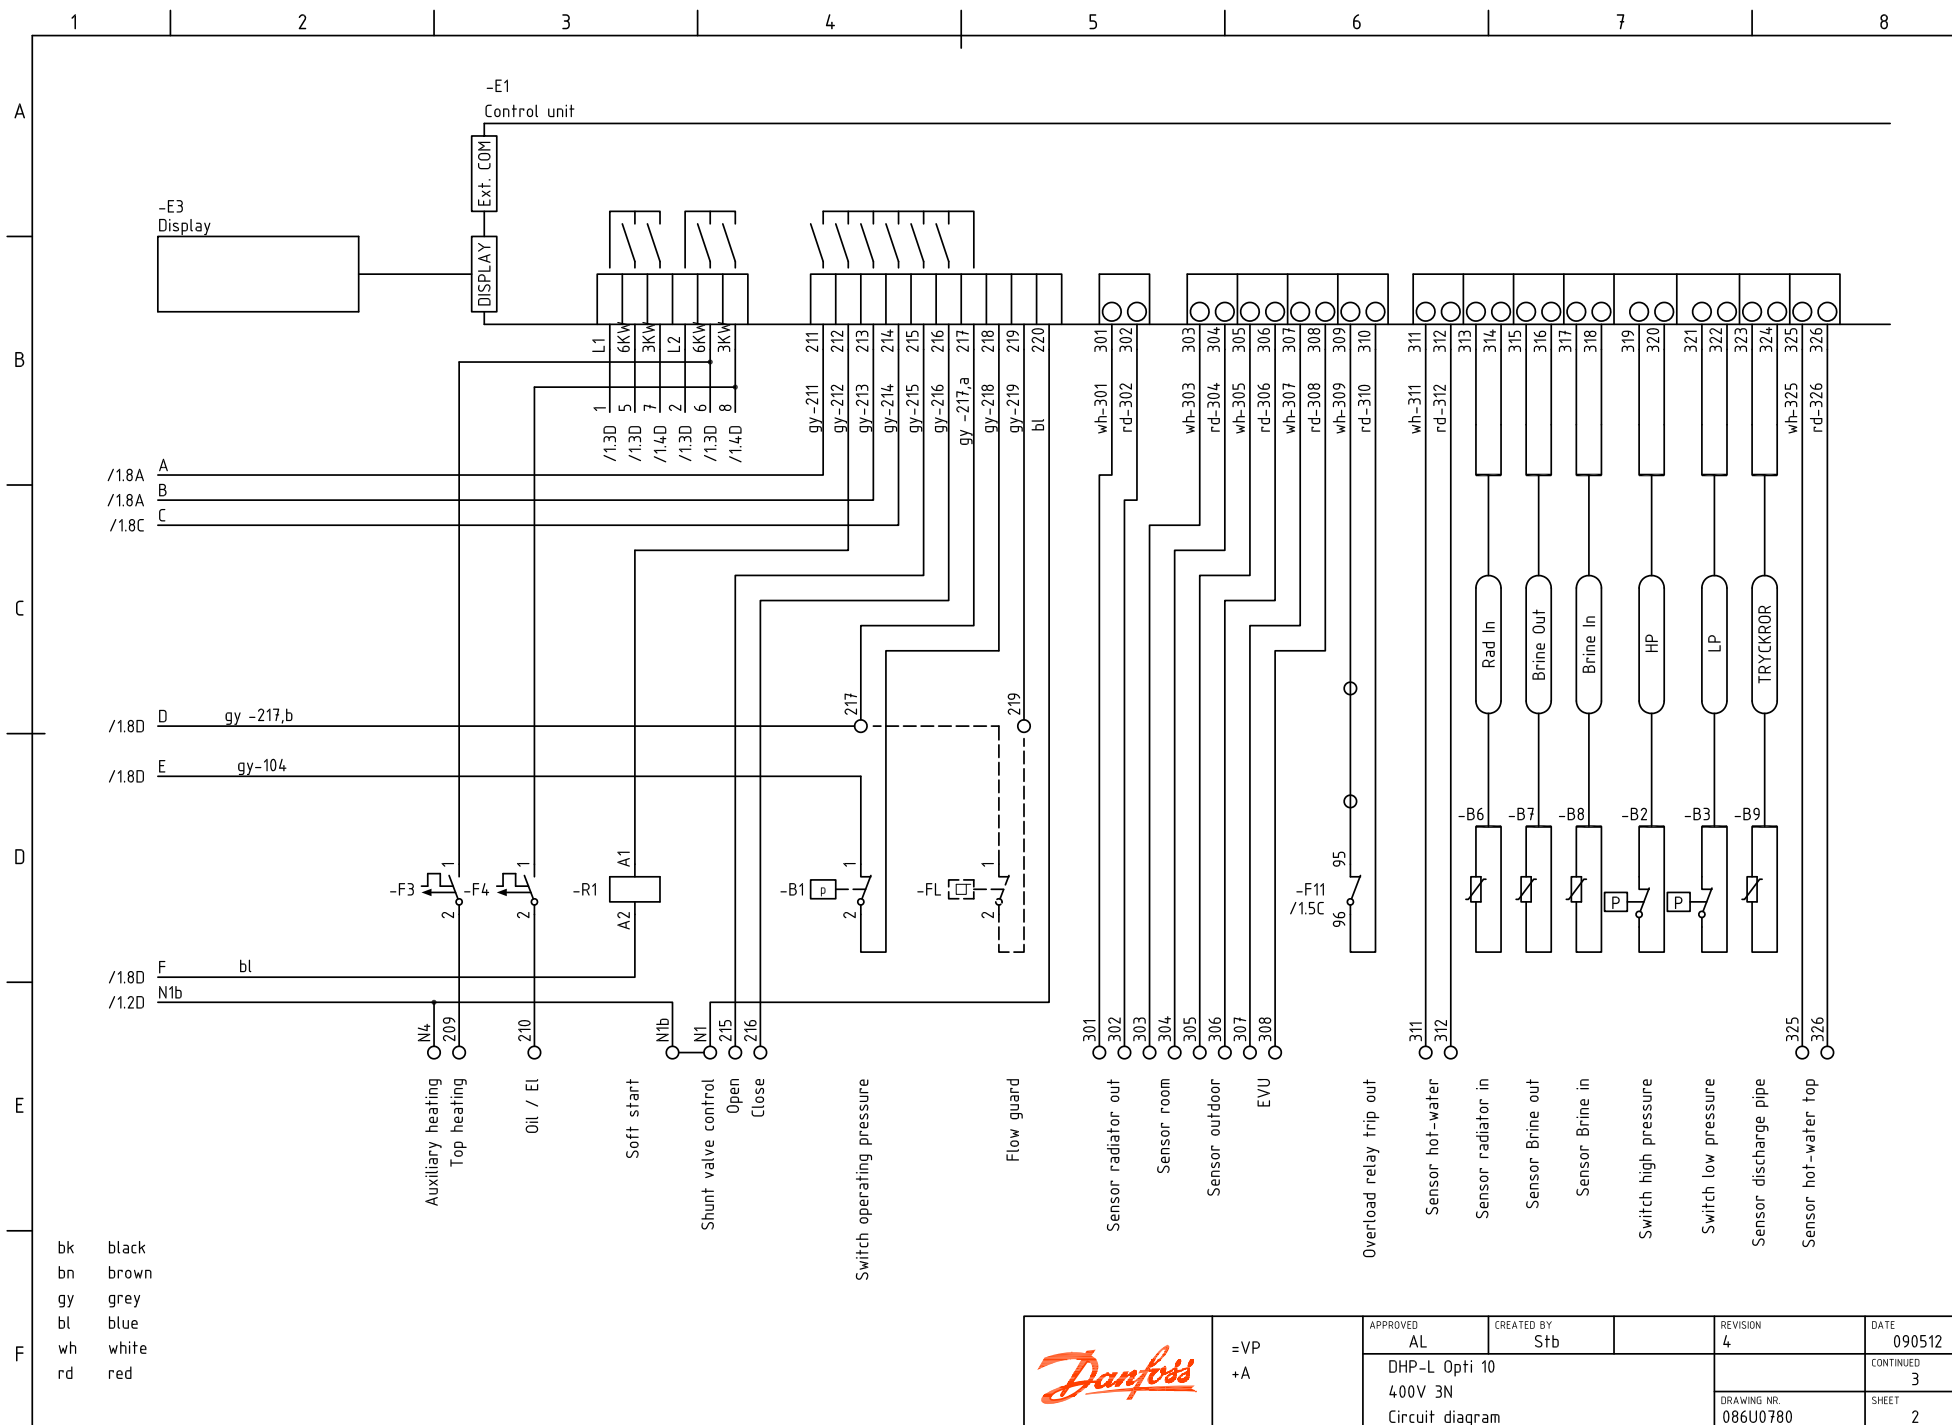


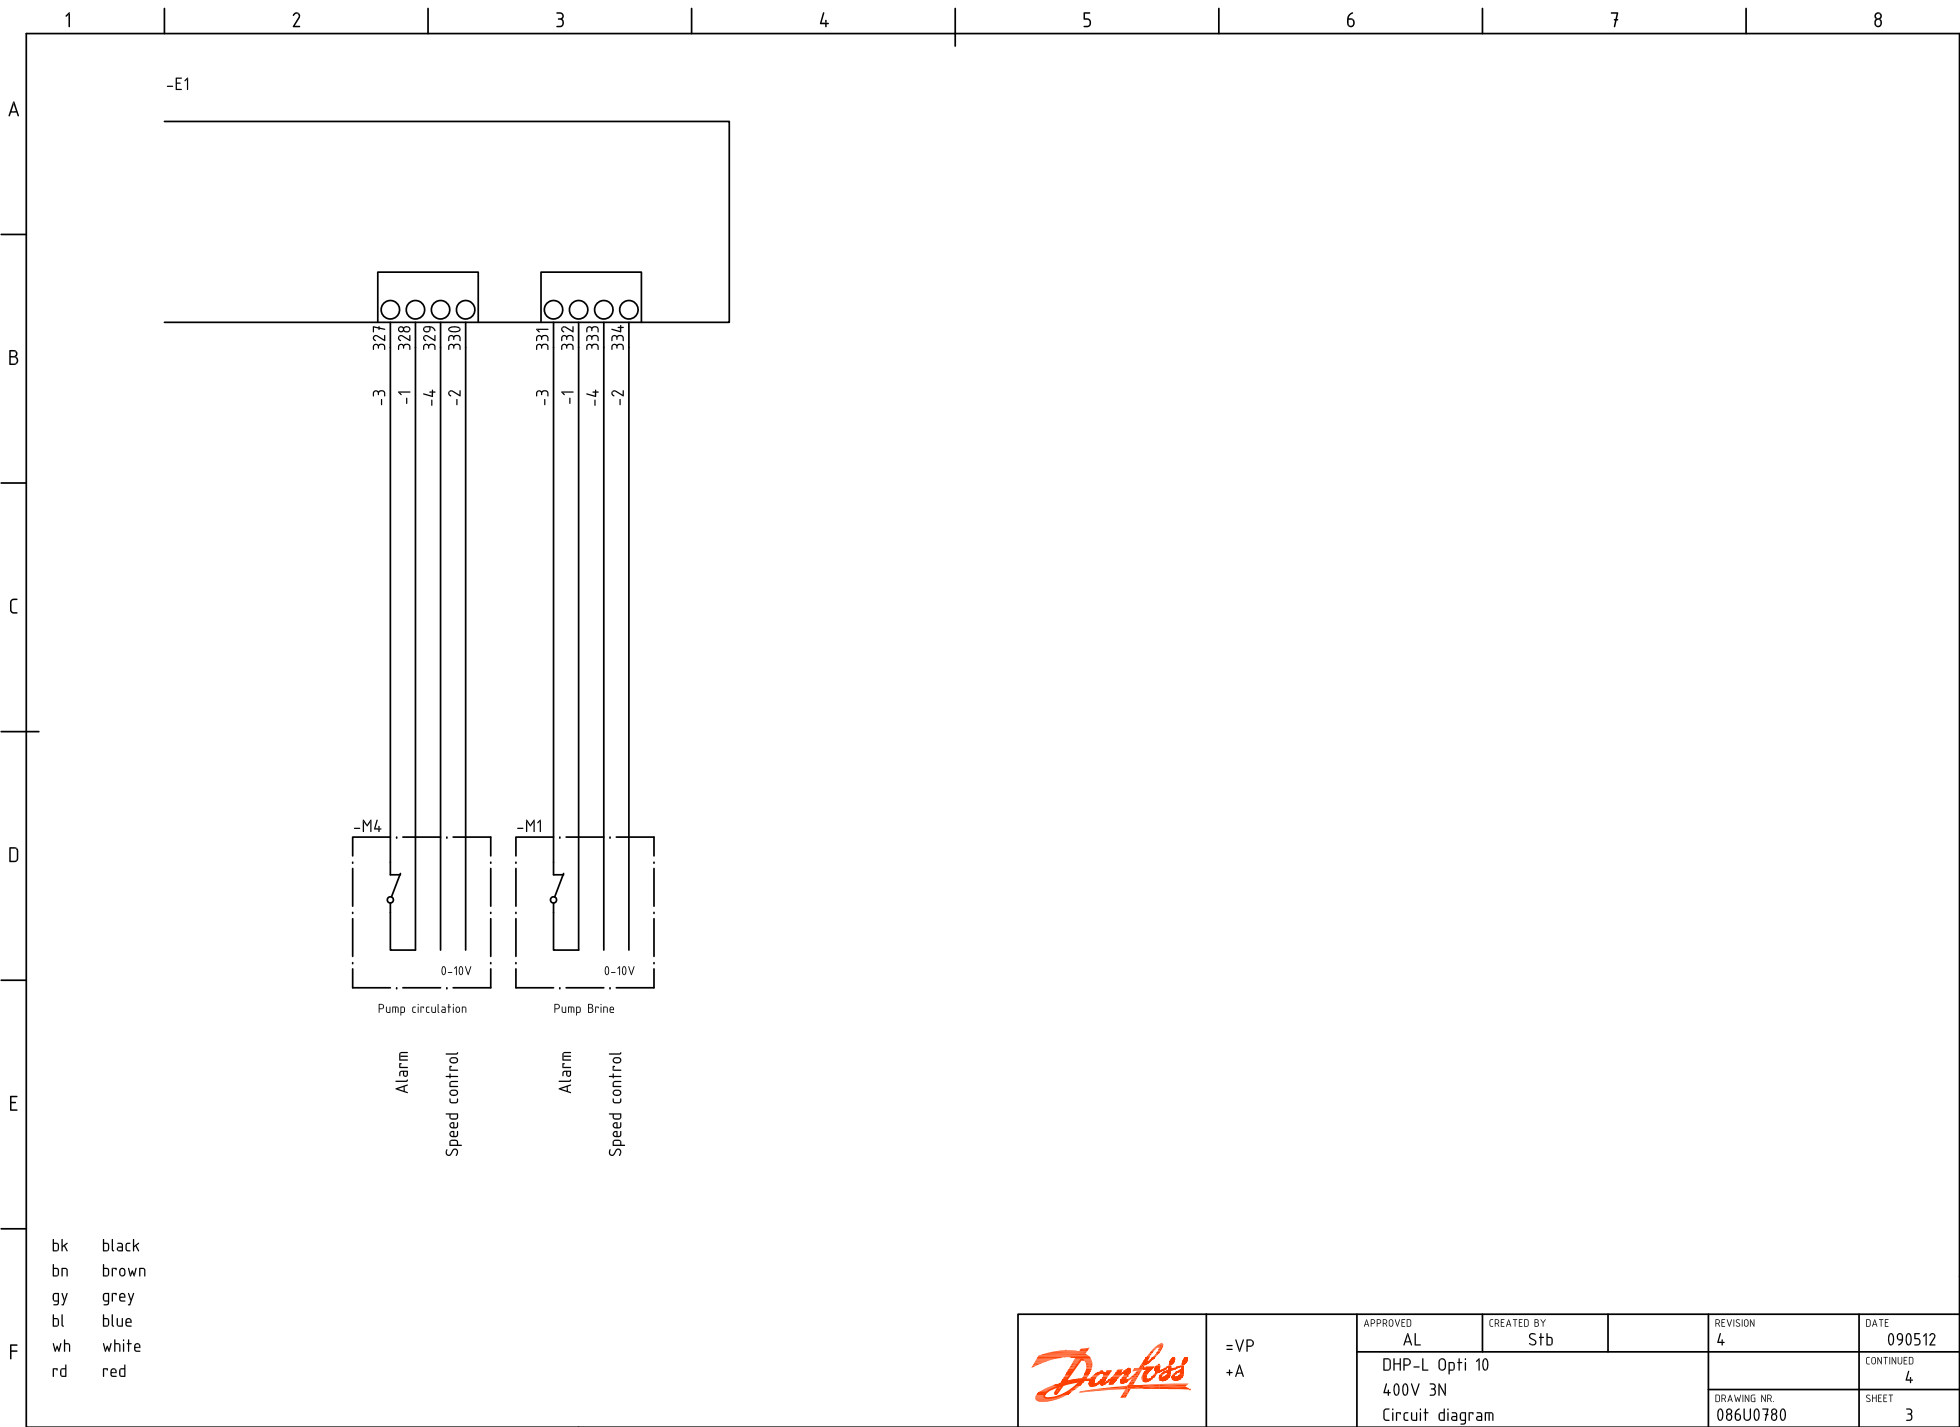


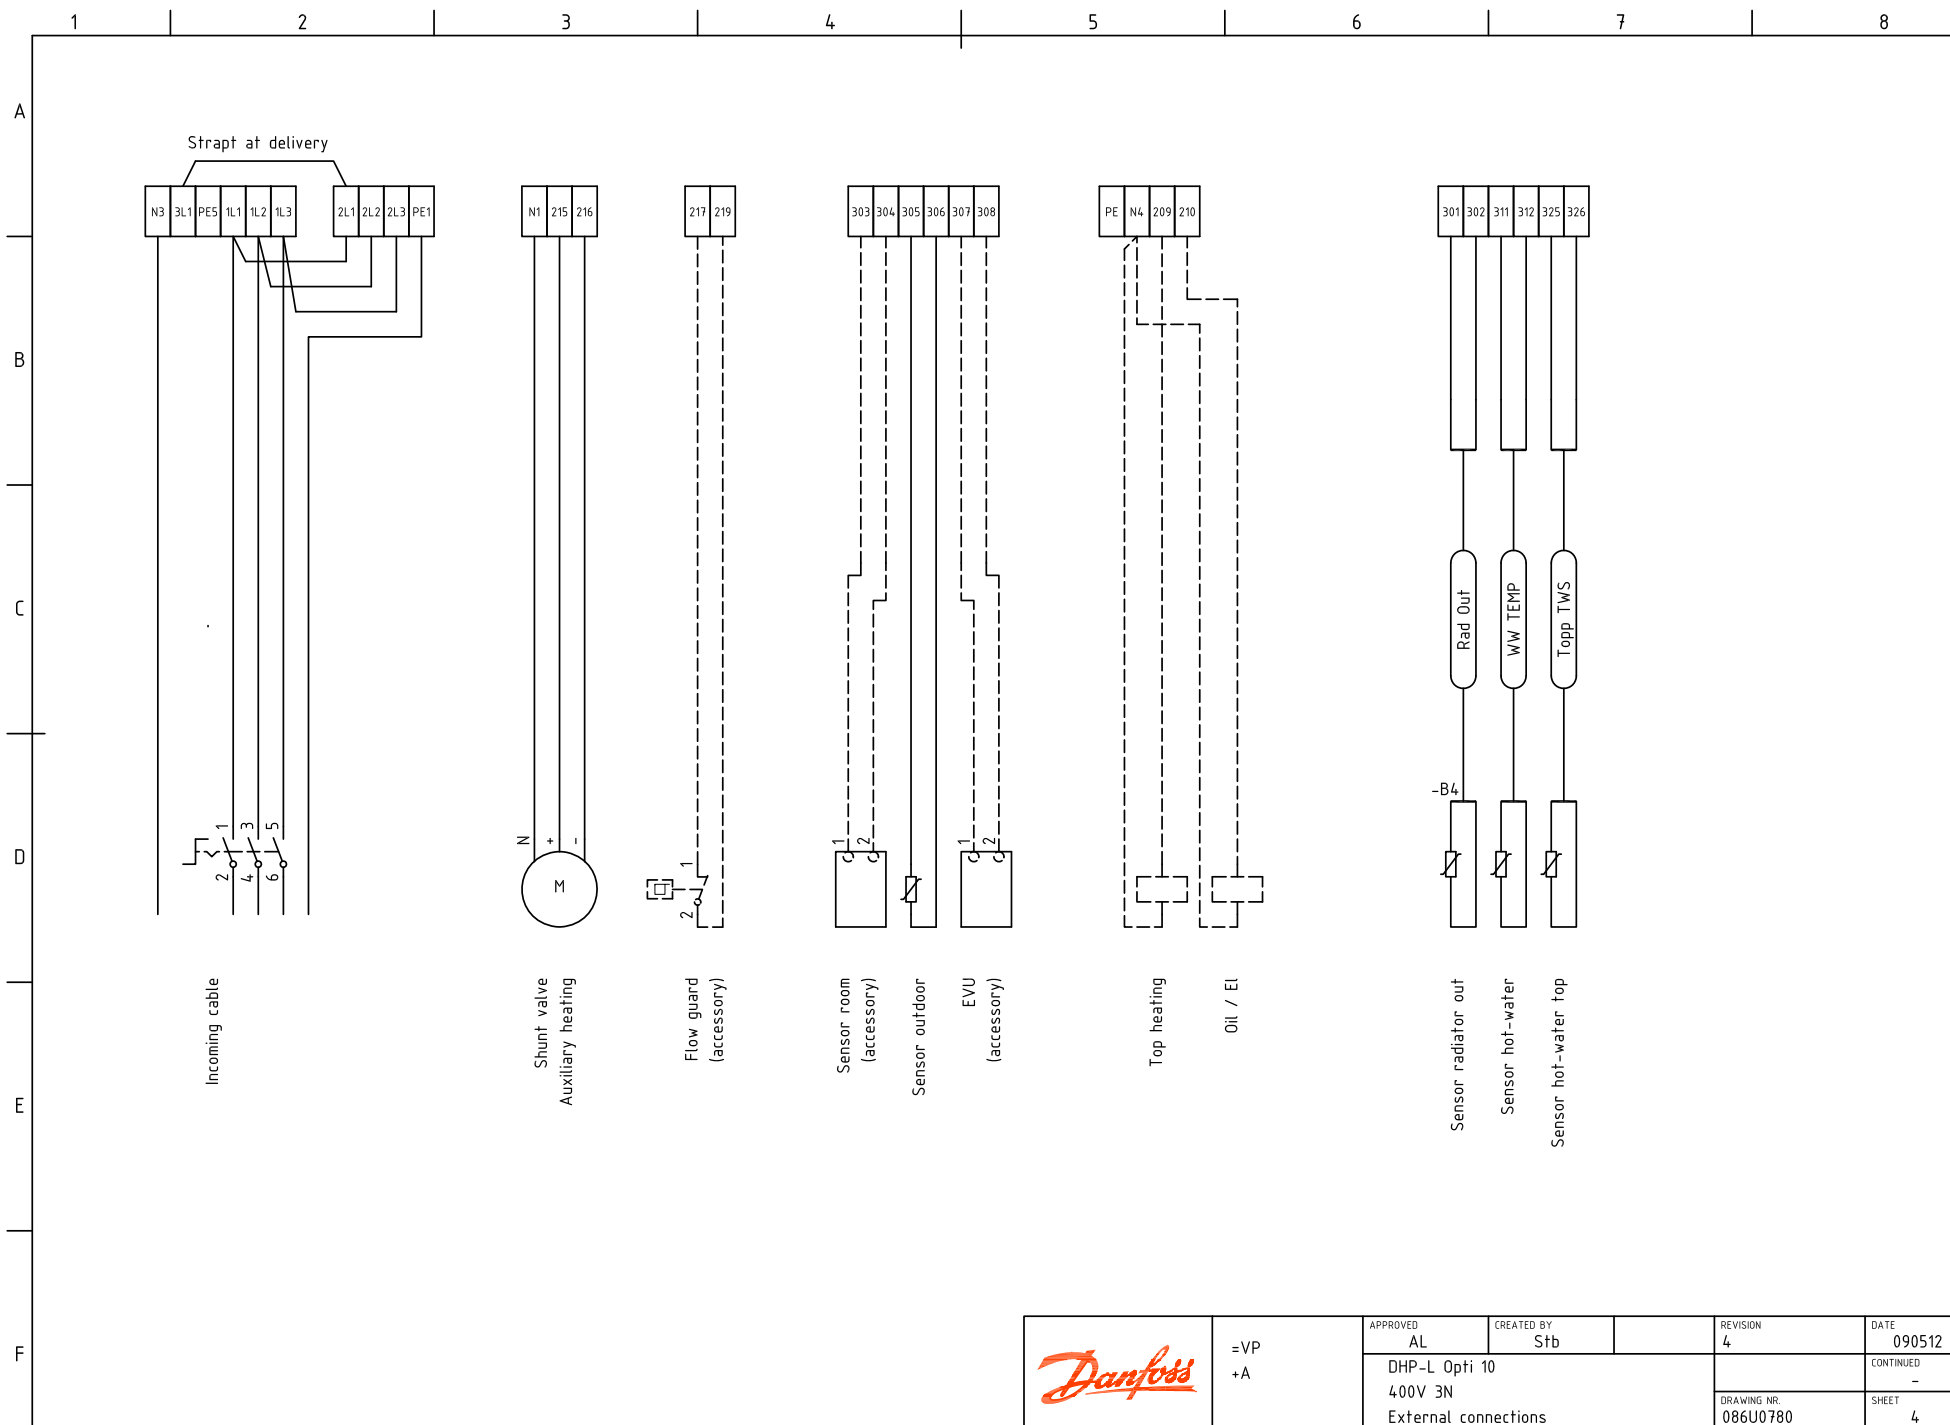

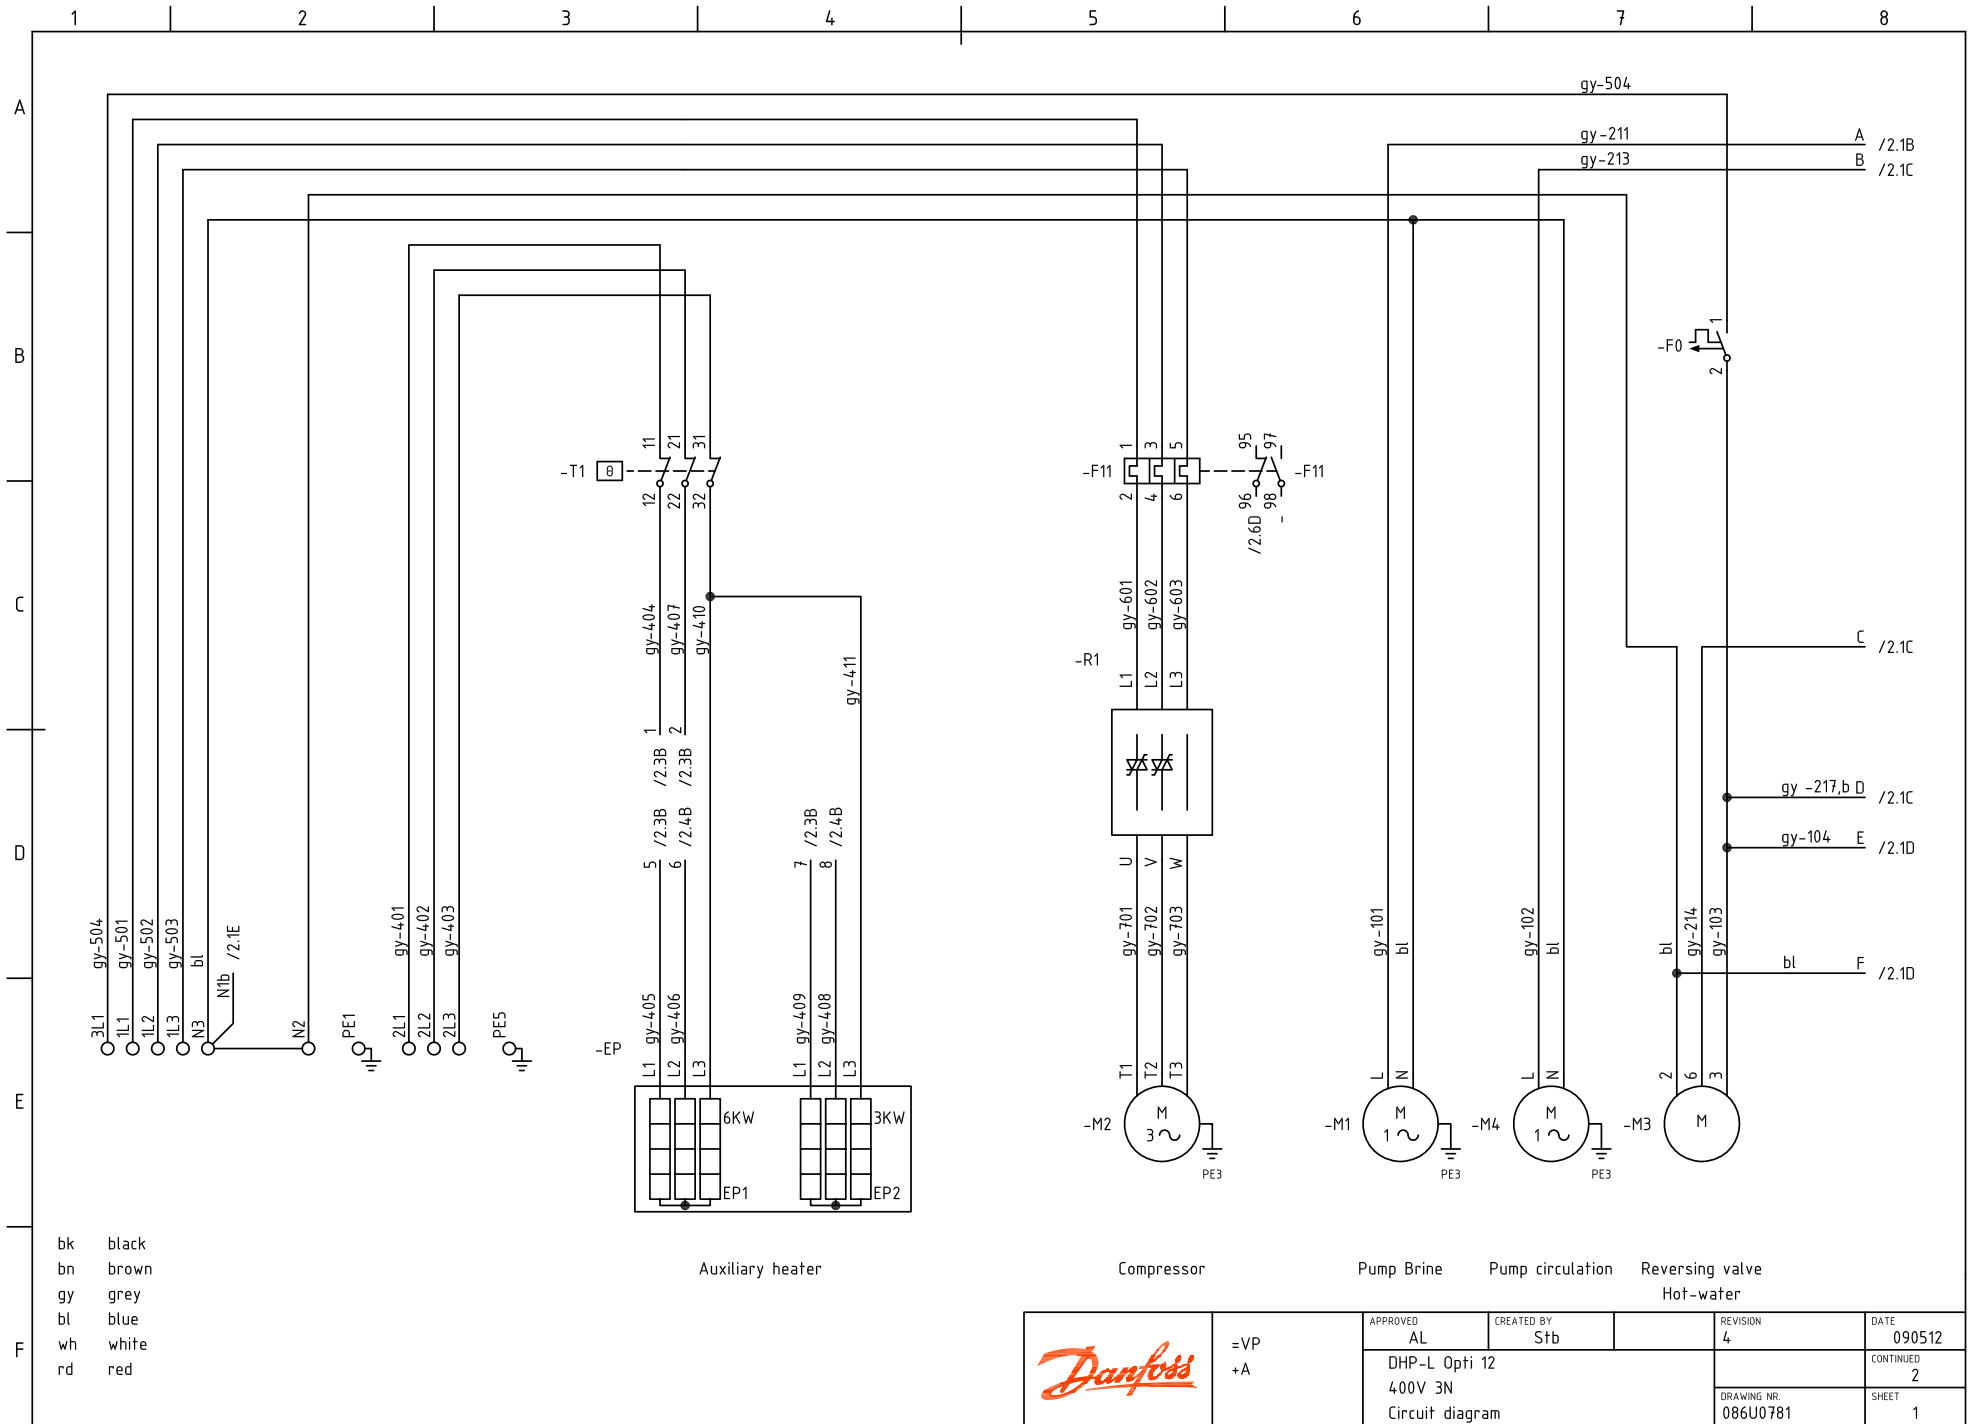
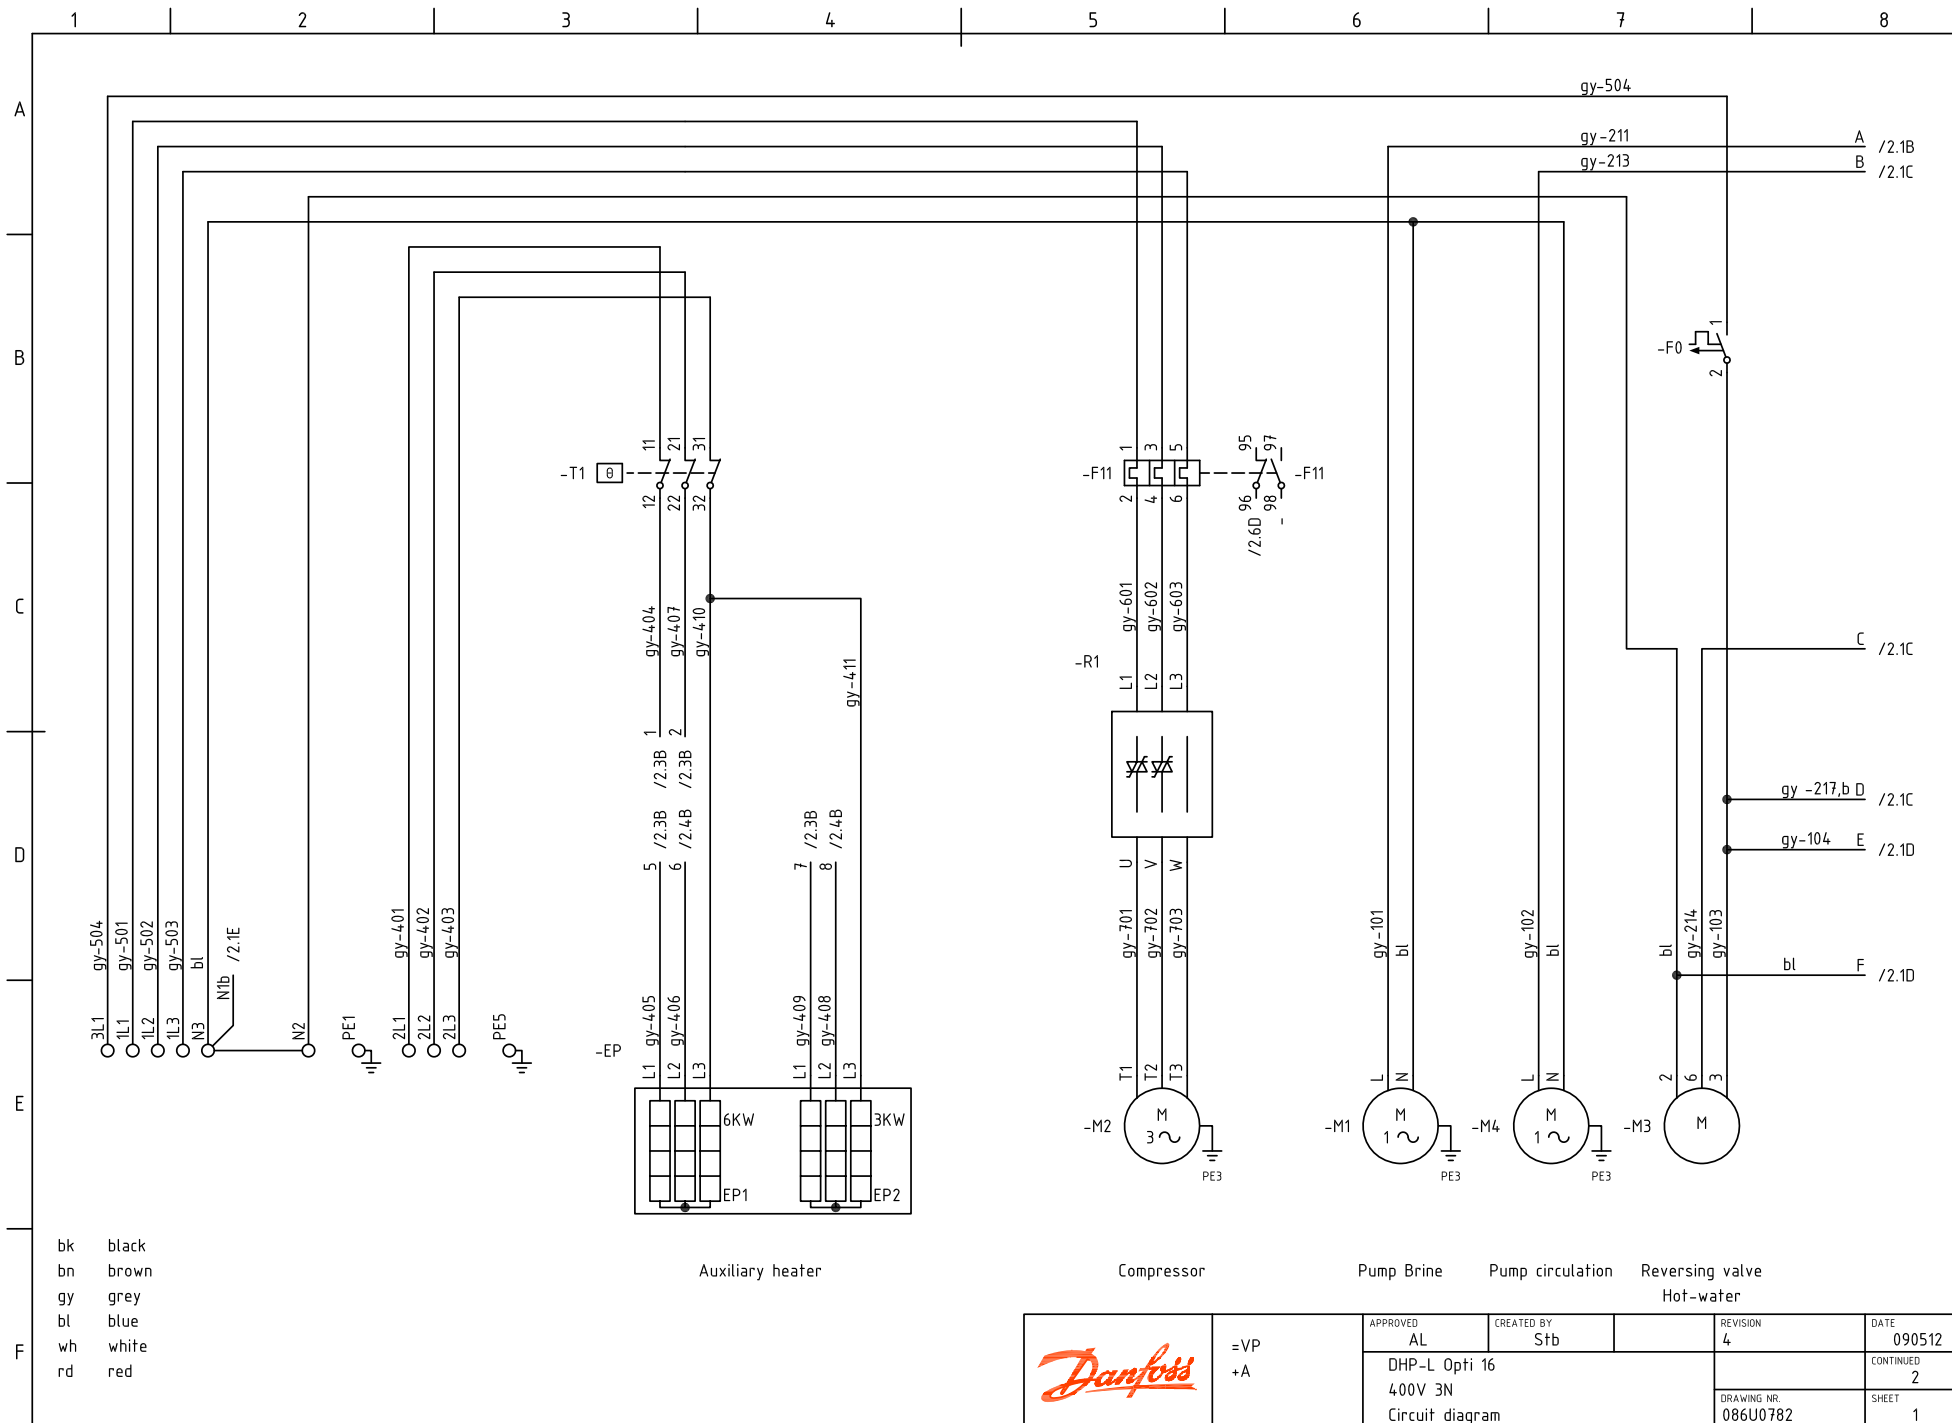


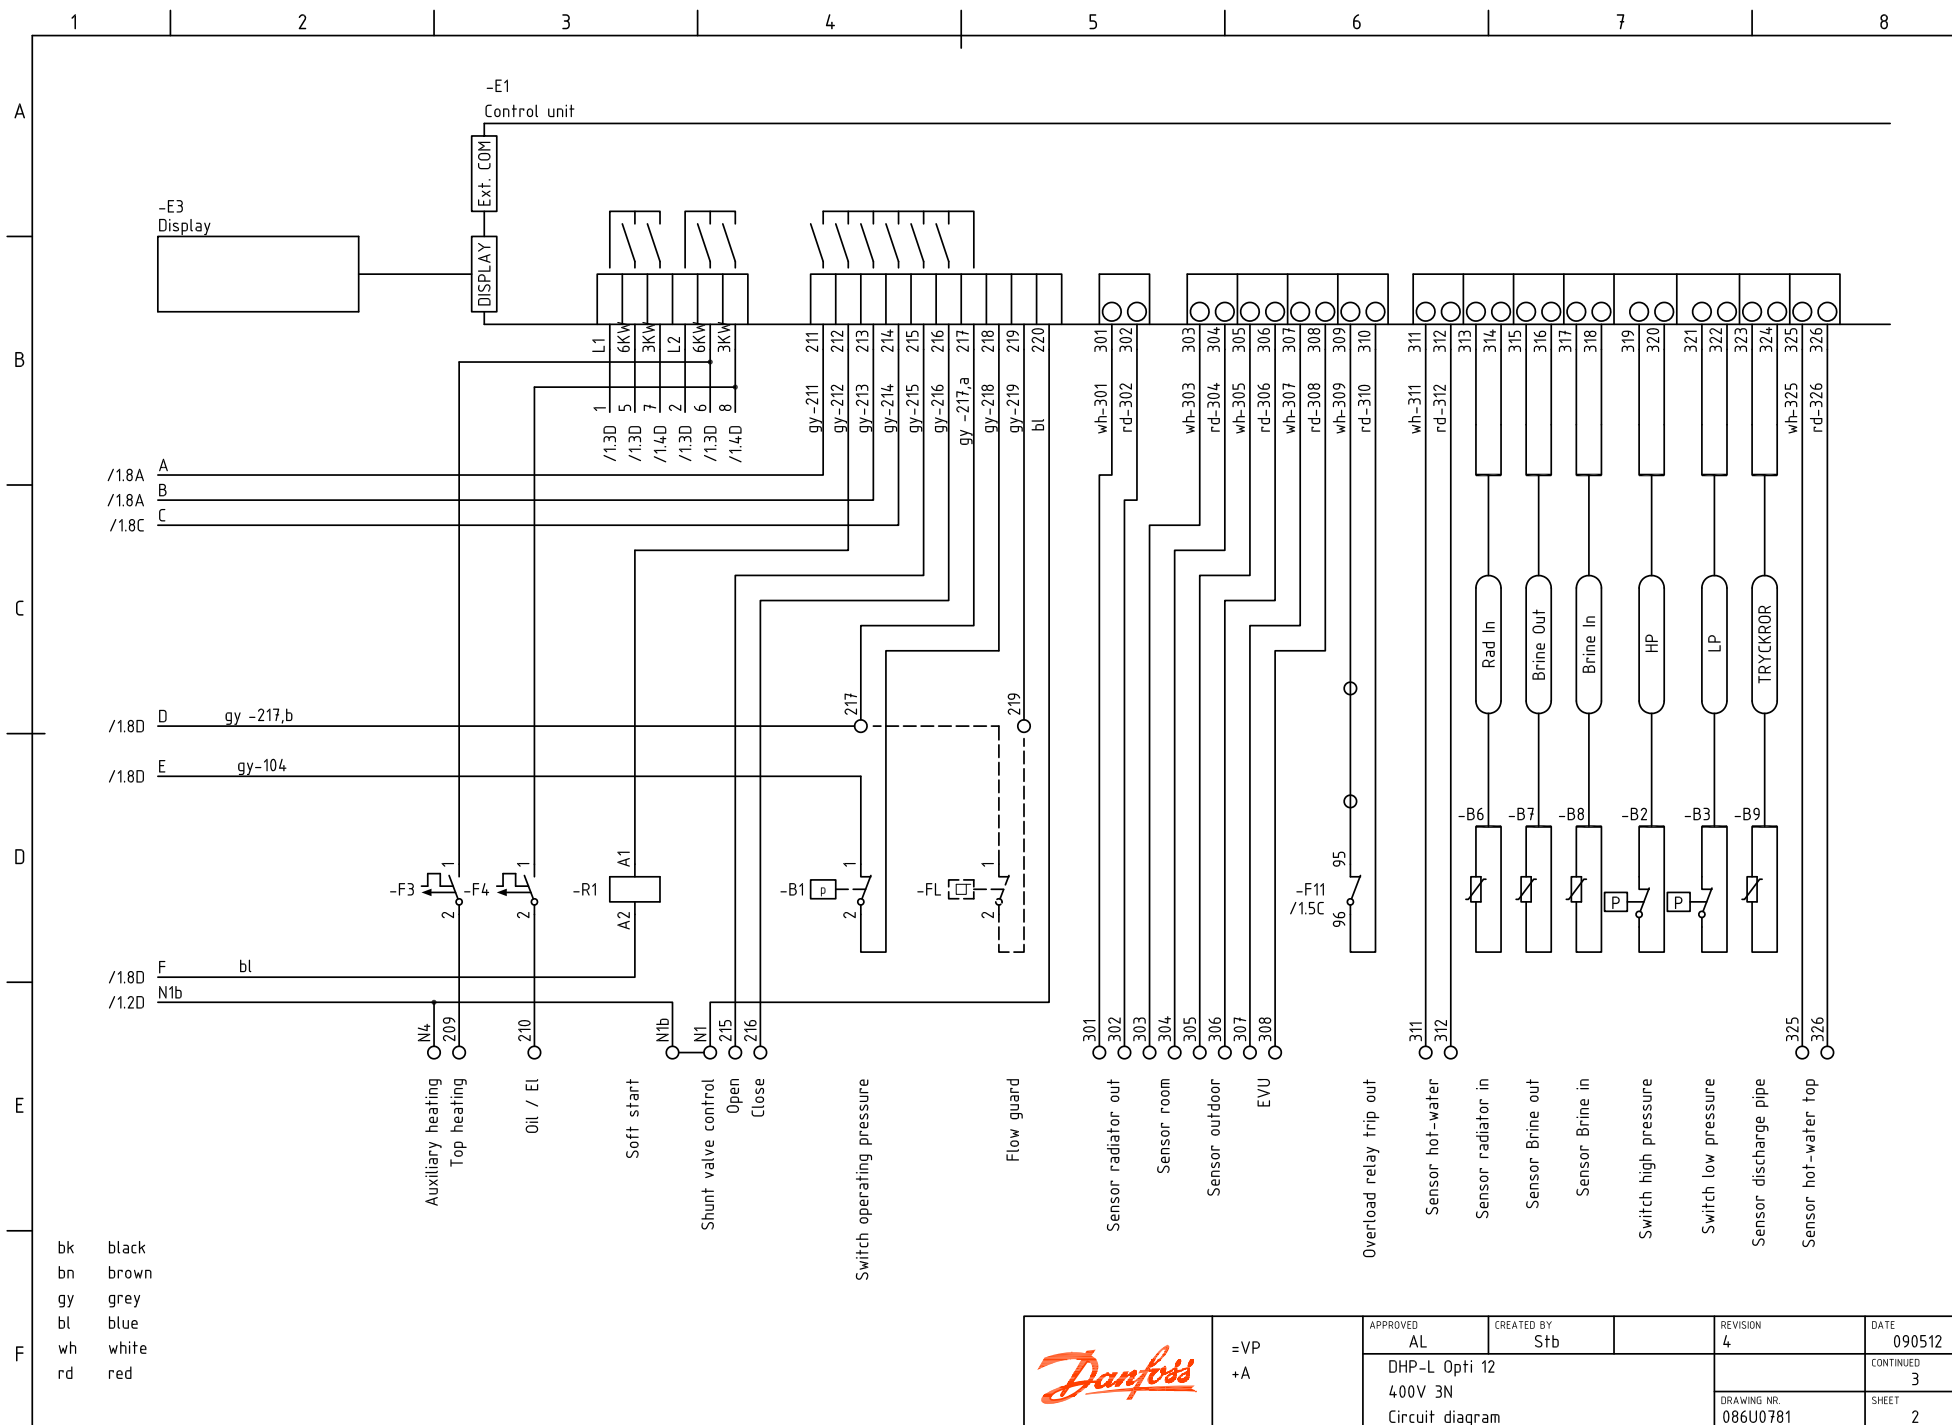


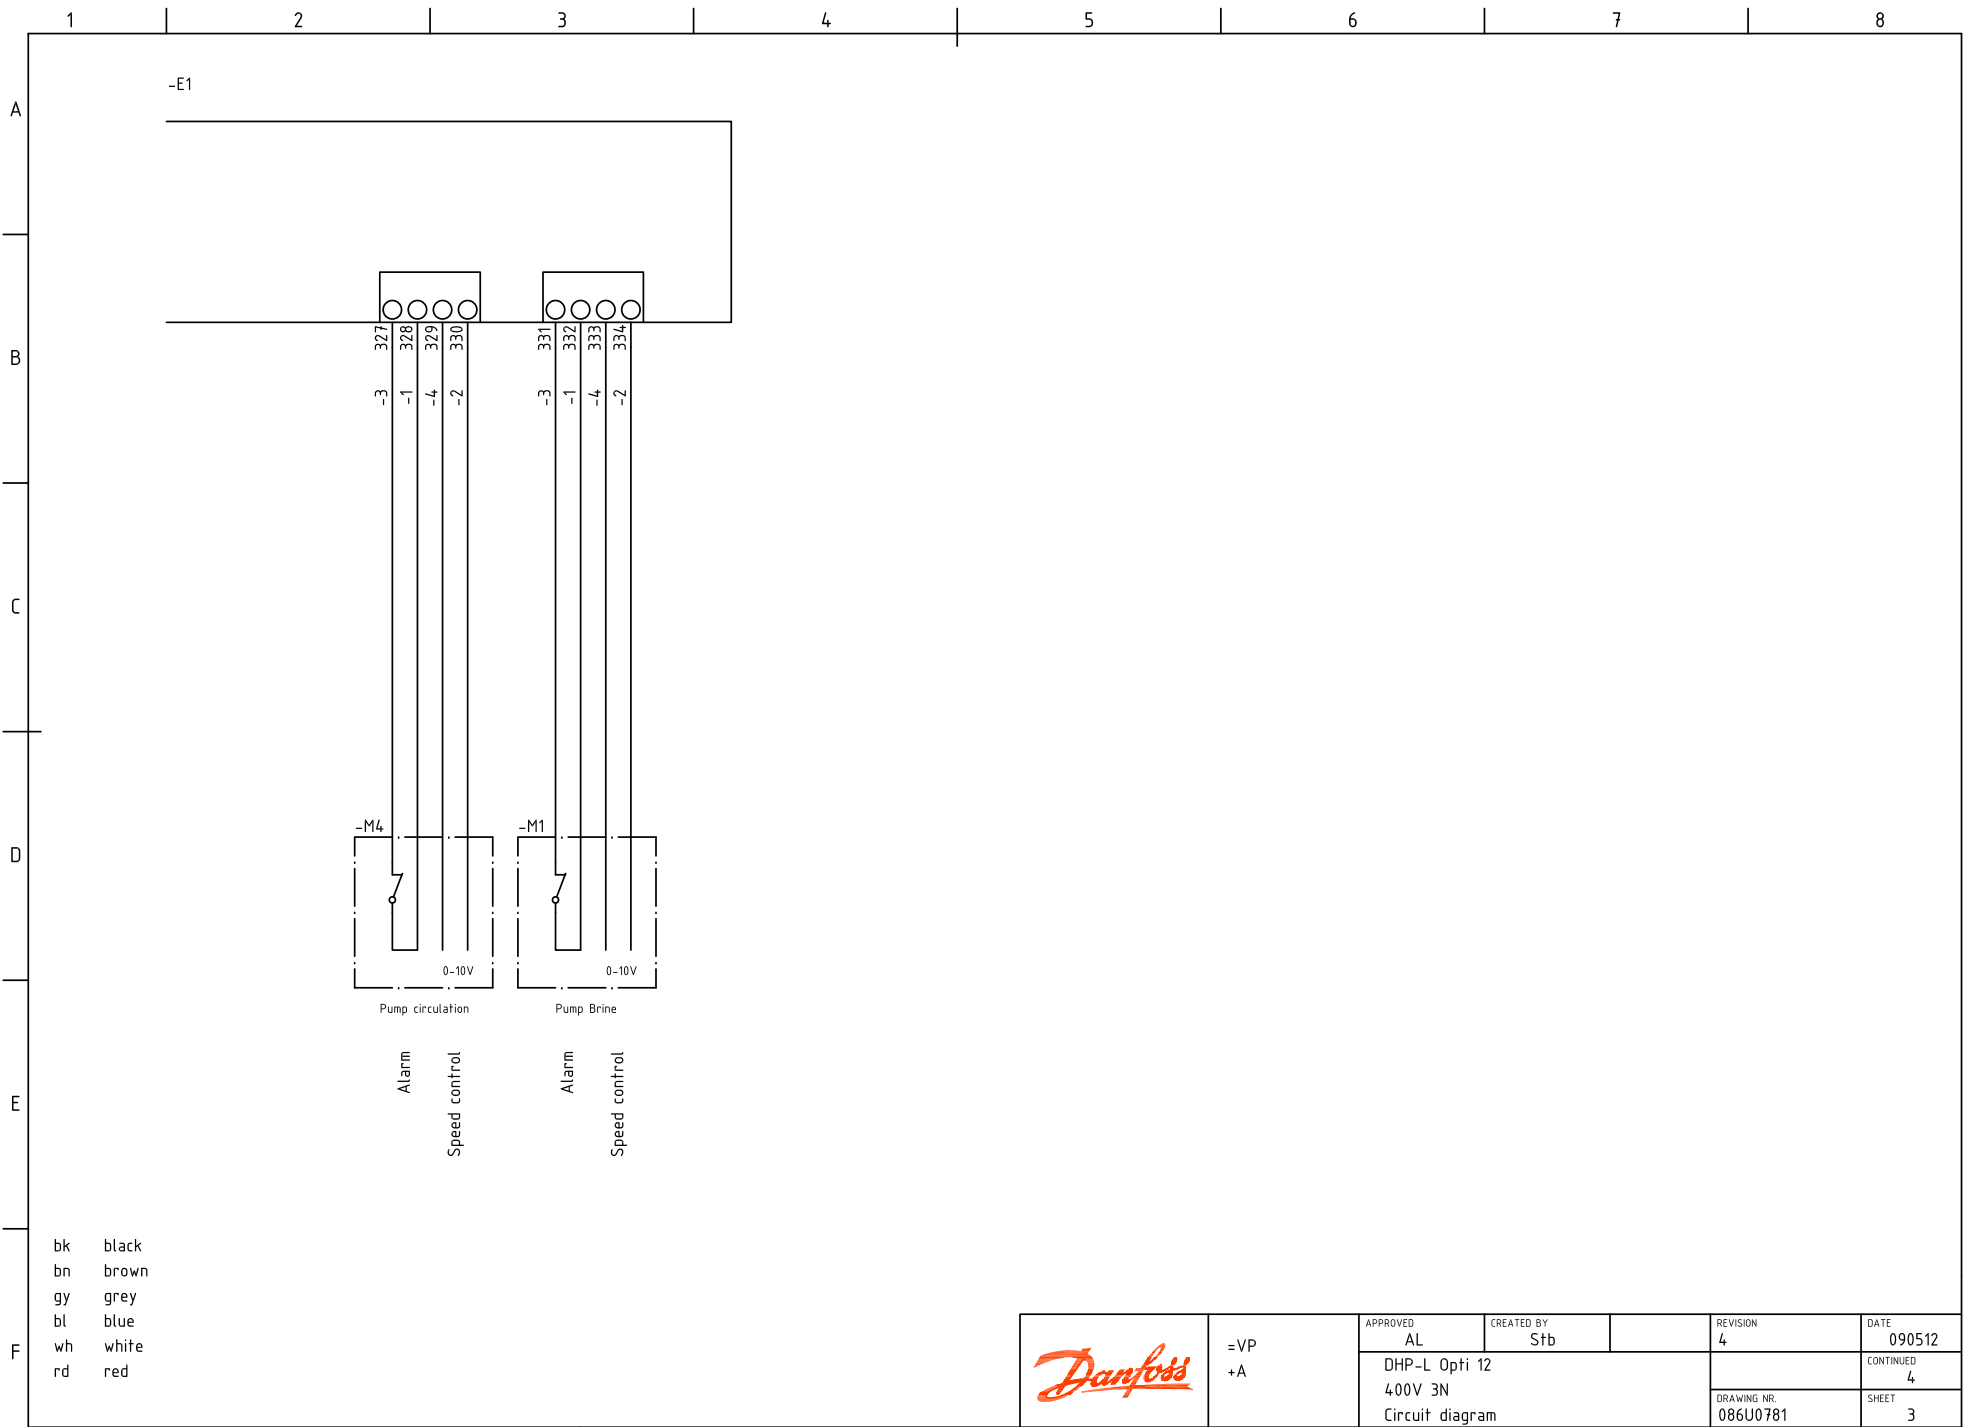


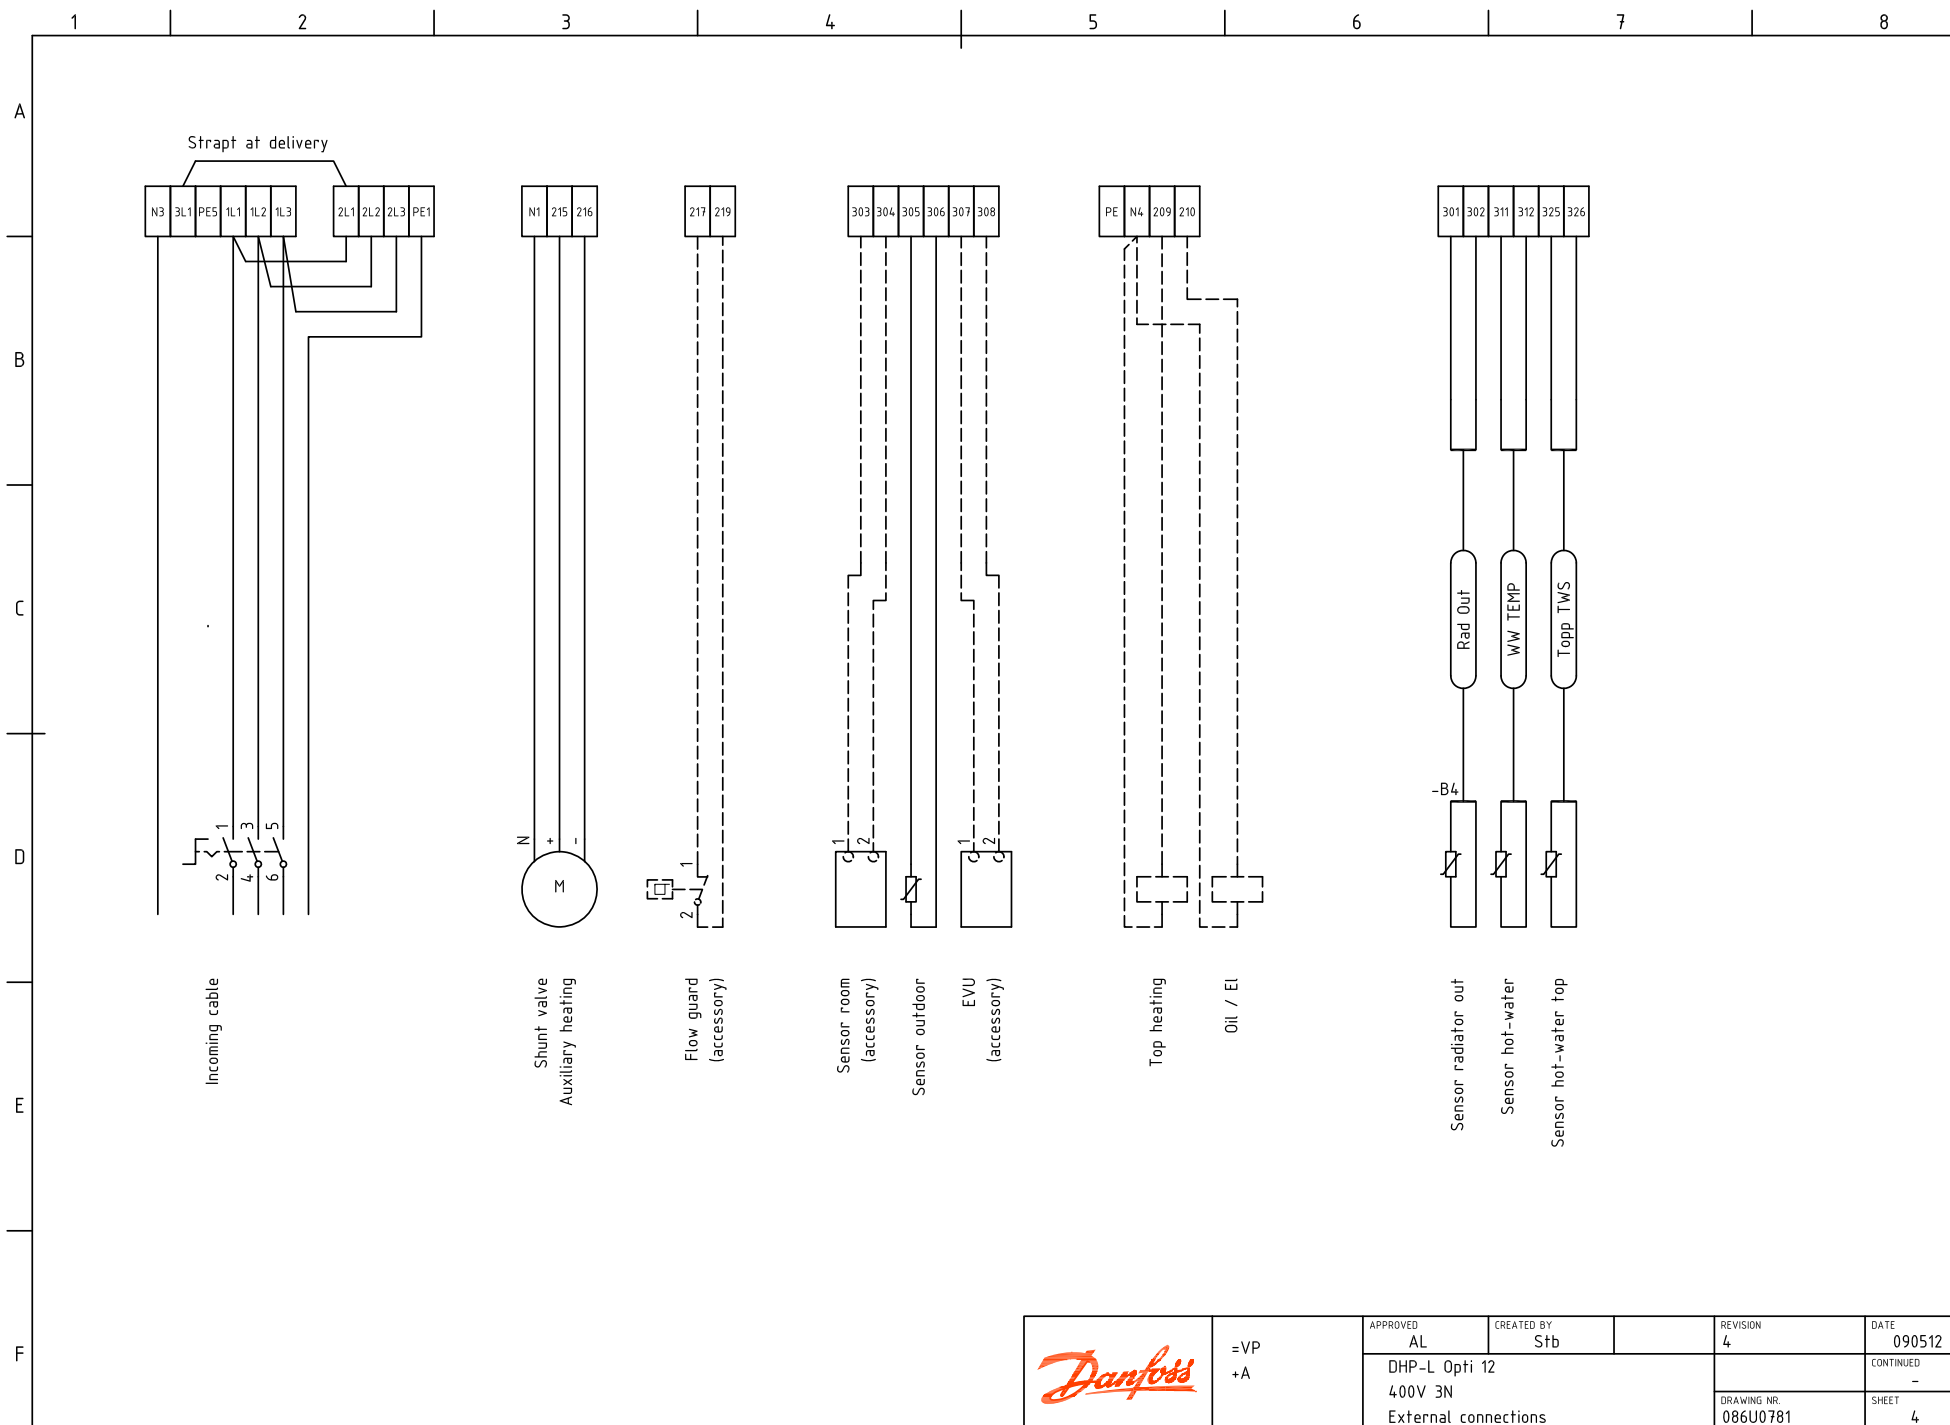


	=VP +A	APPROVED AL	CREATED BY Stb	REVISION 4	DATE 090512
		DHP-L Opti 12 400V 3N External connections			CONTINUED -
					SHEET 4



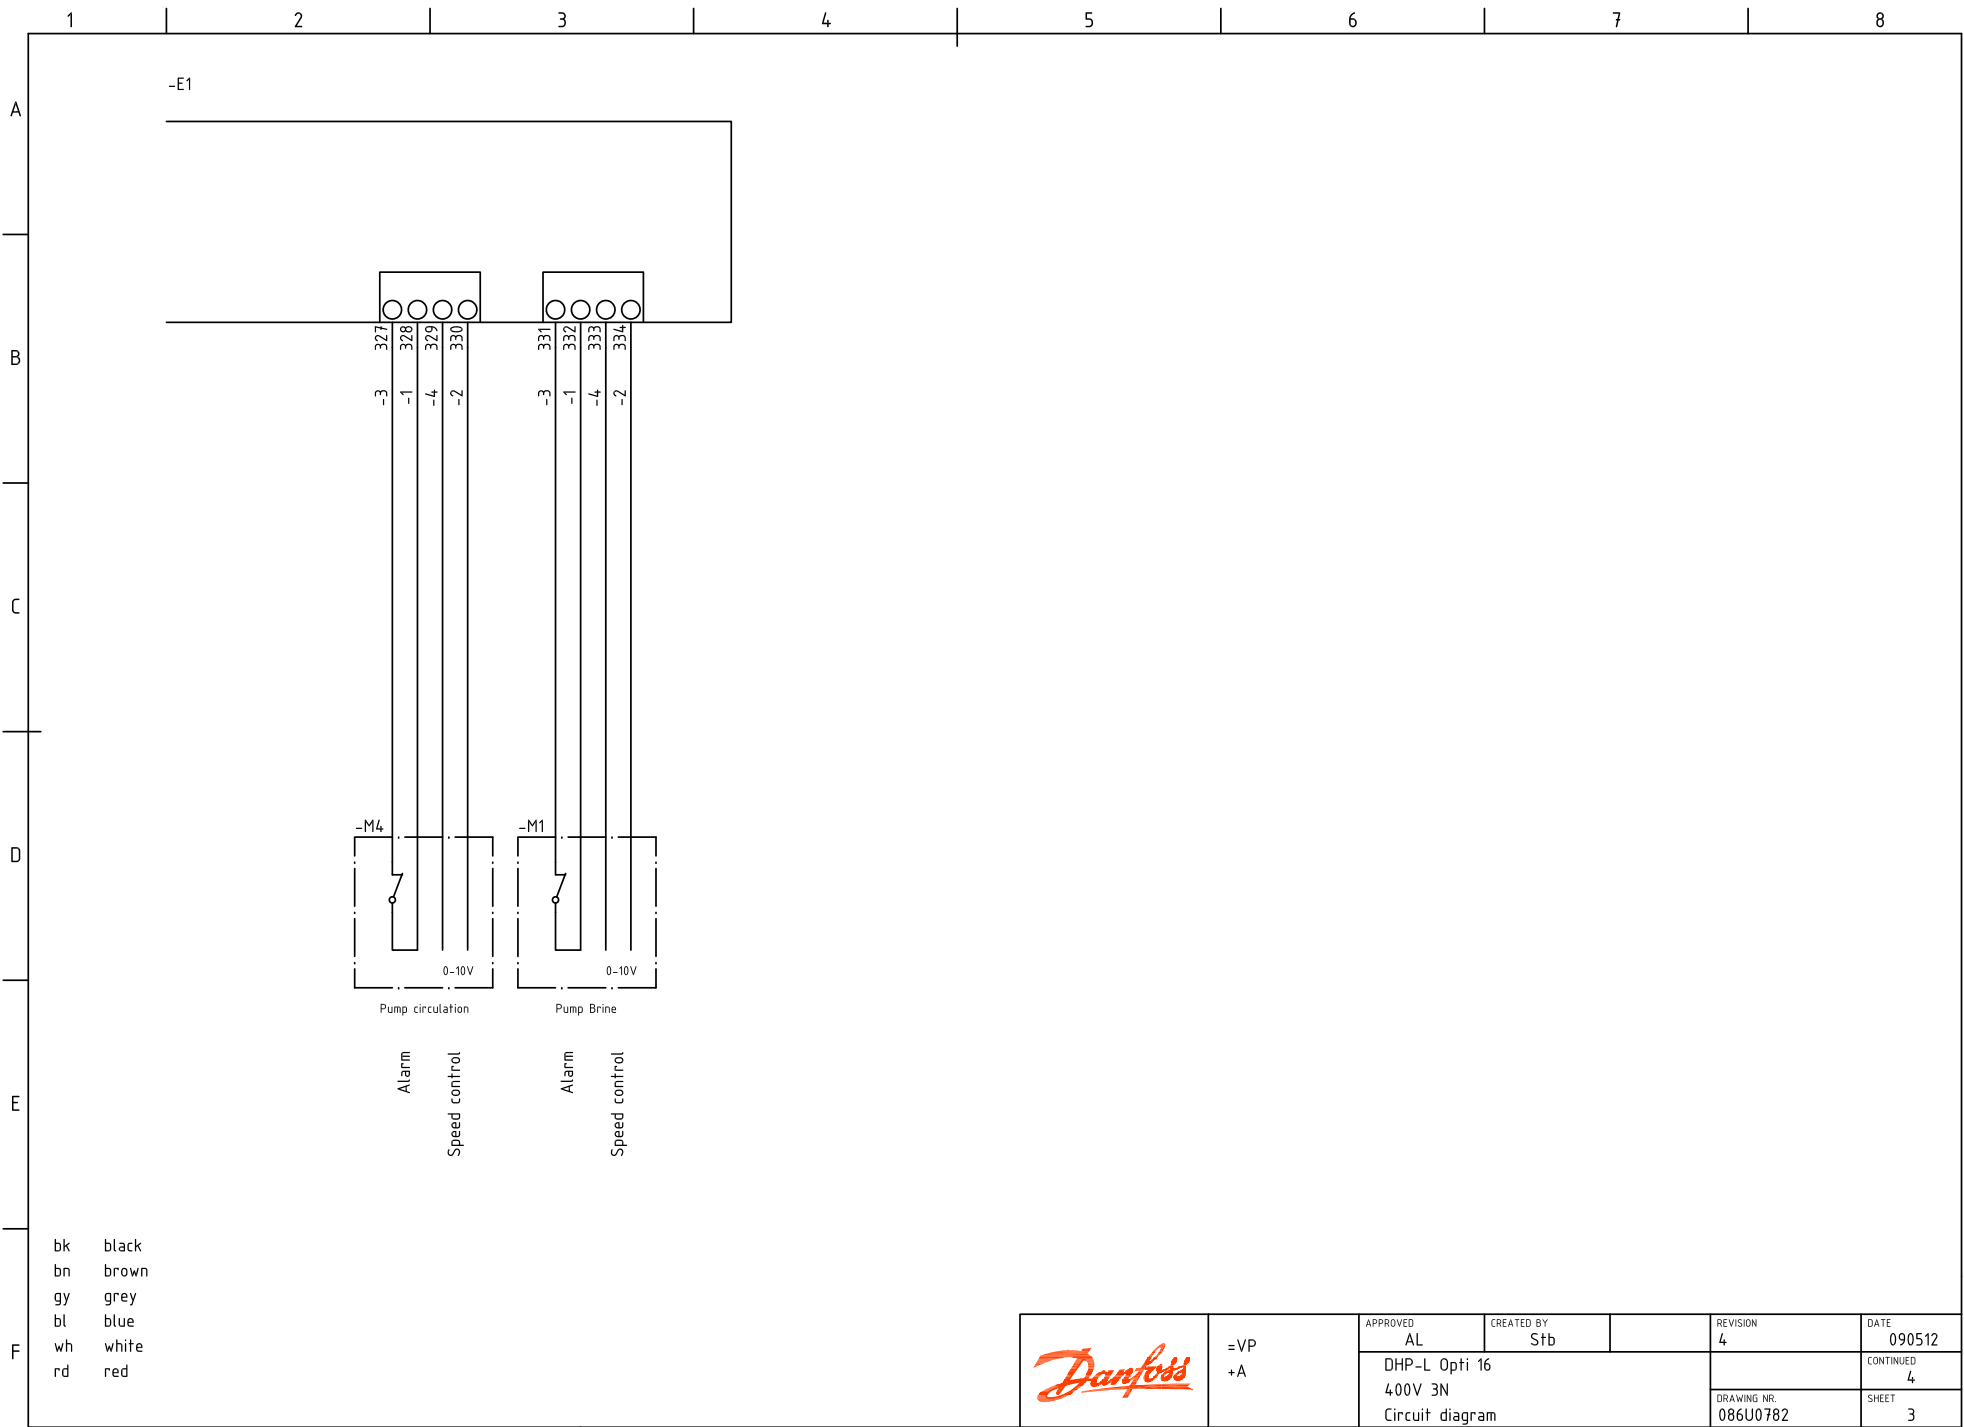

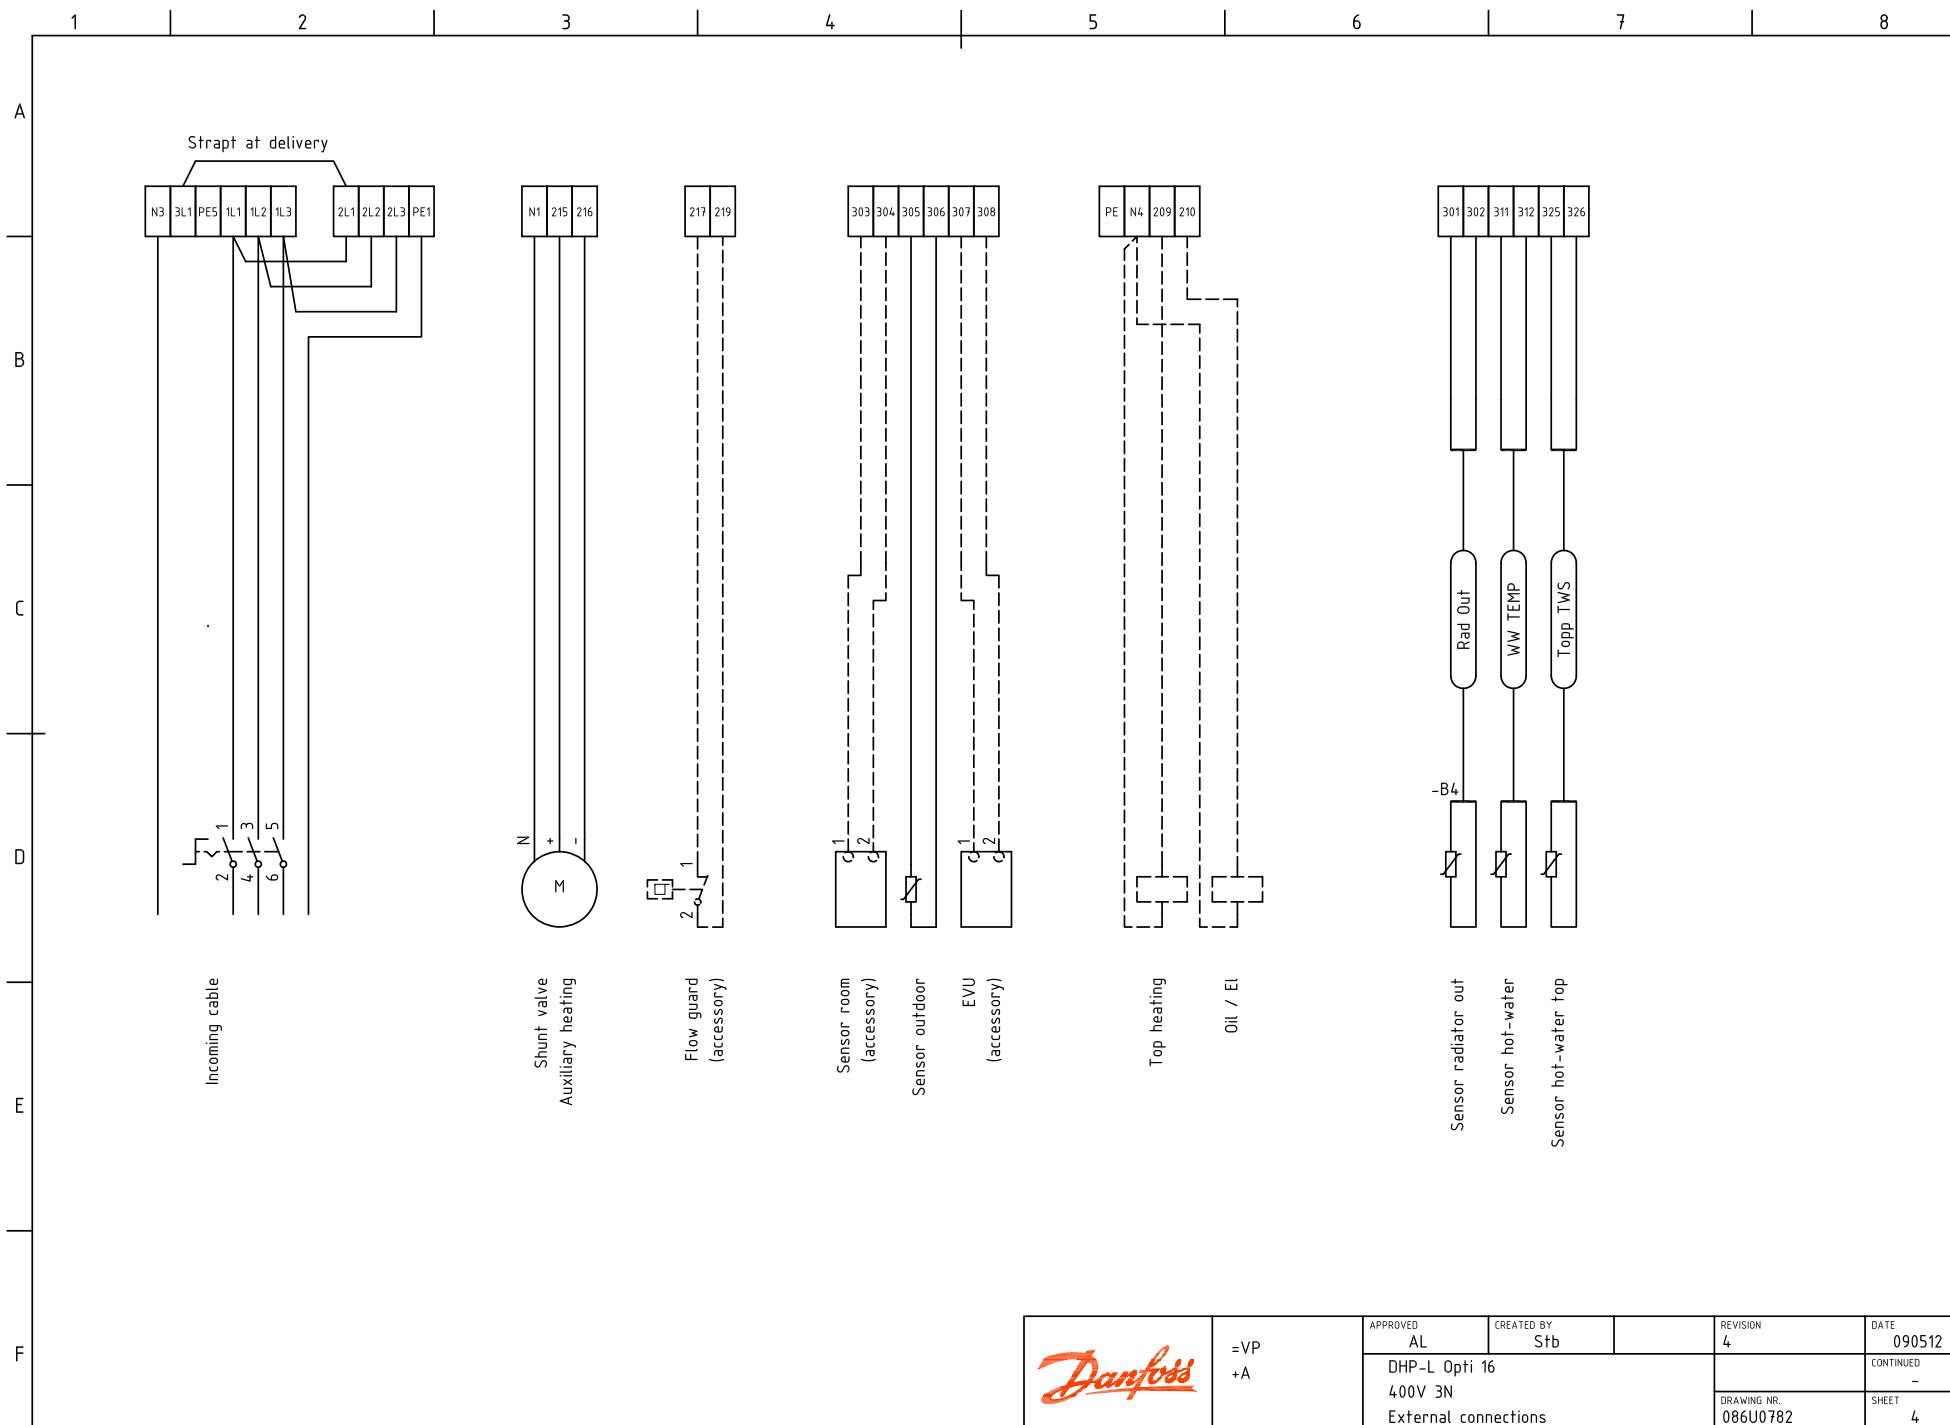

	=VP +A	APPROVED AL	CREATED BY Stb	REVISION 4	DATE 090512
		DHP-L Opti 16 400V 3N External connections			CONTINUED -
					SHEET 4

**If these instructions are not followed during installation,
operation and maintenance, the obligations of Danfoss
under the warranty regulations are no longer binding.**



**Danfoss A/S
www.danfoss.com**